

8DL Smart Gate Drawing List Rev 19 - FAA Approved	3
8-II Rev 12	9
8-0-0-TAB REV6	20
8-0-1-000 Rev7	22
8-0-2-000 Rev5	23
8-0-3-000 Rev3	25
8-0-4-000 Rev4	28
8-0-5-000 Rev5	29
8-0-6-000 Rev4	39
8-0-6-001 Rev3	40
8-0-7-000 Rev5	41
8-1-1-000 Rev3	44
8-1-2-000 Rev3	47
8-1-4-000 Rev5	48
8-1-4-500 Rev2	50
8-1-7-000 Rev3	51
8-2-0-TAB Rev4	52
8-2-1-000 Rev4	55
8-2-1-007 Rev4	59
8-2-1-008 Rev4	60
8-2-2-006 Rev4	61
8-2-2-010 Rev3	62
8-2-3-TAB Rev4	63
8-7-0-TAB Rev3	64
8-7-1-000 Rev3	68
8-7-2-004 Rev3	71
8-7-2-005 Rev3	72
WEIGHT -8 SMART GATE WEIGHT AND BALANCE Rev 6	74
ELECTRICAL - 8 Smart Gate Electrical Load REV 3	75
ICA - 8 Smart Gate Rev 11	76

FMS - 8 Smart Gate Flight Manual Supplement Rev 5	89
GROUND TEST-8 Rev 2	96

DRAWING LIST FOR POWER GATE INSTALLATION				Document Number	REVISION LEVEL
ORIGINATOR				8DL	Rev 19
JRR, TRR				ISSUE DATE	APPROVED BY
				May 4, 2018	TRR
REVISION HISTORY	REVISION DATE	REVISED BY	APPROVED BY	DESCRIPTION OF REVISION	
A	05/04/2018	JRR	TRR	DOCUMENT CREATED	
B	03/30/2019	JRR	JRR	CHANGE CONTROL BOX TO CONTROLLER	
C	06/21/2019	JRR	JRR	UPDATE DRAWING	
D	7/1/2019	JRR	JRR	UPDATE DRAWING	
E	9/27/19	JRR	JRR	REWRITE	
F	11/15/19	TRR	TRR	ADDED FLAG TO MANUFACTURING DRAWING IF INCLUDED IN INSTALL DATA PACKAGE	
G	12/4/2019	JRR	JRR	REWRITE; INSTALL INSTRUCTIONS, ICA,ELECTRICAL, WEIGHT, ADD GROUND TEST	
H	3/2/2020	TRR	JRR	UPDATED 8-1-7-006, ICA, AND FMS	
I	3/14/2020	JRR	JRR	STRUCTURES DRAWINGS RE-FORMATTED	
J	3/26/2020	TRR	TRR	FIXED MINOR ERRORS IN NAMES	
K	5/15/2020	JRR	JRR	ADD MFG NUMBER TO AIRLINE & POWER UNIT	
L	5/24/2020	JRR	PJJ	INSTALL INSTRUCTIONS HOPPER VALVE WIRE	
M	10/7/2020	TRR	TRR	UPDATED FLIGHT MANUAL SUPPLEMENT TO REV D.	
N	10/21/2020	TRR	TRR	UPDATED DRAINGS FOR MAN. TOL. MARKED (+)	
O	1/28/2021	TRR	TRR	REMOVED (+) MARK, ADDED 7 ½ GATE DRAWINGS	
P	4/12/2021	TRR	TRR	ADDED LABEL INFO TO ICA	
Q	5/10/2021	TRR	TRR	CORRECTED ICA DATE	
R	6/15/2022	JRR	JRR	NEW REVISION OF 8-II INSTALLATION INSTRUCTIONS	
19	2/5/2025	TRR	TRR	COMPANY NAME &TITLE BLOCK UPDATE, EQUIVALENT NOTE ADDED TO PRUCHASED PARTS, NO 1:1 DRAWING DEFINED PARTS	

Drawing list on second page

FAA APPROVED

MICHAEL
JACOB
MUELLER

Digitally signed by
MICHAEL JACOB
MUELLER
Date: 2025.05.09
09:23:50 -05'00'

CENTRAL CERTIFICATION BRANCH

This area intentionally left blank.

C & A DIVISION

DRAWING LIST

	<u>Title</u>	<u>Rev.</u>	<u>Date</u>
Installation Data			
* 8-II	Installation Instructions	<u>12</u>	31 JAN 2025
* 8-0-0-TAB	Power Gate Installation	<u>6</u>	5 FEB 2025
* 8-0-1-000	Unit Wiring Overview	<u>7</u>	5 FEB 2025
* 8-0-2-000	Power Gate Mounting	<u>5</u>	5 FEB 2025
* 8-0-3-000	Controller Mounting Typ	<u>2</u>	5 FEB 2025
* 8-0-4-000	Power Converter Mounting Typ	<u>4</u>	5 FEB 2025
* 8-0-5-000	Wire Routing & Installation	<u>5</u>	5 FEB 2025
* 8-0-6-000	Pitot Static Hopper Line Installation	<u>4</u>	5 FEB 2025
* 8-0-6-001	Hopper Valve Mounting	<u>3</u>	5 FEB 2025
* 8-0-7-000	Gate Rigging	<u>5</u>	5 FEB 2025
Manufacturing Data			
6002-01-01	Gate Controller	2	10 OCT 2019
6002-01-02	Control Harness	4	31 JAN 2025
6002-01-02-01	DB-25 Slide Lock Con	2	31 JAN 2025
6002-01-02-02	EPAS Data Con	2	31 JAN 2025
6002-01-02-03	Button Wire Assm	2	31 JAN 2025
6002-01-02-04	Warning Light Assm	2	31 JAN 2025
6002-01-03	Power Harness	2	31 JAN 2025
6002-01-04	Power Converter 24 ->12	3	31 JAN 2025
6002-01-04-001	Step Down Converter	3	31 JAN 2025
6002-01-04-002	TVS Diode Assy	2	31 JAN 2025
6002-02-01	Power Unit	1	1 MAR 2018
6002-02-01-01	Power Unit Motor	3	31 JAN 2025
6002-02-01-02	Power Unit Bolts	3	31 JAN 2025
6002-02-02	Right Mid Aft Support	3	9 OCT 2019
6002-02-02-1	Right Mid Aft Sup Plate	4	31 JAN 2025
6002-02-02-2	Support Pivot	2	9 OCT 2019
6002-02-03	Left Mid Aft Support	3	9 OCT 2019
6002-02-03-1	Left Mid Aft Sup Plate	4	31 JAN 2025
6002-02-04	Right Mid Aft Sup Brace	4	31 JAN 2025
6002-02-05	Left Mid Aft Sup Brace	4	31 JAN 2025
6002-02-06	Cross Brace	3	9 OCT 2019
6002-02-07-1	Attach Angle 1	3	8 OCT 2019
6002-02-07-2	Attach Angle 2	3	8 OCT 2019
6002-02-08	Bell Crank Weldment	3	31 OCT 2019
6002-02-08-1	Bell Crank Torque Tube	3	31 OCT 2019
6002-02-08-2	Bell Crank Pivot Plate	4	31 JAN 2025
6002-02-08-3	Bell Crank Link Arm	3	31 JAN 2025
6002-02-08-4	Bushing 1	2	31 OCT 2019
6002-02-08-5	Bushing 2	2	31 OCT 2019
6002-02-08-6	Anti-Rotation Tab	2	31 OCT 2019
6002-02-08-7	5/16-24 Pivot Bolt	3	31 OCT 2019
6002-02-09-3	Input Arm Clamp 2	3	31 OCT 2019
6002-02-09-4	Input Arm 2A	5	24 AUG 2020
6002-02-10-1	Output Rod Mach	4	31 OCT 2019
6002-02-10-2	Output Rod Bushing	3	31 OCT 2019

	6002-02-11	Output Arm Spline	3	20 OCT 2019
	6002-02-11-1	Output Arm w/Spline Machined	4	31 OCT 2019
	6002-02-11-2	Stub Shaft	2	31 OCT 2019
	6002-02-12-1	Engagement Pin	3	31 OCT 2019
	6002-02-12-3	Input Arm 1 Cam	4	31 OCT 2019
	6002-02-12-4	Input Arm 1 Weldment	3	31 OCT 2019
	6002-02-12-4-1	Input Arm 1 Machining	3	31 OCT 2019
	6002-02-12-4-2	Input Cam Bar	2	31 OCT 2019
	6002-02-13	Input Shaft	4	20 OCT 2019
	6002-02-13-1	Input Shaft Spline	4	31 OCT 2019
	6002-02-13-2	Input Shaft Tube	2	31 OCT 2019
	6002-02-15-TAB	Push Pull Rod	<u>3</u>	31 JAN 2025
	6002-02-15-1-1	Push Pull Rod Reducer	4	12 OCT 2020
	6002-02-15-1-2	Push Pull Rod Reduction 2	2	31 OCT 2019
	6002-02-15-1-3	Push Pull Rod Reduction 3	2	31 OCT 2019
	6002-02-15-5-TAB	Push Pull Tube	<u>3</u>	31 JAN 2025
	6002-02-16-5	Cross Brace 1	3	8 OCT 2019
	6002-02-16-6	Cross Brace 2	3	8 OCT 2019
	6002-02-17	Output Support	<u>5</u>	4 FEB 2025
	6002-02-18	Gate Rod Assy	2	31 OCT 2019
	6002-02-18-1	Gate Rod	2	31 OCT 2019
	6002-02-18-2	RH Clevis Gate Rod	2	31 OCT 2019
	6002-02-18-3	LH Clevis Gate Rod	2	28 OCT 2019
	6003-02-01	Left Inboard Sup 7.5" Gate	<u>3</u>	4 FEB 2025
	6003-02-02	Right Inboard Sup 7.5" Gate	<u>3</u>	4 FEB 2025
	6003-02-03	Motor Sup 7.5" Gate	<u>3</u>	4 FEB 2025
	6003-02-04	Right Outboard Sup 7.5" Gate	4	28 DEC 2020
	6003-02-04-01	Right Outboard Sup Plate 7.5" Gate	<u>4</u>	4 FEB 2025
	6003-02-05	Cross Brace 7.5" Gate	2	25 Sep 2020
	6003-02-06	Mount Bracket 7.5" Gate	1	24 MAR 2020
	6003-02-07	Input Shaft End Plate 7.5" Gate	1	24 MAR 2020
	6003-02-08	Small Tie Brace	1	24 MAR 2020
	6003-02-09	Cross Tie Brace	1	24 MAR 2020
	6003-02-10	Input Shaft 7.5" Gate	2	22 JAN 2021
	6003-02-11	Mid Shaft 7.5" Gate	2	22 JAN 2021
	6003-02-12	Output Shaft 7.5" Gate	2	22 JAN 2021
	6003-02-13	Main Shaft 7.5" 38" Gate	3	18 JAN 2021
	6003-02-15-01	Planetary Gearbox Housing	1	24 MAR 2020
	6003-02-15-02	Planetary Gearbox Cover	1	24 MAR 2020
	6003-02-16-01	Spline Gearbox Housing	1	24 MAR 2020
	6003-02-16-02	Spline Gearbox Cover	1	24 MAR 2020
	6003-02-16-03	24 Tooth Bored Out Gear	<u>2</u>	4 FEB 2025
	6003-02-16-04	48 Tooth Bored Out Gear	<u>3</u>	4 FEB 2025
	6003-02-17	Over Center Arm	1	24 MAR 2020
	6003-02-TOOL	Drill & Shipping Plate	2	3 NOV 2020
*	8-1-1-000	Gate Controller	<u>3</u>	4 FEB 2025
*	8-1-2-000	Power Converter	<u>3</u>	4 FEB 2025
	8-1-3-000	Power Harness	<u>2</u>	4 FEB 2025
*	8-1-4-000	Control Harness	<u>5</u>	4 FEB 2025
*	8-1-4-500	Prox Cable Assy	<u>2</u>	4 FEB 2025
	8-1-4-501	Prox Cable	<u>3</u>	4 FEB 2025
	8-1-4-502	Prox Sensor	<u>2</u>	4 FEB 2025

SMART GATE

	8-1-4-700	Display Cable	<u>2</u>	4 FEB 2025
	8-1-5-000	Air Tap Kit	<u>3</u>	4 FEB 2025
	8-1-5-001	Air Line Tee	<u>2</u>	4 FEB 2025
	8-1-5-002	¼" Airline	<u>3</u>	4 FEB 2025
*	8-1-7-000	Hopper Valve Kit	<u>3</u>	4 FEB 2025
	8-1-7-001	Hopper Valve	<u>3</u>	4 FEB 2025
	8-1-7-002	Hopper ¼" Bulkhead	<u>3</u>	4 FEB 2025
	8-1-7-003	1/8 NPT Plug	<u>3</u>	4 FEB 2025
	8-1-7-004	¼" Tube to 1/8 NPT	<u>3</u>	4 FEB 2025
	8-1-7-005	90 DEG Elbow ¼" Tube	<u>3</u>	4 FEB 2025
	8-1-7-006	Hopper Valve Cable	<u>3</u>	3 FEB 2020
	8-1-7-100	Hopper Valve Assy	<u>3</u>	4 FEB 2025
*	8-2-0-TAB	Power Gate Assy	<u>4</u>	4 FEB 2025
*	8-2-1-000	Power Gate Frame	<u>4</u>	4 FEB 2025
	8-2-1-001	Power Unit	<u>3</u>	4 FEB 2025
	8-2-1-002	Right MID AFT Support	<u>4</u>	4 FEB 2025
	6-2-1-003	Left MID AFT Support	<u>4</u>	4 FEB 2025
	8-2-1-004	Right MID AFT SUP Brace	<u>4</u>	4 FEB 2025
	8-2-1-005	Left MID AFT SUP Brace	<u>4</u>	4 FEB 2025
	8-2-1-006	Cross Brace	<u>4</u>	4 FEB 2025
*	8-2-1-007	Attach Angle Drilled 1	<u>4</u>	4 FEB 2025
*	8-2-1-008	Attach Angle Drilled 2	<u>4</u>	4 FEB 2025
	8-2-1-009	Top Cross Brace 1	<u>4</u>	4 FEB 2025
	8-2-1-010	Top Cross Brace 2	<u>4</u>	4 FEB 2025
	8-2-1-011	Output Support	<u>4</u>	4 FEB 2025
	8-2-2-002	Input Arm 2	<u>6</u>	4 FEB 2025
	8-2-2-003	Output Rod	<u>5</u>	4 FEB 2025
	8-2-2-004	Output Arm w/Spline	<u>4</u>	4 FEB 2025
	8-2-2-005	Input Shaft	<u>5</u>	4 FEB 2025
*	8-2-2-006	Input Arm 1	<u>4</u>	4 FEB 2025
	8-2-2-007	1" Flange Bearings	<u>4</u>	4 FEB 2025
	8-2-2-008	Bushing 1	<u>4</u>	4 FEB 2025
	8-2-2-009	Bushing 2	<u>4</u>	4 FEB 2025
*	8-2-2-010	Gate Rod Assy	<u>3</u>	4 FEB 2025
	8-2-2-101	Output Rod Mach	<u>5</u>	4 FEB 2025
	8-2-2-102	Output Rod Bushing	<u>4</u>	4 FEB 2025
	8-2-2-103	SS Rod End	<u>3</u>	4 FEB 2025
	8-2-2-105	5/16 Pivot Bolt	<u>4</u>	4 FEB 2025
	8-2-2-111	Output Arm Weldment	<u>4</u>	4 FEB 2025
	8-2-2-113	Stretch Fit Seal	<u>3</u>	4 FEB 2025
	8-2-2-115	Input Shaft Weldment	<u>5</u>	4 FEB 2025
	8-2-2-120	Input Arm 1 Weldment	<u>4</u>	4 FEB 2025
	8-2-2-121	Engagement Pin	<u>4</u>	4 FEB 2025
	8-2-2-122	Stainless Steel Spring	<u>4</u>	4 FEB 2025
	8-2-2-123	1" ID Bushing	<u>3</u>	4 FEB 2025
	8-2-2-124	1" Clamp-On Collar	<u>3</u>	4 FEB 2025
	8-2-2-125	Input Arm 1 Cam	<u>4</u>	4 FEB 2025
*	8-2-3-TAB	Bell Crank Torque Tube	<u>4</u>	4 FEB 2025
	8-3-0-TAB	Push Pull Tubes	<u>3</u>	4 FEB 2025
*	8-7-0-TAB	7.5" Power Gate Assy	<u>3</u>	5 FEB 2025
*	8-7-1-000	7.5" Power Gate Frame	<u>3</u>	5 FEB 2025
	8-7-1-001	Left Inboard Sup 7.5" Gate	<u>3</u>	5 FEB 2025
	8-7-1-002	Right Inboard Sup 7.5" Gate	<u>3</u>	5 FEB 2025

SMART GATE

	8-7-1-003	Motor Sup 7.5" Gate	<u>3</u>	5 FEB 2025
	8-7-1-004	Right Outboard Sup 7.5" Gate	<u>3</u>	5 FEB 2025
	8-7-1-005	Cross Brace 7.5" Gate	<u>3</u>	5 FEB 2025
	8-7-1-006	Mount Bracket 7.5" Gate	<u>3</u>	5 FEB 2025
	8-7-1-007	Input Shaft End Plate 7.5" Gate	<u>3</u>	5 FEB 2025
	8-7-1-008	Small Tie Brace	<u>3</u>	5 FEB 2025
	8-7-1-009	Cross Tie Brace	<u>3</u>	5 FEB 2025
	8-7-1-150	½"-20 X 2.5" Hex Head SS Bolt	<u>3</u>	5 FEB 2025
	8-7-1-999	Drill & Shipping Plate	<u>2</u>	5 FEB 2025
	8-7-2-001	Input Shaft 7.5" Gate	<u>3</u>	5 FEB 2025
	8-7-2-002	Mid Shaft 7.5" Gate	<u>3</u>	5 FEB 2025
	8-7-2-003	Output Shaft 7.5" Gate	<u>3</u>	5 FEB 2025
*	8-7-2-004	Planetary Gearbox	<u>3</u>	5 FEB 2025
*	8-7-2-005	Spline Gearbox	<u>3</u>	5 FEB 2025
	8-7-2-006	Over Center Arm	<u>3</u>	5 FEB 2025
	8-7-2-101	Planetary Gearbox Housing	<u>3</u>	5 FEB 2025
	8-7-2-102	Planetary Gearbox Cover	<u>3</u>	5 FEB 2025
	8-7-2-103	3:1 Gear Reduction	<u>3</u>	5 FEB 2025
	8-7-2-104	R20 Open Ball Bearing	<u>3</u>	5 FEB 2025
	8-7-2-105	R12 Ball Bearing	<u>3</u>	5 FEB 2025
	8-7-2-106	1.25" Rotary Shaft Seal W/Wiper	<u>3</u>	5 FEB 2025
	8-7-2-107	1.375" Rotary Shaft Seal W/Wiper	<u>3</u>	5 FEB 2025
	8-7-2-108	1-5/8" Internal Snap Ring	<u>3</u>	5 FEB 2025
	8-7-2-109	2-1/4" Internal Snap Ring	<u>3</u>	5 FEB 2025
	8-7-2-110	Washdown Breather Vent	<u>3</u>	5 FEB 2025
	8-7-2-111	Spline Gearbox Housing	<u>3</u>	5 FEB 2025
	8-7-2-112	Spline Gearbox Cover	<u>3</u>	5 FEB 2025
	8-7-2-113	24 Tooth Bored Out Gear	<u>3</u>	5 FEB 2025
	8-7-2-114	48 Tooth Bored Out Gear	<u>3</u>	5 FEB 2025
	8-7-2-115	R10 Ball Bearing	<u>3</u>	5 FEB 2025
	8-7-2-116	1-3/8" Internal Snap Ring	<u>3</u>	5 FEB 2025
	8-7-2-117	¾" External Snap Ring	<u>3</u>	5 FEB 2025
	8-7-2-118	.75" Rotary Shaft Seal W/Wiper	<u>3</u>	5 FEB 2025
	8-7-2-119	.75" OE Keyless Bushing	<u>3</u>	5 FEB 2025
	8-7-2-120	¾" B400 B-LOC	<u>3</u>	5 FEB 2025
	8-7-2-121	SS Grease Fitting	<u>3</u>	5 FEB 2025
	8-7-2-122	SHCS 8-32 1-1/2" Long	<u>3</u>	5 FEB 2025
	8-7-2-150	.75" Flange Bearing	<u>3</u>	5 FEB 2025
	8-7-2-151	3/16" Key ½" Long	<u>3</u>	5 FEB 2025
	8-7-2-152	1" Stainless External Snap Ring	<u>3</u>	5 FEB 2025
	8-7-2-153	.5" LG SS Spring	<u>3</u>	5 FEB 2025
	8-7-2-154	1.5" LG SS Spring	<u>3</u>	5 FEB 2025
	8-7-2-155	7/16-20 Hex Head Bolt 1-1/4" LG	<u>3</u>	5 FEB 2025
	8-7-3-380	Main Shaft 7.5" 38" Gate	<u>3</u>	5 FEB 2025

Engineering Analysis

*	WEIGHT-8	Weight & Balance Analysis	<u>6</u>	31 JAN 2025
*	ELECTRICAL-8	Electrical Load Analysis	<u>3</u>	31 JAN 2025

Continued Airworthiness

*	ICA-8	Instruction for Continued Airworthiness	<u>11</u>	31 JAN 2025
---	-------	---	-----------	-------------

Flight Manual Supplement

*	FMS-8	Flight Manual Supplement	<u>5</u>	31 JAN 2025
---	-------	--------------------------	----------	-------------

Ground Test

* Ground Test-8 Ground Test Plan 2 31 JAN 2025

Note:

* Indicates Drawing is included in Installation Package and ICA

This area intentionally left blank.

INSTALLATION INSTRUCTIONS				Document Number	REVISION LEVEL
ORIGINATOR				8-II	Rev K
JRR				04 May 2018	JRR
REVISION HISTORY	REVISION DATE	REVISED BY	APPROVED BY	DESCRIPTION OF REVISION	
A		JRR	TRR	DOCUMENT CREATED	
B	3/3/19	JRR	JRR	CHANGE CONTROL BOX TO CONTROLLER	
C	7/1/19	JRR	JRR	HOPPER VALVE	
D	9/27/19	JRR	JRR	REWRITE	
E	11/11/19	TRR	TRR	REMOVE DRAWINGS	
F	11/29/19	JRR	JRR	REWRITE	
G	12/10/19	TRR	PJJ	TESTING REF AND FORMAT UPDATE	
H	5/24/20	JRR	PJJ	ADD WIRE TO HOPPER VENT	
I	1/10/21	JRR	TRR	ADD 7 1/2" GATE	
J	1/21/21	TRR	TRR	7 1/2" GATE DRILLED SHAFTS KEYLESS TORQUE NOW 62 FT LBS	
K	6/15/22	JRR	JRR	ADD THRUSH S2R-510	
12	1/21/25	TRR	TRR	COMPANY NAME AND CONTACT UPDATE	

INSTALLATION INSTRUCTIONS

Table of Contents

PARTS LIST	2
INSTALLATION	3

Note:

In installation instructions and drawings the following designators identify the aircraft manufacture and model.

Designator	Make	Model
AT-400 Represents	Air Tractor:	AT-400, AT-400A
AT-402 Represents	Air Tractor:	AT-402, AT-402A, AT-402B
AT-502 Represents	Air Tractor:	AT-502, AT-502A, AT-502B
AT-504 Represents	Air Tractor:	AT-504
AT-602 Represents	Air Tractor:	AT-602
AT-802 Represents	Air Tractor:	AT-802, AT-802A
510 Thrush represents	Thrush:	S2R, S2R-G1, S2R-G5, S2R-G6, S2R-G10, S2R-H80, S2R-T15, S2R-T11, S2R-T34, S2R-T45, S2R-T65, S2R-510
550 Thrush represents	Thrush:	S2RHG-T34, S2RHG-T65
710 Thrush represents	Thrush:	S2R-T66

SMART GATE

PARTS LIST

QTY	DESCRIPTION		PART NUMBER
1	Smart Gate Assembly:	5 x 38" Gate	8-2-0-380
		5 x 41" Gate	8-2-0-410
		7 ½ " Gate	8-7-0-380
1	Gate Controller		8-1-1-000
1	Power Converter		8-1-2-000
1	Power Harness		8-1-3-000
1	Control Harness		8-1-4-000
2	Air Line Tap Kit		8-1-5-000
2	Grommets		MS35489-18
1	Push Pull Tube:	AT-802	8-3-0-802
		AT-602	8-3-0-602
		AT-502, AT-504, AT-402, AT-400	8-3-0-502
		510 Thrush, 550 Thrush	8-3-0-510
		710 Thrush	8-3-0-710
1	Display Cable		8-1-4-700
1	Proximity Cable Assembly		8-1-4-500
1	Bulkhead Fitting		8-1-7-002
1	Hopper Valve Kit		8-1-7-000
	OPTIONAL EQUIPMENT		
4	Gate Rod		8-2-2-120

SMART GATE

INSTALLATION

A.a REMOVAL OF PARTS, 5 INCH GATE

1. Remove Gate Push Pull Tube and discard (see drawing 8-0-0-TAB)
2. Remove 4) Gate Rods from Belcrank Torque Tube and Gate (see drawing 8-2-0-TAB). Discard if using optional Gate Rods 8-2-2-10
3. Remove Transland Belcrank Torque Tube and discard (see drawing 8-2-0-TAB)
4. Remove center Torque Tube Supports and discard (two on Air Tractor, one on Thrush)
5. On Air Tractor, remove 2 center support Attach Angles and discard. On Thrush, leave single center support angle attached

A.b REMOVAL OF PARTS, 7 ½" GATE (See Drawing 8-0-0-TAB)

1. Remove Gate Push Pull Tube and discard
2. Remove 4) Gate Rods from Belcrank Torque Tube and Gate and save
3. Remove Transland Belcrank Torque Tube and discard
4. Remove all other actuating parts from Gate box except for the Gate door and the left outboard Torque Tube support

B. INSPECTION OF GATE

1. Inspect Gate seal for wear and tear and replace if needed
2. Inspect front hinge points for wear
3. Replace front hinge bolts with new

C.a INSTALL SMART GATE, 5 INCH GATE (see drawings 8-0-2-000 & 8-2-1-000 & 8-2-0-TAB). NOTE: Lube all threads with Moly grease (Loctite Moly-50 or equivalent)

1. Check straightness of Gate Assembly Torque Tube, PN 8-2-3-xxx, by sighting down tube and sighting through the 4) Gate rod holes
2. Drill ¼" holes in Gate Box following instructions on note of drawing 8-0-2-000
3. Bolt Attach Angles to Gate Box using 20) AN3C4 bolts, 20) AN365C1032 nuts, AR) NAS1149C363H washers and fuel cell sealant (PRC Desoto 1422 or equivalent) under heads of bolts.
4. Attach Smart Gate assembly to Attach Angles using 10) AN4C4A bolts, 10) AN365C428 nuts, AR) NAS1149C0463H washers (see drawing 8-2-1-000)

5. Attach outboard ends of Belcrank Torque Tube to existing outboard supports using 2) PN 8-2-2-200 pivot bolts, AR) NAS1149C0563H washers, 2) AN310C5 nuts
6. Reinstall 4) Gate Rods between Belcrank Torque Tube and Gate with new hardware. (PN 8-2-2-010 rods may be used in place of original rods)
7. Grease Gate seal and adjust Gate fore and aft, front hinge in and out, rear rods in and out to obtain a centered, level and soft over-center door closing

C.b INSTALL SMART GATE, 7 ½" GATE (see drawings 8-0-2-000, 8-7-0-TAB, 8-7-1-000).NOTE: Lube all threads with Moly grease (Loctite Moly -50 or equivalent)

1. Remove Drill Plate from Power Gate Assembly
2. Install Drill Plate on existing ¼ inch holes
3. Match Drill Gate Box to Drill Plate using .188" drill (ten 3/16 holes)
4. Install 2 mounting brackets onto Gate Box using 10) 3/16 bolts and seal with PRC Desoto 1420 or equivalent
5. Install Power Gate assembly onto Gate using 13) ¼ bolts and 2) 7/16 bolts. Seal ¼" bolts passing through Gate Box with PRC Desoto 1420 or equivalent
6. Reinstall 4) Gate Rods between Belcrank Torque Tube and Gate with new hardware
7. Grease Gate seal and adjust Gate fore and aft, front hinge in and out, rear rods In and out to obtain a centered, level and soft over-center door closing

D. INSTALL POWER CONVERTER (see drawing 8-0-4-000)

1. Place Power Converter PN 8-1-2-000 on bottom side of cockpit floor, drill 4) 11/64" holes in floor and install using 4) AN526-832 or MS27038C0809 Screws, 4) AN365-823 or MS21044C08 nuts, 4) AN960-8 NAS1149CN832R Washers. Note: remove insulation between floor and power converter

E. INSTALL CONTROLLER (see drawing 8-0-3-000)

1. Place Controller PN 8-1-1-000 on top of lower dash left of center, attach per drawing 8-0-3-000. NOTE: Controller may also be installed in radio stack or in dash

F. WIRING (see drawing 8-0-5-000 and 8-0-1-000)

1. AT 802: Drill 1 ¼ "hole in Gate Box enclosure skin 1inch inboard from right side of tank and 2 inches aft of tank

AT 602 & 710 Thrush: Drill 1 ¼" inch hole through radius lower corner of belly outboard of tank right rear corner

AT 400, 402, 502, 504 & 510, 550 THRUSH: Drill 1 ¼" hole in belly skin 2 inches

left of center and 2 inches aft of tank

2. Drill 1 ¼ inch hole in right cockpit side wall aft of hopper and forward of radio rack
3. Run Power Unit end of Control Harness PN 8-1-4-000 from behind dash through the Step 2 hole in sidewall and close with MS35489-18 grommet
4. Follow airframe tubing down and exit belly through the Step 1 hole
5. Use dielectric grease (Dow Corning #4 or equivalent) and plug Power Harness PN 8-1-3-000 and Control Harness PN 8-1-4-000 into Power Unit
6. Route Power Harness along Control Harness up through the Step 1 hole and close with MS35489-18 grommet
7. Attach cables with tie wraps or Adel clamps per drawing 8-0-5-000
8. Route cables up airframe tubing and attach with tie wraps. Use care that cables do not interfere with moving parts
9. Route Power Harness below floor to Power Converter and connect black wire to output VO- terminal and white or red wire to output VO+ terminal via ¼" terminal atop of diode stack. Use proper size AMP terminal or equivalent (see drawing 8-0-1-000)
10. Connect input VIN-terminal of Power Converter to airframe ground using 10 Gauge wire and proper size AMP terminals (see drawing 8-0-1-000)
11. Install 20 amp breaker (Klixon PN 7277-2-20 or equivalent) in breaker panel and Label "Gate Power"

Note: All labels and placards identified to be installed, are customer supplied and must be in bold white on black 1/8" font indelible material and permanently marked

12. Connect 10 gauge wire to input VIN+ terminal of Power Converter and route to dash following Control Harness through 1 ¼ inch hole in sidewall, to "Gate Power" breaker. Connect using proper size AMP terminals or equivalent (see drawing 8-0-1-000)
13. Connect 10 gauge wire from aircraft Buss to "Gate Power" breaker using proper size AMP terminals (see drawing 8-0-1-000)
14. Install 2 amp breaker (Klixon 7277-2-2 or equivalent) in breaker panel and label "Gate Control"
15. Connect 20 gauge wire from aircraft Buss to "Gate Control" breaker using proper size AMP terminals (see drawing 8-0-1-000)
16. Connect Red Power Line of "Control Harness" PN 8-1-4-000 to "Gate Control" breaker using proper size AMP terminals (see drawing 8-0-1-000)
17. Connect Black Ground Line of "Control Harness" to aircraft Ground using proper size AMP terminals.

18. Route warning lights of Control Harness to upper dash and drill two 9/16" holes and install high on dash (typically next to GPS moving map) and label fault light "Gate Fault" and rock light "Gate Rock"
19. Install Mode switch of Control Harness in breaker panel, black wire up, and label "Dry Gate" on bottom and "Liquid Gate" on top
20. Route "O/C" switch of Control Harness to throttle quadrant
21. Drill 1/2" hole in Flap Switch Bracket outboard of throttle. Install the "O/C" switch with white wire forward. Label forward "Gate Open" and aft "Gate Close"

Note: If Reabe True Quantity Remote is not installed, Skip Steps 22 & 23.

22. Disconnect the Remote Cable from the "Reabe True Quantity" Main Display
23. Reroute the Remote Cable to Controller and connect to port labeled "Remote"
24. Route "Display" Cable PN 8-1-4-700 from Controller Port labeled "Main" to the "Main Display" and connect to the port labeled "Remote"
25. Verify the "Reabe True Quantity" firmware version is 150 or greater, per "True Quantity" ICA
26. If firmware is not 150 or greater, contact Reabe Design_LLC for update
27. Mount Proximity Switch PN 8-1-4-502 per drawing 8-0-5-000.
28. Route Proximity Cable PN 8-1-4-501 from Controller port labeled "Proximity" following Open/Close Switch Cable and connect to Proximity Switch
29. Route "Cleanout" button of "Control Harness" to lower left portion of upper dash, drill 3/4" hole and install. Label "Cleanout"
30. Tee into Pitot and Static lines and connect to Controller per drawing 8-0-6-000
31. Drill 7/16 inch hole in aft wall of hopper as high as practical and install bulkhead fitting PN 8-1-7-002 (see drawing 8-0-6-001)
32. Mount Hopper Valve PN 8-1-7-100 to canopy structure using appropriate size Adel clamp and 10-32 screw per Drawing 8-0-6-001
33. Route and connect 1/4 inch tube PN 8-1-5-002 following windshield frame from hopper bulkhead fitting to pressure side of Hopper Valve 90° fitting. Then route and connect 1/4 inch tube following window frame and Control Harness from control side of Hopper Valve straight fitting to Controller port labeled "Hopper".

34. Connect Hopper Valve Cable PN 8-1-7-006 to Hopper Valve and route cable to Mode switch following windshield frame

35. Connect (brown or #1) wire of Hopper Valve Cable to terminal 5 of Mode switch

using appropriate size AMP terminal (see drawing 8-1-4-000)

36. Connect remaining wires of Hopper Valve Cable to airframe ground using appropriate size AMP terminal

37. Connect 20 gauge wire from terminal 4 of Mode switch to the load side of the Gate Control breaker using appropriate size AMP terminals

38. Select GPS CAN or GPS RS232 input of the Control Harness and route to GPS and connect per GPS manufacturer's instructions

39. Use tie wraps to secure all cables and lines

40. Install placard by Main Quantity Display "when Dry Gate is selected: the upper line displays inches of Gate opening, the lower line displays pounds in hopper"

G. RIGGING (see drawing 8-0-7-000)

1. Move Gate Lever to full aft (stow) and hold in stow position using under-floor Gate stop adjustment [current Air Tractor]. If aircraft does not have under-floor Gate stop adjustment [old Air Tractor and Thrush], use breakaway strap per drawing 8-0-5-000

2. Install Push Pull Tube PN 8-3-0-XXX. Attach using provided hardware . Adjust length with Gate closed such that Push Pull Tube 8-3-0-XXX is touching input arm (see Drawing 8-0-7-000). Verify ½" minimum rod end thread engagement.

3. With Gate closed and Belcrank Torque Tube in over-center position, rotate Manual Disconnect Cam to provide tangent alignment of Cam fillet and input arm. Tighten Cam in place to 80 inch pound. Mark Cam to shaft to verify slippage (see drawing 8-0-7-000)

H. TEST RIGGING

1. Move Gate Lever forward out of stow position and ensure Manual Disconnect engages.

2. Check travel full open reaching stop bolts.

3. On 5" Gate, verify Belcrank Torque Tube to Power Unit output arm is greater than 20°, if less than 20° adjust stop bolts to reduce open travel. (see Drawing 8-0-7-000)

On 7 ½ Gate, verify Push Pull Tube to Input arm is greater than 20°, if less than 20°, remove Output Gearbox Cover, loosen Output Gear Keyless Bushing and rotate gear to achieve 20°, tighten keyless bushing to 62 ft/lbs, reinstall Output Gearbox Cover (see drawing 8-0-7-000)

4. Close Gate Lever and verify no binding and no excessive force is required to close. If dual clamp did not slip, match drill shaft to clamp and bolt using AN4C21 and nut AN365C428

*SMART GATE***I. GATE FINAL ADJUSTMENTS**

1. Close Gate and fill hopper with water
2. Adjust Gate hinges and Gate Rods so Gate is square and not leaking
3. Empty hopper and open Gate to ¼ inch
4. Use ¼” bolt to verify Gate has a uniform opening. Adjust Gate Rods as needed.
NOTE: hinge adjustment may be needed
5. Close Gate and fill hopper with water
6. Adjust Gate Rods equally or hinges equally to stop leaks, but no tighter
7. Empty hopper and verify uniform ¼” Gate opening and Gate can be operated manually. NOTE: this is your liquid Gate adjustment
8. Loosen the hinge eyebolts approximately 6 turns on the 5” Gate or 4 turns on the 7 ½” Gate to obtain a dry Gate adjustment

J. PROGRAMMING CONTROLLER

1. With Master on, power on “Gate Power”, then “Gate Controller” breakers. Verify both warning lights illuminate and go extinguish.
2. Cycle Gate Lever, noting power assist and yellow light in proximity switch does not light
3. Close Gate manually, disengage Manual Disconnect and stow Gate Lever, using Gate stop. Verify Proximity Switch light is illuminated. Adjust proximity switch if needed
4. Switch “Dry Gate/Liquid Gate” to Dry
5. Push “MENU” button
6. Rotate right inner knob to “SETUP”, press “ENT”
7. Rotate right inner knob to “GPS”, press “ENT”
8. Rotate right outer knob to select GPS “Model”, press “Ent”
9. Display shows “Model ACCEPT”, press “ENT”
10. Rotate right inner knob to “SET HOME”, press “ENT”
11. Display shows “CLOSED? SET HOME”, verify Gate is closed over-center, press “ENT”
12. Display shows “CLOSED? ACCEPT”, press “ENT”
13. Rotate right inner knob to “FIND STOP”, press “ENT”

14. Display shows “CLEAR? FIND STOP”, verify Gate is closed over-center and clear, press “ENT

15. Display shows “CLOSED? MOVE OK”, press “ENT”

16. Display shows “MOVING MOVE OK”, Gate will cycle 3 times. (NOTE: If Gate does not cycle 3 times press “CLR”. Command can be cancelled by power off).

If ‘GATE ROCK’ or ‘FAULT’ light illuminates, cycle power and return to Setup Menu/SET HOME and begin again.

17. Display shows “FIND ACCEPT STOP”, press “ENT”

18. Rotate right outer knob to “CAL GATE”, press “ENT”

19. Display shows “START? CAL GATE”, press “ENT”

20. Display shows “Set 0.000” on the upper line. NOTE: This is the Gate opening in inches that the Controller is asking for. The lower line displays “Per 030.0” which is the % of opening. Rotating the left knob moves the Gate to obtain the opening the Controller is asking for

21. Rotate left knob to move the Gate to a “Just Closed” position (NOTE: closed enough to pinch paper but no tighter), press “ENT”

22. Display shows “Set 0.000 ACCEPT”, press “ENT”

23. Display shows “Set 0.125”, use left knob to adjust Gate to .125 inch open, press “ENT”

24. Display shows “Set 0.125 ACCEPT”, press “ENT”

25. Display shows “Set 0.250”, use left knob to adjust Gate to .25 inch open, press “ENT”

26. Display shows “Set 0.250 ACCEPT”, press “ENT”

27. Display shows “Set 0.500”, use left knob to adjust Gate to 0.5 inch open, press “ENT”

28. Display shows “Set 0.500 ACCEPT”, press “ENT”

NOTE: On 5” Gate: This 2-step process will be repeated for 0.750 inch, 1.000 inch, 1.500 inch, 2.000 inch, and 2.500 inch

NOTE: On 7 ½” Gate: This 2-step process will be repeated for 1.000 inch, 1.500 inch, 2.000 inch, 3.000 inch and 4.000 inch

29. After the 2.500-inch setting is accepted on the 5” Gate, or 4.000 on the 7 ½” Gate, the Gate will move to 100% open. Measure the actual Gate opening with calipers

SMART GATE

30. Rotate right inner and outer knobs to adjust the upper display to show the measured opening of step 29, press “ENT”
31. Display shows “Set X.xxx ACCEPT”, press “ENT”
32. Display shows “ACCEPT CAL GATE”, press “ENT”
33. Rotate right outer knob to “UNITS”, press “ENT”
34. Rotate left inner knob to select “ENGLISH” or “METRIC”, press “ENT”
35. Display shows “ENGLISH” or “METRIC” “ACCEPT”, press “ENT”
36. Rotate right inner knob to “HOPSPEED”, press “ENT”
37. Rotate right outer knob to “10”, press “ENT”
38. Display shows “10 ACCEPT”, press “ENT”
39. Rotate right inner knob to “AIRSPEED”, press “ENT”
40. Rotate right outer knob to “35”, press “ENT”
41. Display shows “35 ACCEPT”, press “ENT”
42. Press “CLR” to exit Setup Menu
43. Press “CLR” to exit Main Menu
44. Master off

K. LIQUID/DRY GATE ADJUSTMENTS

1. When hauling liquid, Gate door must be adjusted per Transland or airframe recommendations to close square and just tight enough to be water tight. When hauling dry material, Gate door must be adjusted to a dry fit to allow a soft operating Gate with power off. As a shortcut to the dry fit adjustment, loosen the front Gate door adjustments approximately 6 turns for the 5” Gate or 4 turns for the 7 ½” Gate on the 4) hinge eyebolts. Then test with power off. Note: your aircraft may need a different adjustment, but the pilot must always be able to operate the Gate manually without power.

L. TESTING: See Ground test document # Ground Test - 8

Any Further Questions Please Email:

Sales@ReabeAir.com

Troy@Reabe.Design


Or Call

**321-Air-Tractor
(321) 247-8722**

1

- 6

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	5/4/2018	TRR	TRR
B	ADDITION OF HOPPER VALVE	4/1/2019	TRR	TRR
C	UPDATE TITLE BLOCK, CONVERTED NOTES 1&2 INTO GENERAL NOTES, ADDED NOTES 3 &4	10/10/2019	TRR	KMT
D	ADDED INFO FOR MAKE AND MODEL PARTS	12/4/2019	TRR	PJJ
E	ADDED INFO FOR 7.5" GATE ASSEMBLY	1/27/2021	TRR	TRR
6	ADDED THRUSH TO NOTE 3 LINE1, UPDATED TITLE BLOCK AND CHANGED REV FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	2/5/2025	TRR	TRR

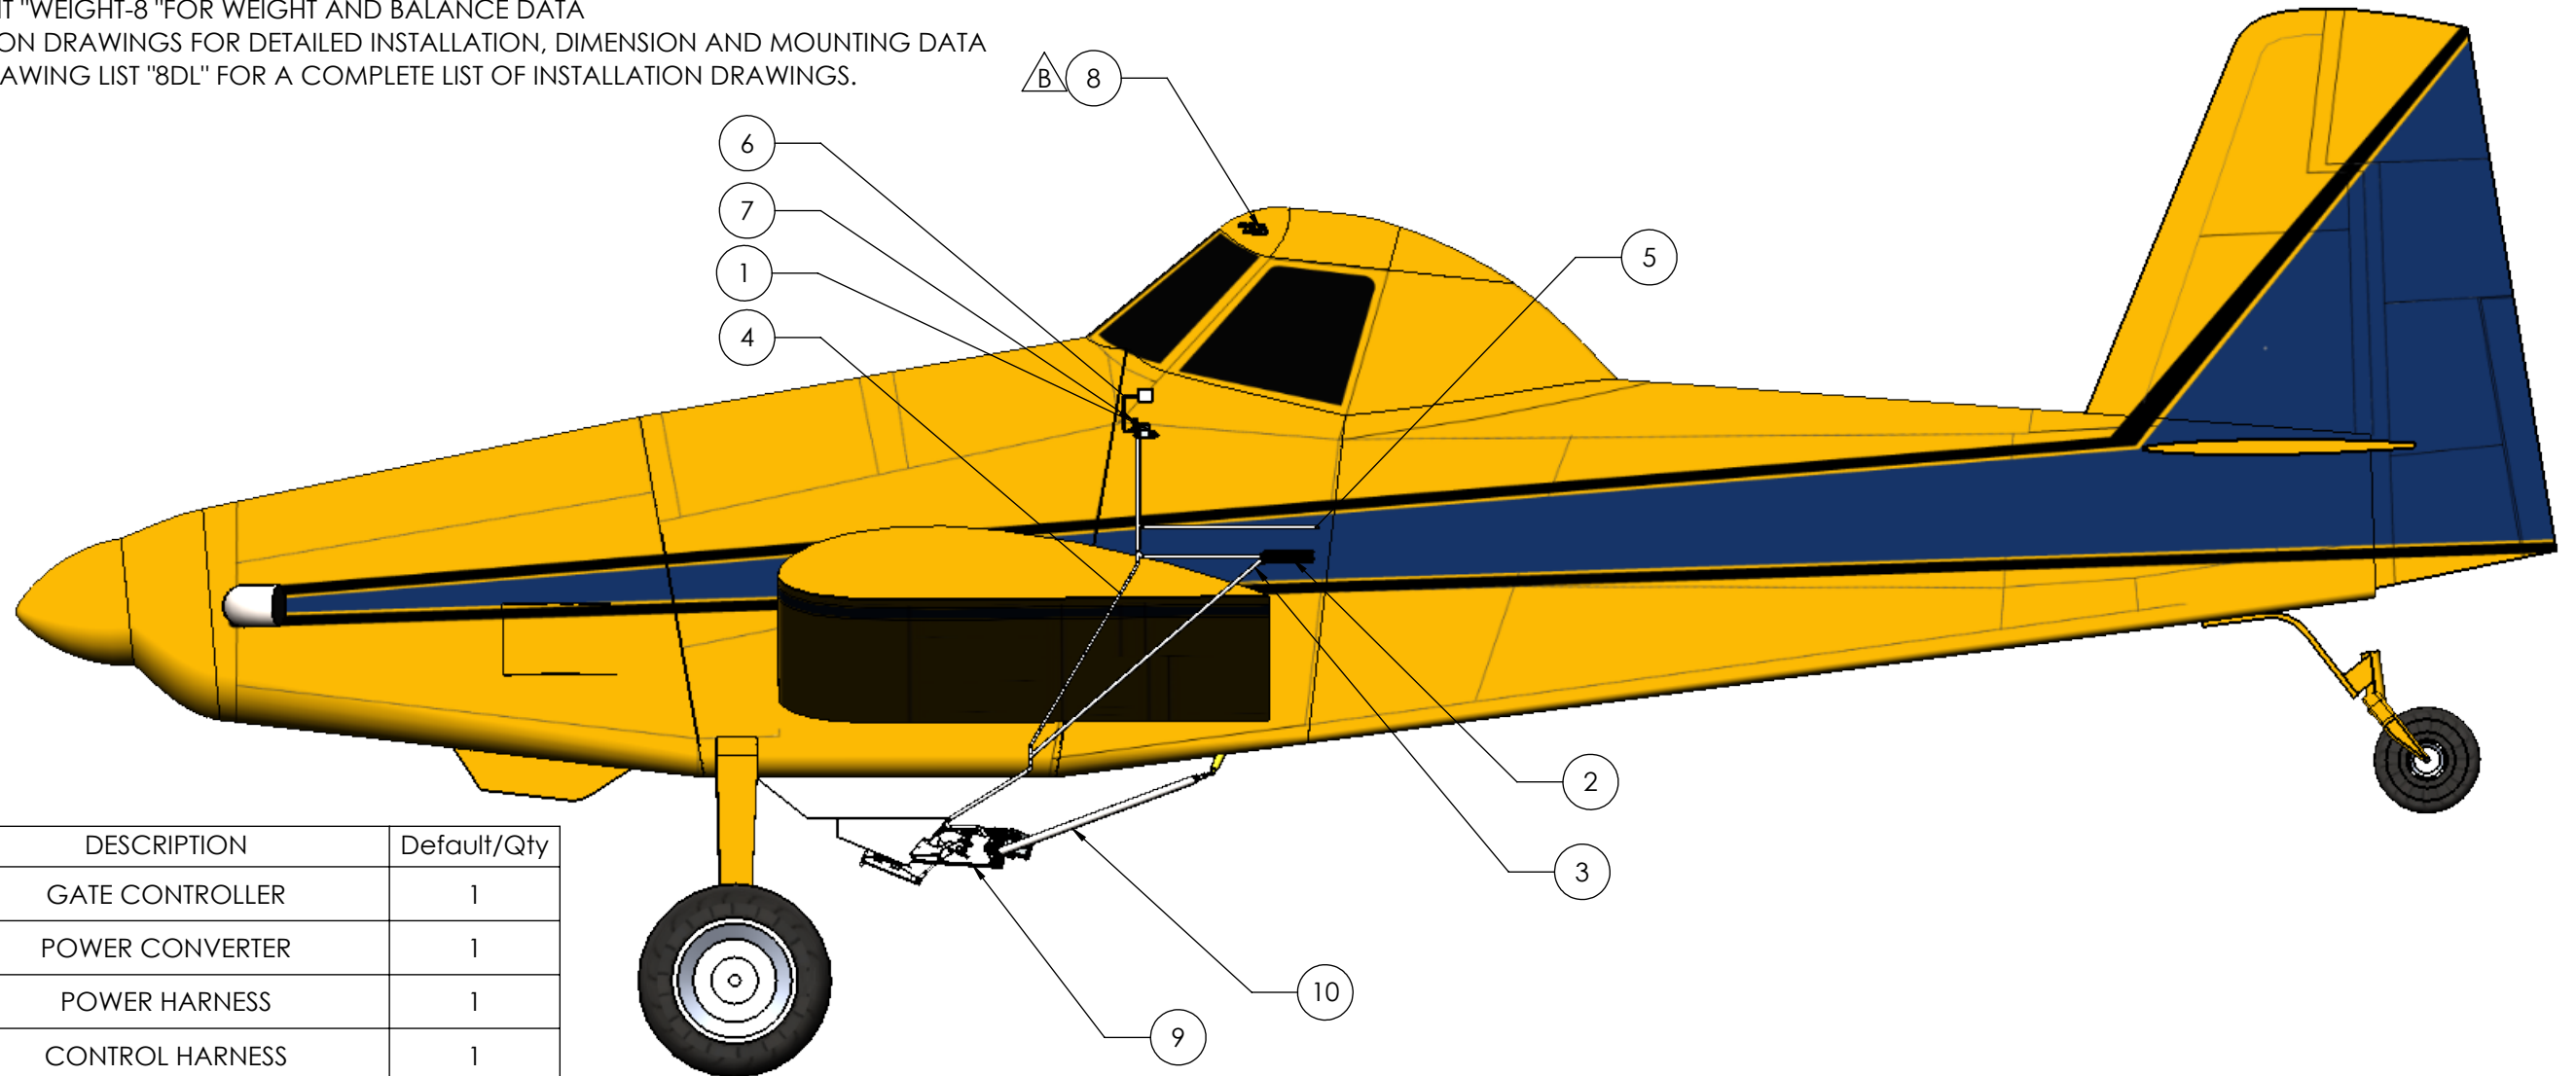

ITEM NO.	PART NUMBER	DESCRIPTION	Default/Qty
1	8-1-1-000	GATE CONTROLLER	1
2	8-1-2-000	POWER CONVERTER	1
3	8-1-3-000	POWER HARNESS	1
4	8-1-4-000	CONTROL HARNESS	1
5	8-1-4-500	PROX CABLE ASSY	1
6	8-1-4-700	DISPLAY CABLE	1
7	8-1-5-000	AIR TAP KIT	1
8	8-1-7-000	HOPPER VALVE KIT	1
9	8-2-0-TAB	POWER GATE ASSY	1
10	8-3-0-TAB	PUSH PULL TUBES	1

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULAR: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

POWER GATE INSTALLATION

	NAME	DATE	SIZE B	DWG. NO. 8-0-0-TAB		REV 6
DRAWN	TRR	05/04/2018				
CHECKED	MVA	09/30/2019				
DO NOT SCALE DRAWING			SCALE: 1:32 WEIGHT:		SHEET 1 OF 2	

D

8-0-0-510 BOM FOR THRUSH 510 & 550 WITH 5" GATE			
TEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-1-1-000	GATE CONTROLLER	1
2	8-1-2-000	POWER CONVERTER	1
3	8-1-3-000	POWER HARNESS	1
4	8-1-4-000	CONTROL HARNESS	1
5	8-1-4-500	PROX CABLE ASSY	1
6	8-1-4-700	DISPLAY CABLE	1
7	8-1-5-000-T	AIR TAP KIT	1
8	8-1-7-000	HOPPER VALVE KIT	1
9	8-2-0-410	POWER GATE ASSY 41"	1
10	8-3-0-510	510 PUSH PULL TUBE	1

C

8-0-0-710 BOM FOR THRUSH 710 WITH 5" GATE			
TEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-1-1-000	GATE CONTROLLER	1
2	8-1-2-000	POWER CONVERTER	1
3	8-1-3-000	POWER HARNESS	1
4	8-1-4-000	CONTROL HARNESS	1
5	8-1-4-500	PROX CABLE ASSY	1
6	8-1-4-700	DISPLAY CABLE	1
7	8-1-5-000-T	AIR TAP KIT	1
8	8-1-7-000	HOPPER VALVE KIT	1
9	8-2-0-410	POWER GATE ASSY 41"	1
10	8-3-0-710	710 PUSH PULL TUBE	1

B

8-0-0-510-7 BOM FOR THRUSH 510 & 550 WITH 7.5" GATE			
TEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-1-1-000	GATE CONTROLLER	1
2	8-1-2-000	POWER CONVERTER	1
3	8-1-3-000	POWER HARNESS	1
4	8-1-4-000	CONTROL HARNESS	1
5	8-1-4-500	PROX CABLE ASSY	1
6	8-1-4-700	DISPLAY CABLE	1
7	8-1-5-000-T	AIR TAP KIT	1
8	8-1-7-000	HOPPER VALVE KIT	1
9	8-7-0-380	7.5" POWER GATE ASSY 38"	1
10	8-3-0-510	510 PUSH PULL TUBE	1

A

8-0-0-710-7 BOM FOR THRUSH 710 WITH 7.5" GATE			
TEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-1-1-000	GATE CONTROLLER	1
2	8-1-2-000	POWER CONVERTER	1
3	8-1-3-000	POWER HARNESS	1
4	8-1-4-000	CONTROL HARNESS	1
5	8-1-4-500	PROX CABLE ASSY	1
6	8-1-4-700	DISPLAY CABLE	1
7	8-1-5-000-T	AIR TAP KIT	1
8	8-1-7-000	HOPPER VALVE KIT	1
9	8-7-0-380	7.5" POWER GATE ASSY 38"	1
10	8-3-0-710	710 PUSH PULL TUBE	1

8-0-0-502 BOM FOR AT-400, AT-402, AT-502, AT-504 WITH 5" GATE			
TEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-1-1-000	GATE CONTROLLER	1
2	8-1-2-000	POWER CONVERTER	1
3	8-1-3-000	POWER HARNESS	1
4	8-1-4-000	CONTROL HARNESS	1
5	8-1-4-500	PROX CABLE ASSY	1
6	8-1-4-700	DISPLAY CABLE	1
7	8-1-5-000-A	AIR TAP KIT	1
8	8-1-7-000	HOPPER VALVE KIT	1
9	8-2-0-380	POWER GATE ASSY 38"	1
10	8-3-0-502	502 PUSH PULL TUBE	1


8-0-0-602 BOM FOR AT-602 WITH 5" GATE			
TEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-1-1-000	GATE CONTROLLER	1
2	8-1-2-000	POWER CONVERTER	1
3	8-1-3-000	POWER HARNESS	1
4	8-1-4-000	CONTROL HARNESS	1
5	8-1-4-500	PROX CABLE ASSY	1
6	8-1-4-700	DISPLAY CABLE	1
7	8-1-5-000-A	AIR TAP KIT	1
8	8-1-7-000	HOPPER VALVE KIT	1
9	8-2-0-380	POWER GATE ASSY 38"	1
10	8-3-0-602	602 PUSH PULL TUBE	1

8-0-0-802 BOM FOR AT-802 WITH 5" GATE			
TEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-1-1-000	GATE CONTROLLER	1
2	8-1-2-000	POWER CONVERTER	1
3	8-1-3-000	POWER HARNESS	1
4	8-1-4-000	CONTROL HARNESS	1
5	8-1-4-500	PROX CABLE ASSY	1
6	8-1-4-700	DISPLAY CABLE	1
7	8-1-5-000-A	AIR TAP KIT	1
8	8-1-7-000	HOPPER VALVE KIT	1
9	8-2-0-380	POWER GATE ASSY 38"	1
10	8-3-0-802	802 PUSH PULL TUBE	1

8-0-0-502-7 BOM FOR AT-400, AT-402, AT-502, AT-504 WITH 7.5" GATE			
TEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-1-1-000	GATE CONTROLLER	1
2	8-1-2-000	POWER CONVERTER	1
3	8-1-3-000	POWER HARNESS	1
4	8-1-4-000	CONTROL HARNESS	1
5	8-1-4-500	PROX CABLE ASSY	1
6	8-1-4-700	DISPLAY CABLE	1
7	8-1-5-000-A	AIR TAP KIT	1
8	8-1-7-000	HOPPER VALVE KIT	1
9	8-7-0-380	7.5" POWER GATE ASSY 38"	1
10	8-3-0-502	502 PUSH PULL TUBE	1

8-0-0-602-7 BOM FOR AT-602 WITH 7.5" GATE			
TEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-1-1-000	GATE CONTROLLER	1
2	8-1-2-000	POWER CONVERTER	1
3	8-1-3-000	POWER HARNESS	1
4	8-1-4-000	CONTROL HARNESS	1
5	8-1-4-500	PROX CABLE ASSY	1
6	8-1-4-700	DISPLAY CABLE	1
7	8-1-5-000-A	AIR TAP KIT	1
8	8-1-7-000	HOPPER VALVE KIT	1
9	8-7-0-380	7.5" POWER GATE ASSY 38"	1
10	8-3-0-602	602 PUSH PULL TUBE	1

8-0-0-802-7 BOM FOR AT-802 WITH 7.5" GATE			
TEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-1-1-000	GATE CONTROLLER	1
2	8-1-2-000	POWER CONVERTER	1
3	8-1-3-000	POWER HARNESS	1
4	8-1-4-000	CONTROL HARNESS	1
5	8-1-4-500	PROX CABLE ASSY	1
6	8-1-4-700	DISPLAY CABLE	1
7	8-1-5-000-A	AIR TAP KIT	1
8	8-1-7-000	HOPPER VALVE KIT	1
9	8-7-0-380	7.5" POWER GATE ASSY 38"	1
10	8-3-0-802	802 PUSH PULL TUBE	1

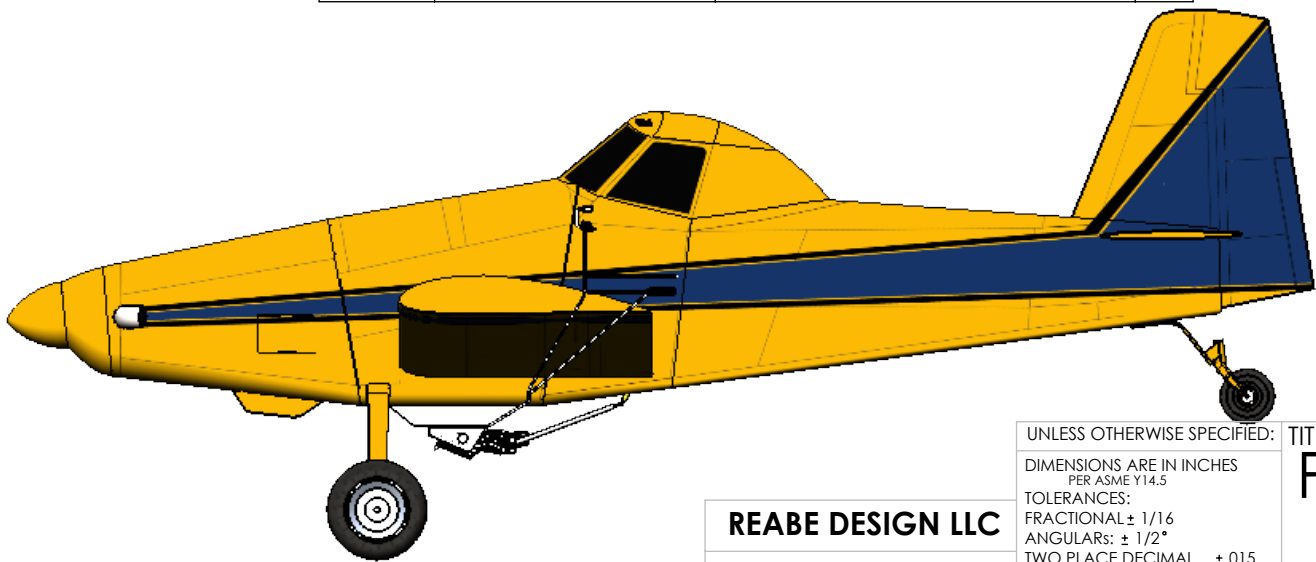

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL ± 1/16
ANGULARS: ± 1/2°
TWO PLACE DECIMAL ±.015
THREE PLACE DECIMAL ±.005

MATERIAL

SPEC

TITLE:

POWER GATE INSTALLATION

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	B	8-0-0-TAB	6
CHECKED	MVA	09/30/2019			


DO NOT SCALE DRAWING SCALE: 1:64 WEIGHT: SHEET 2 OF 2

5" GATE MOUNTING D

NOTE:

1. 38" WIDE 5" GATE MOUNTING, PROCESS
BOLT ATTACH ANGLES TOGETHER BACK TO BACK (THIS MAKES A T BRACKET)
BOLT ANGLE TO STOCK GATE ANGLE HOLES. (THIS USES HOLES ON LEFT BRACKETS 8-2-1-008)
MATCH DRILL REMAINING 10 HOLES THROUGH NEW ANGLES. (THE RIGHT SIDE BRACKETS 8-2-1-007)
REMOVE ANGLES, CLEAN HOLES AND INSTALL ANGLES WITH SEALANT PER INSTALL INSTRUCTIONS.
2. 41" WIDE 5" GATE MOUNTING, PROCESS
MOUNT POWER GATE ASSY USING 2 OUTBOARD 5/16" PIVOT BOLTS
THIS WILL HOLD THE UNIT UP IN PLACE AND ALLOW YOU DRILL UPPER AND LOWER HOLES
ON THE 8-2-1-007 RIGHT SIDE BRACKETS
PULL THE POWER GATE ASSY DOWN BY REMOVING THE 2 OUTBOARD 5/16" PIVOT BOLTS
BOLT ATTACH ANGLES TOGETHER BACK TO BACK (THIS MAKES A T BRACKET)
BOLT ANGLE TO NEW DRILLED HOLES. (THIS USES HOLES ON RIGHT BRACKETS 8-2-1-007)
MATCH DRILL REMAINING HOLES THROUGH NEW ANGLES.
REMOVE ANGLES, CLEAN HOLES AND INSTALL ANGLES WITH SEALANT PER INSTALL INSTRUCTIONS.

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	5/4/2018	TRR	TRR
B	ADJUST GATE WIDTH FOR STOCK HOLES	4/1/2019	TRR	TRR
C	UPDTAE TITLE BLOCKS, ADD LABELS TO CALLED OUT PARTS ON VIEW	10/10/2019	TRR	KMT
D	ADDED SECOND SHEET AND INFO FOR 7.5" GATE ASSEMBLY	1/11/2021	TRR	TRR
5	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/05/2025	TRR	TRR

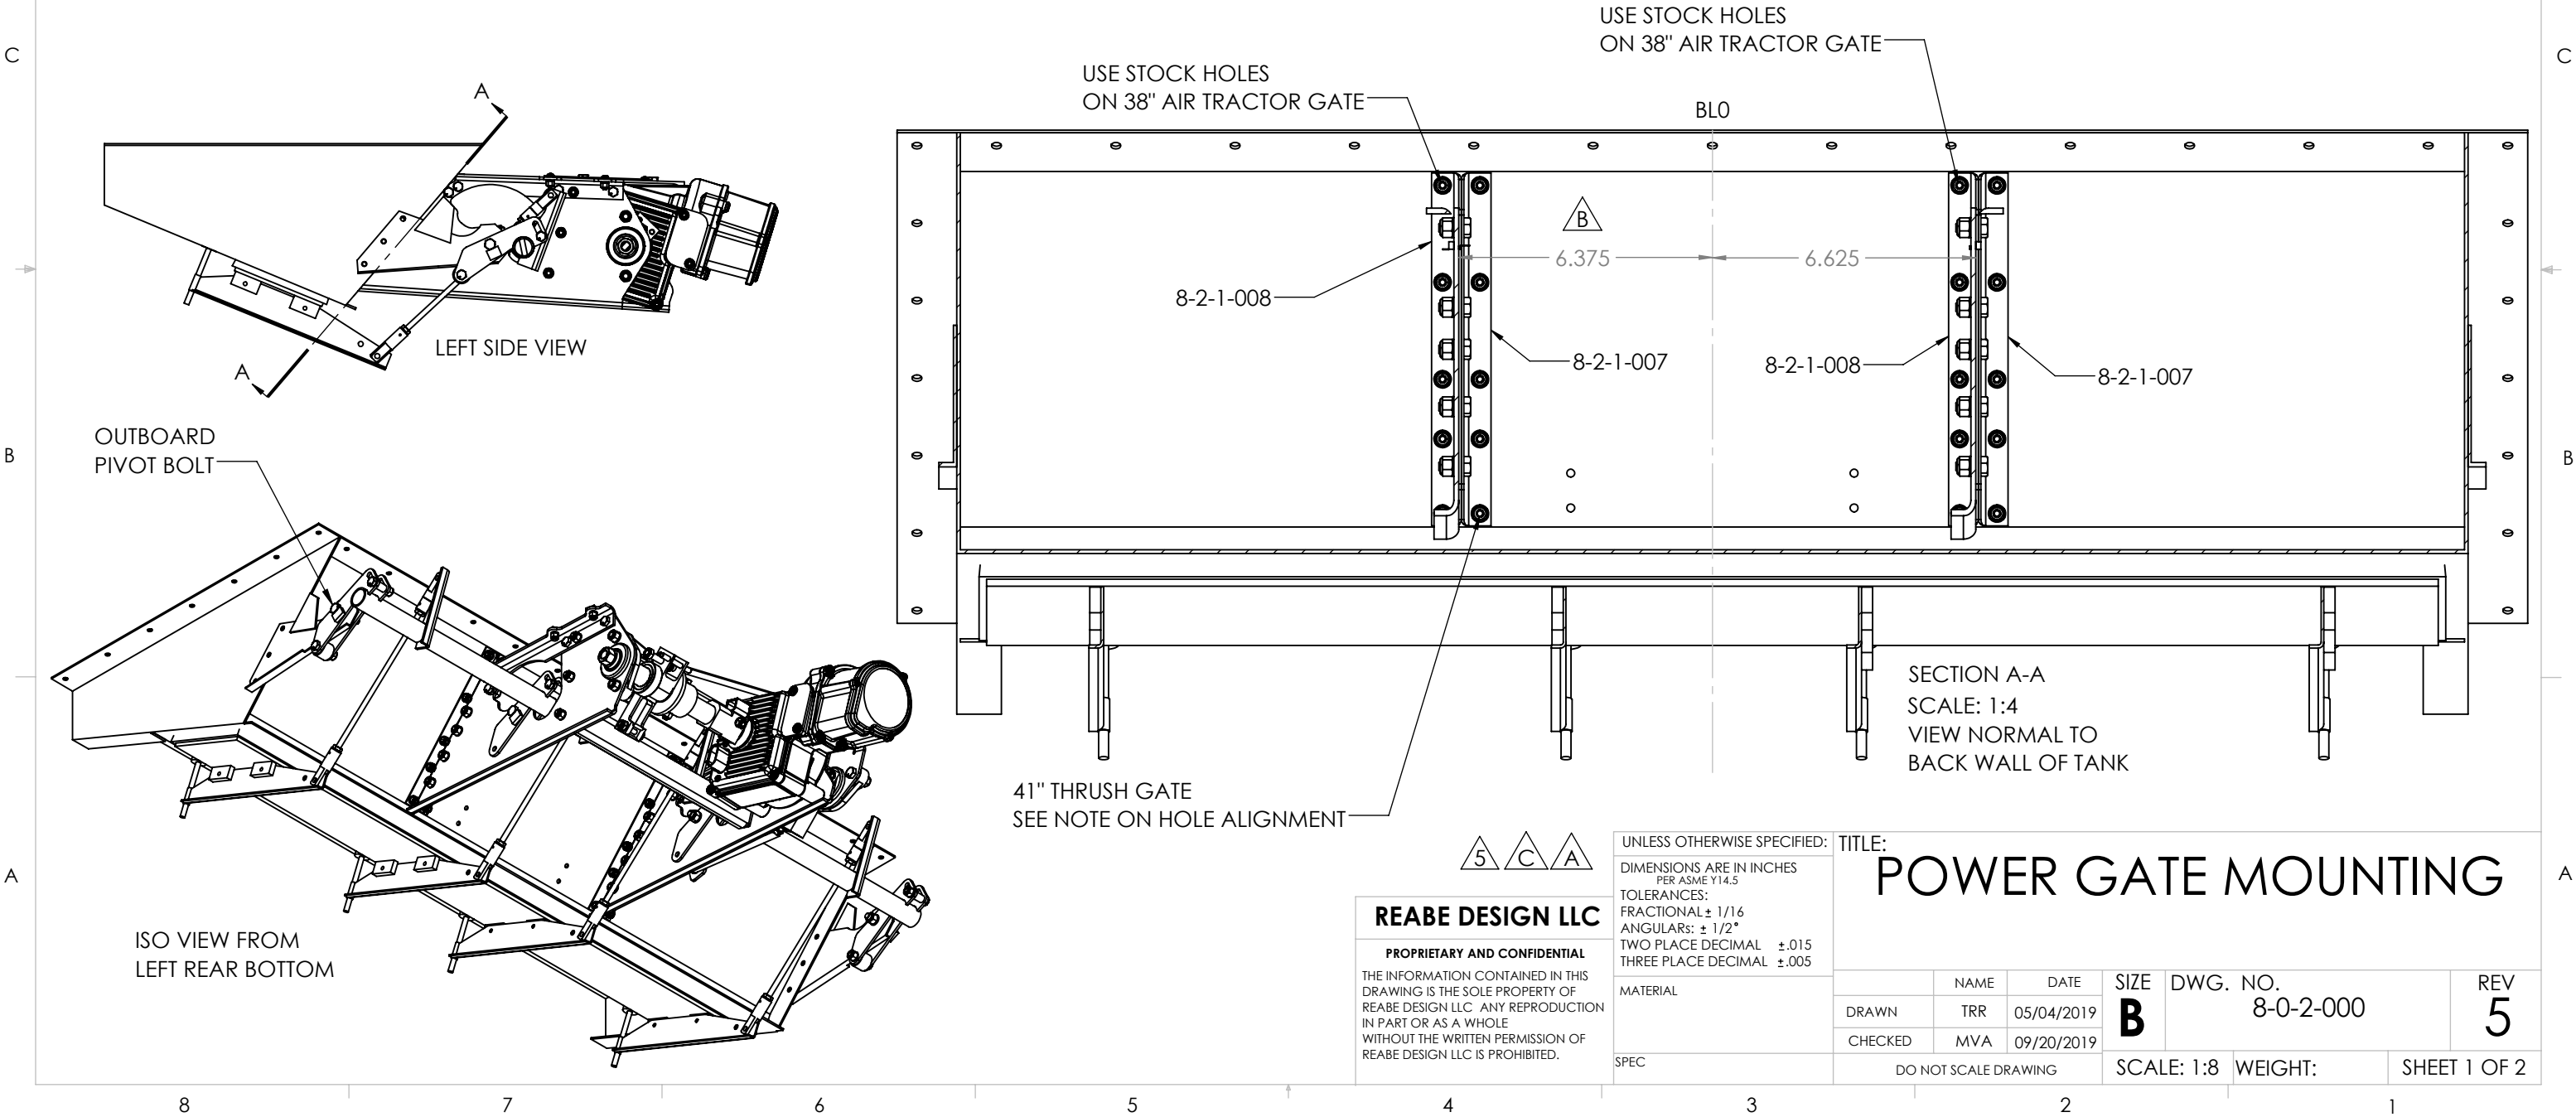


7.5" GATE MOUNTING

NOTE:

- 7.5" GATE MOUNTING, PROCESS
REMOVE DRILL SHIPPING PLATE (8-7-1-999) FROM 7.5" POWER GATE ASSY
BOLT DRILL/SHIPPING PLATE (8-7-1-999) TO STOCK 1/4" GATE HOLES.
MATCH DRILL (10) 3/16" HOLES THROUGH THE GATEBOX.
REMOVE DRILL/SHIPPING PLATE, CLEAN HOLES
INSTALL MOUNT BRACKET ANGLES (8-7-1-006) WITH SEALANT PER INSTALL INSTRUCTIONS.

ISO VIEW FROM
RIGHT REAR BOTTOM
7.5" GATE WITH EXTRA
SUPPORTS REMOVED

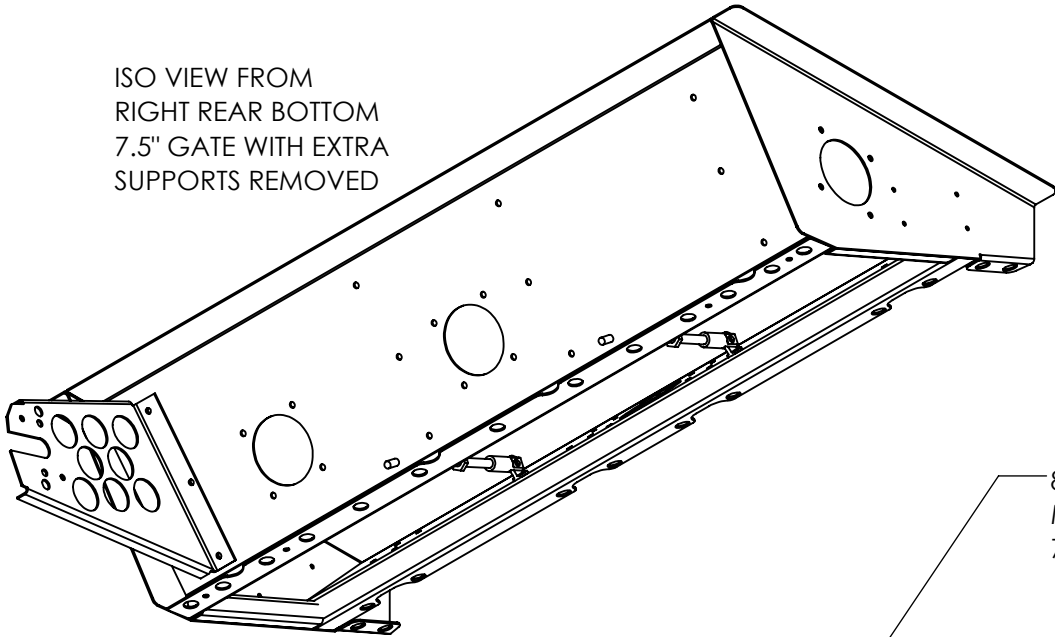

8-7-1-999 DRILL/SHIPPING PLATE
MOUNTED TO BACKSIDE OF
7.5" GATEBOX

(10) $\varnothing$.188
DRILL THRU

.938

7.700

6.200


3.850

1.500



1.360

.242

VIEW FROM BACK NORMAL TO BACKSIDE OF GATEBOX
SCALE 1:4
7.5" GATE WITH DRILL SHIPPING PLATE INSTALLED

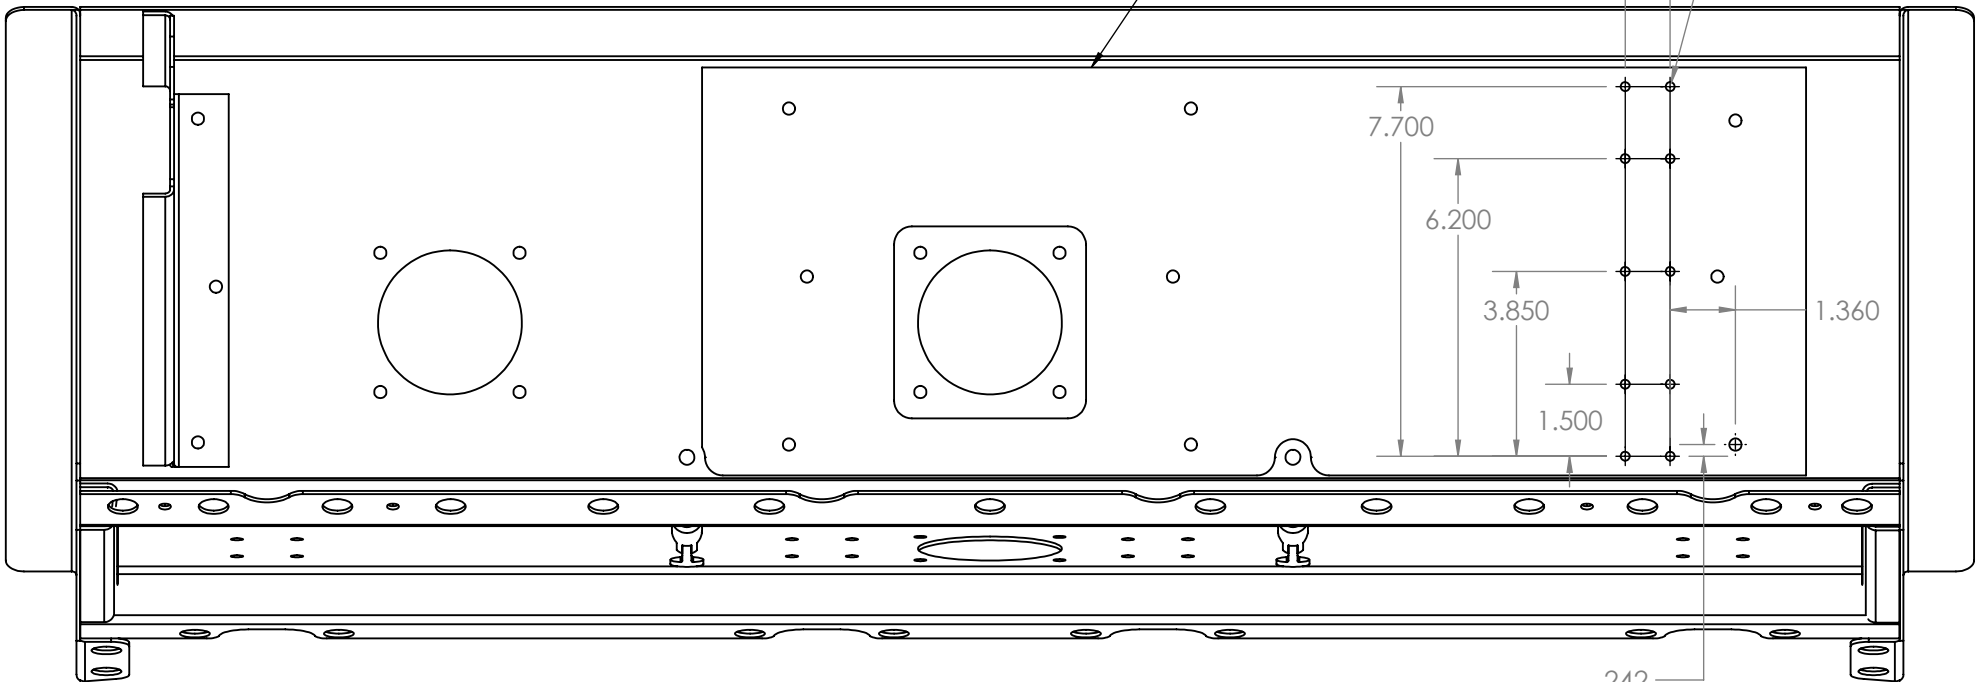

LEFT SIDE VIEW
POWER ASSEMBLY ATTACHED

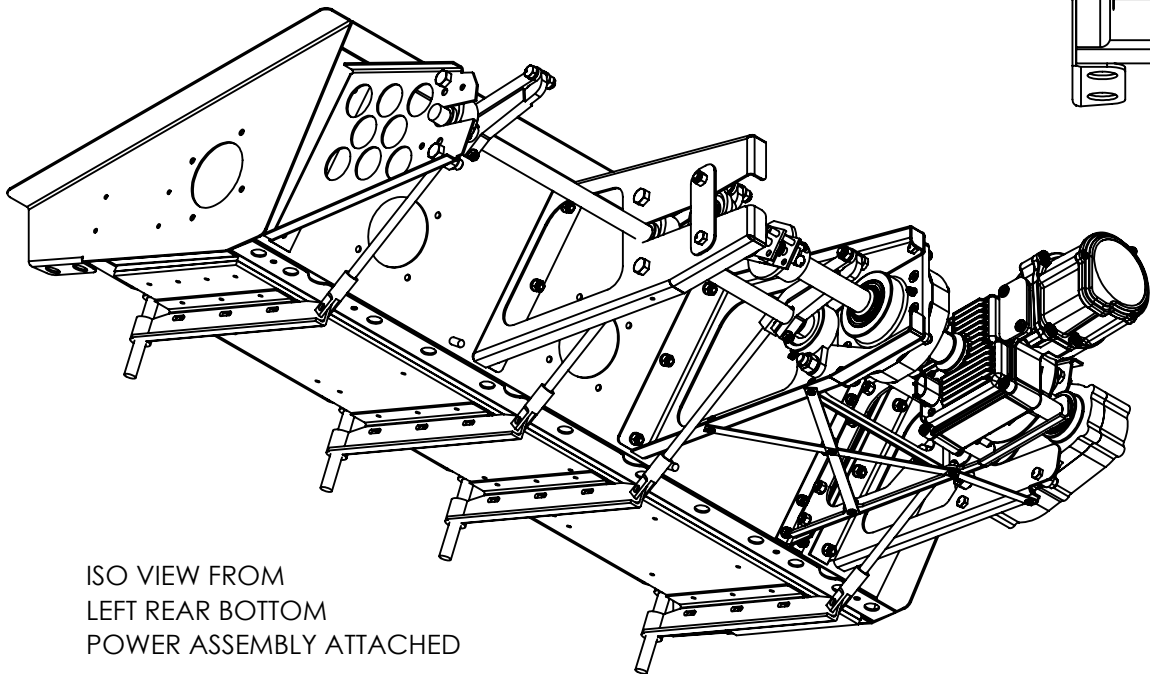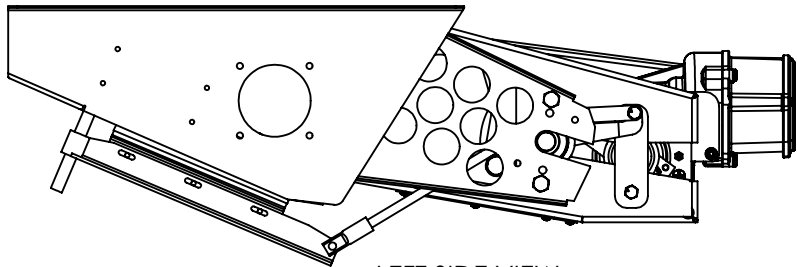

ISO VIEW FROM
LEFT REAR BOTTOM
POWER ASSEMBLY ATTACHED

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5

TOLERANCES:

FRACTIONAL $\pm$ 1/16

ANGULARS: $\pm$ 1/2°

TWO PLACE DECIMAL $\pm$.015

THREE PLACE DECIMAL $\pm$.005

MATERIAL


SPEC

TITLE:

POWER GATE MOUNTING

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2019	B	8-0-2-000	5
CHECKED	MVA	09/20/2019			
DO NOT SCALE DRAWING			SCALE: 1:8	WEIGHT:	SHEET 2 OF 2

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	ORIGINAL RELEASE	5/4/2018	TRR
B	CHANGED TO CONTROLLER	6/1/2018	TRR
3	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/05/2025	TRR

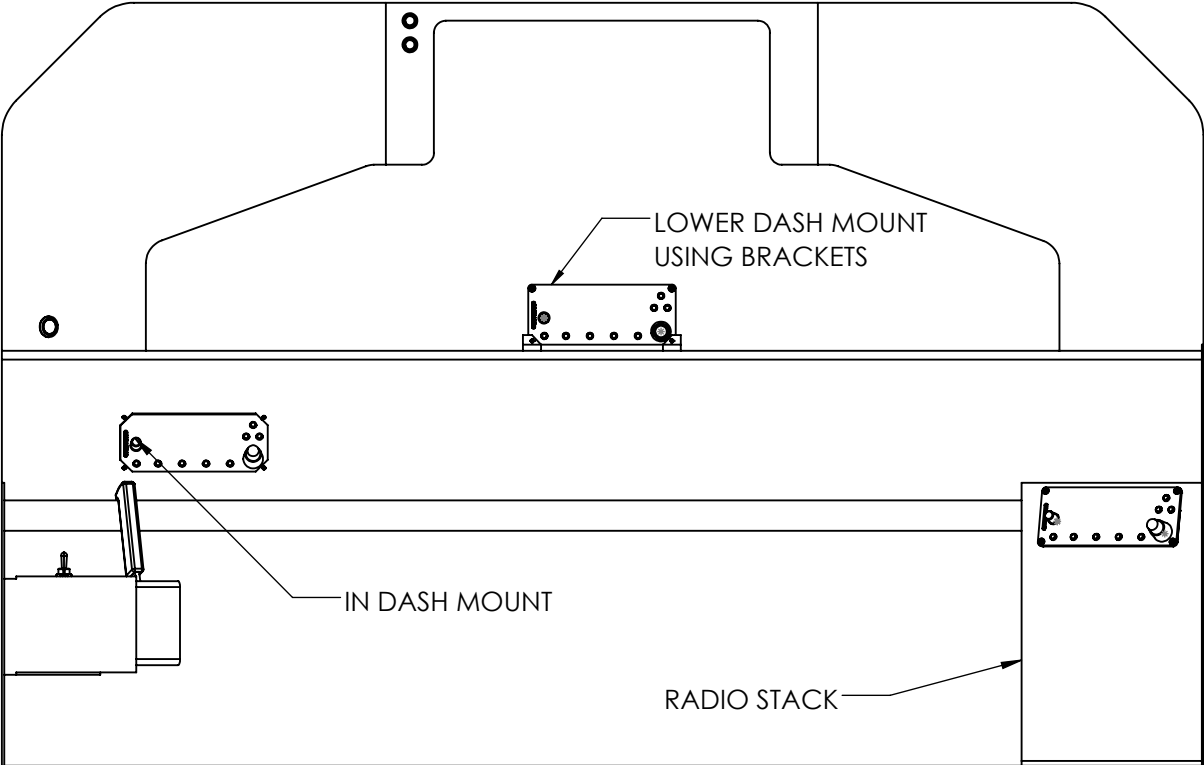

3 B A


REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS
 DRAWING IS THE SOLE PROPERTY OF
 REABE DESIGN LLC. ANY
 REPRODUCTION IN PART OR AS A WHOLE
 WITHOUT THE WRITTEN PERMISSION OF
 REABE DESIGN LLC IS
 PROHIBITED.

UNLESS OTHERWISE SPECIFIED:	TITLE:
DIMENSIONS ARE IN INCHES	
TOLERANCES:	
FRACTIONAL $\pm 1/16$	
ANGULARS: $\pm 1/2^\circ$	
TWO PLACE DECIMAL $\pm .015$	
THREE PLACE DECIMAL $\pm .005$	
MATERIAL	
DO NOT SCALE DRAWING	

CONTROLLER MOUNTING
 TYP.

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	A	8-0-3-000	3
CHECKED	TRR	05/04/2018			
			SCALE: 1:8	WEIGHT:	SHEET 1 OF 3

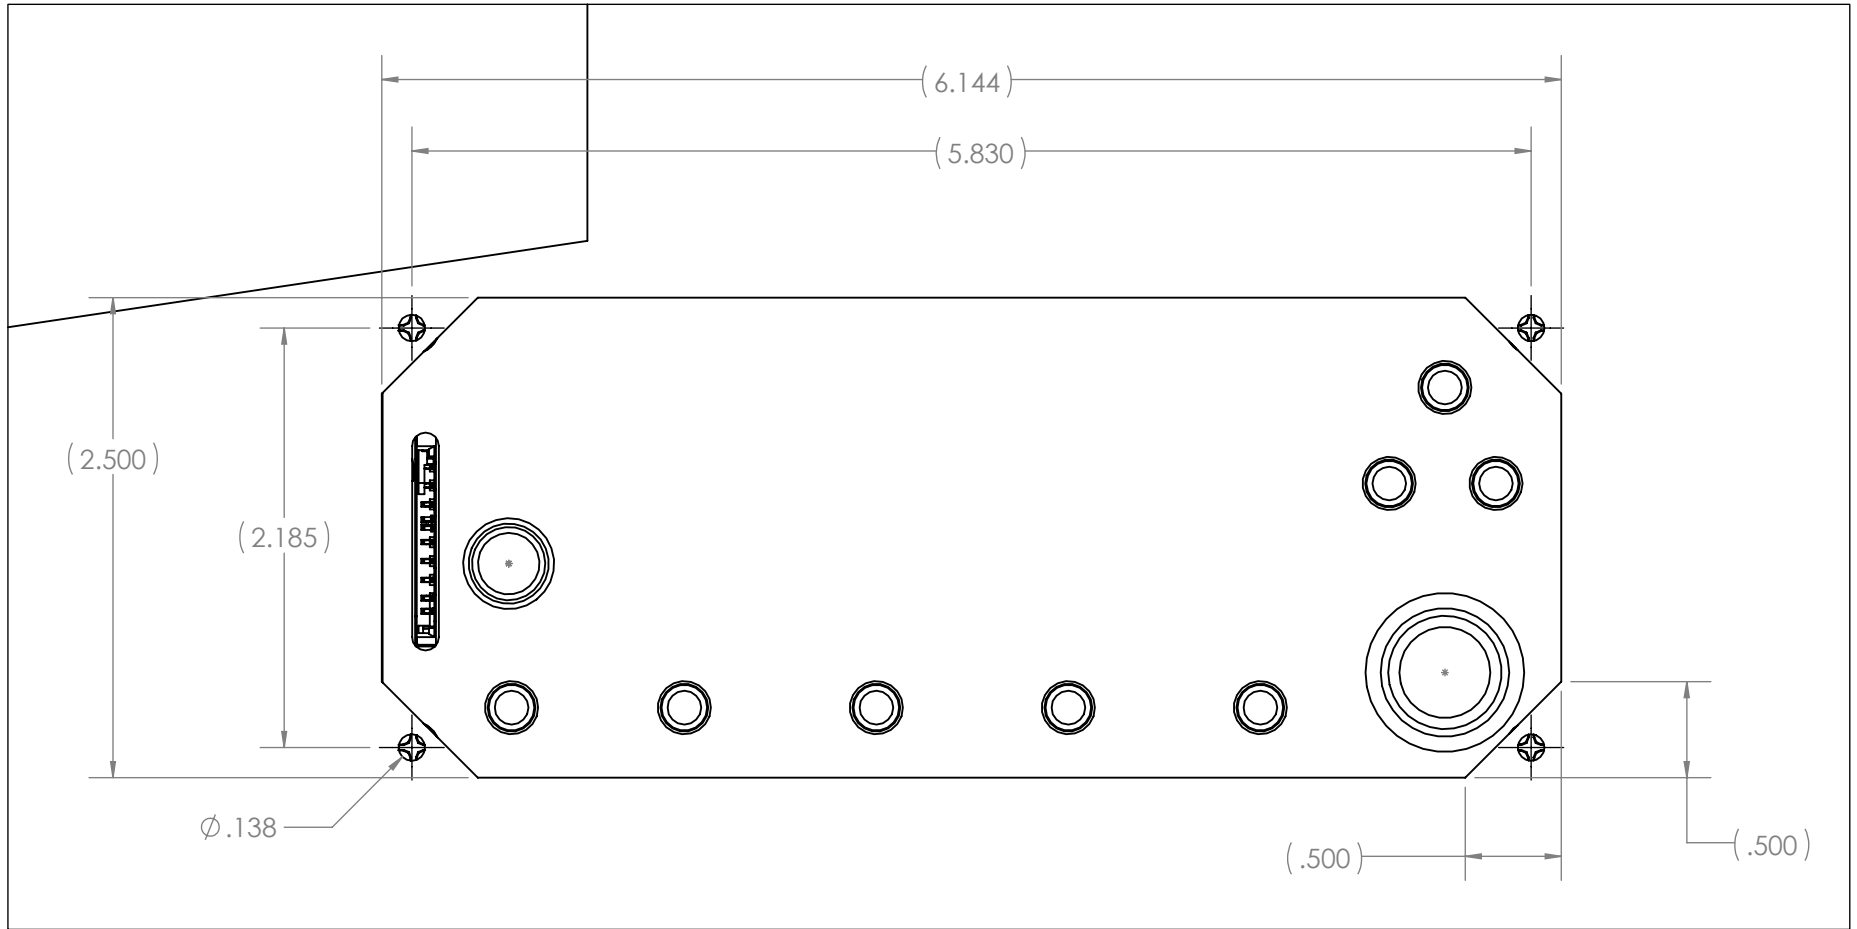

NOTE;
PAINT CUTOUT PER
AIRCRAFT MAINTENANCE
MANUAL

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS
PROHIBITED.

REABE DESIGN LLC

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL


DO NOT SCALE DRAWING

TITLE:

**CONTROLLER MOUNTING
TYP.**


	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	A	8-0-3-000	3
CHECKED	TRR	05/04/2018			
			SCALE: 1:1	WEIGHT:	SHEET 2 OF 3

RIGHT
MOUNTING
BRACKET

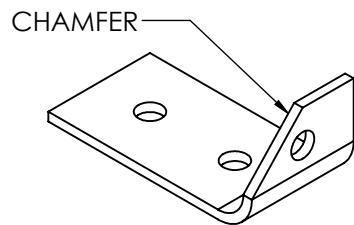


.063 STK
2024-T3


R.19

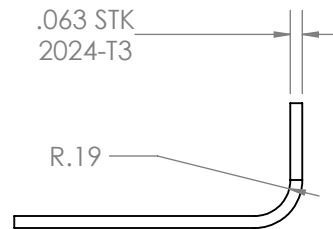

MOUNTING BRACKET
MATERIAL: 2024-T3


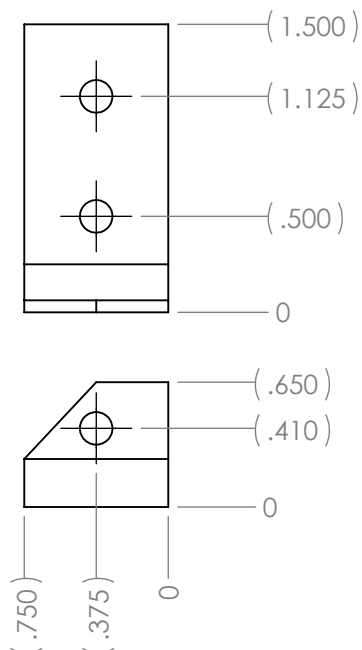


LEFT
MOUNTING
BRACKET

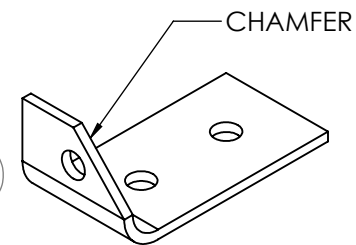

.063 STK
2024-T3

R.19

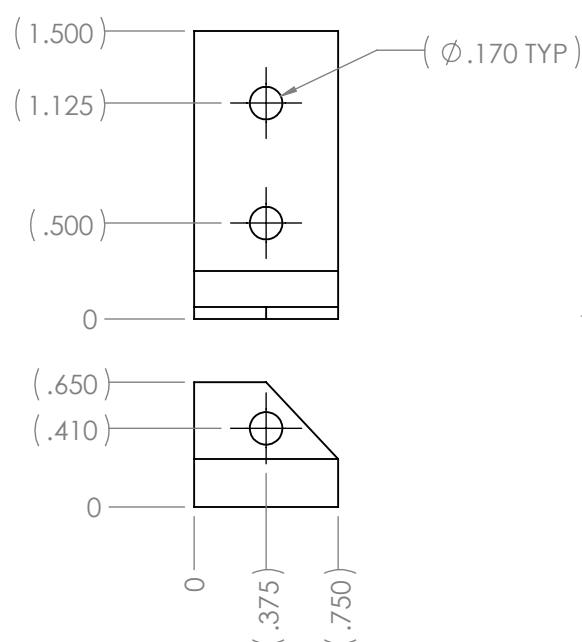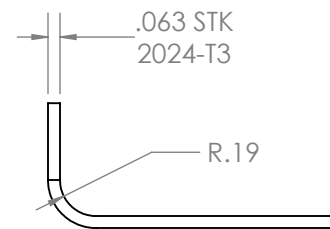

MOUNTING BRACKETS
BOLTED TO DASH USING:

AN526-632 SCREWS
AN365-632 NUTS

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS
PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL

DO NOT SCALE DRAWING

TITLE:

CONTROLLER MOUNTING
TYP.

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	A	8-0-3-000	3
CHECKED	TRR	05/04/2018			
SCALE: 1:8			WEIGHT:		SHEET 3 OF 3

REABE DESIGN LLC


5

4

3

2

1

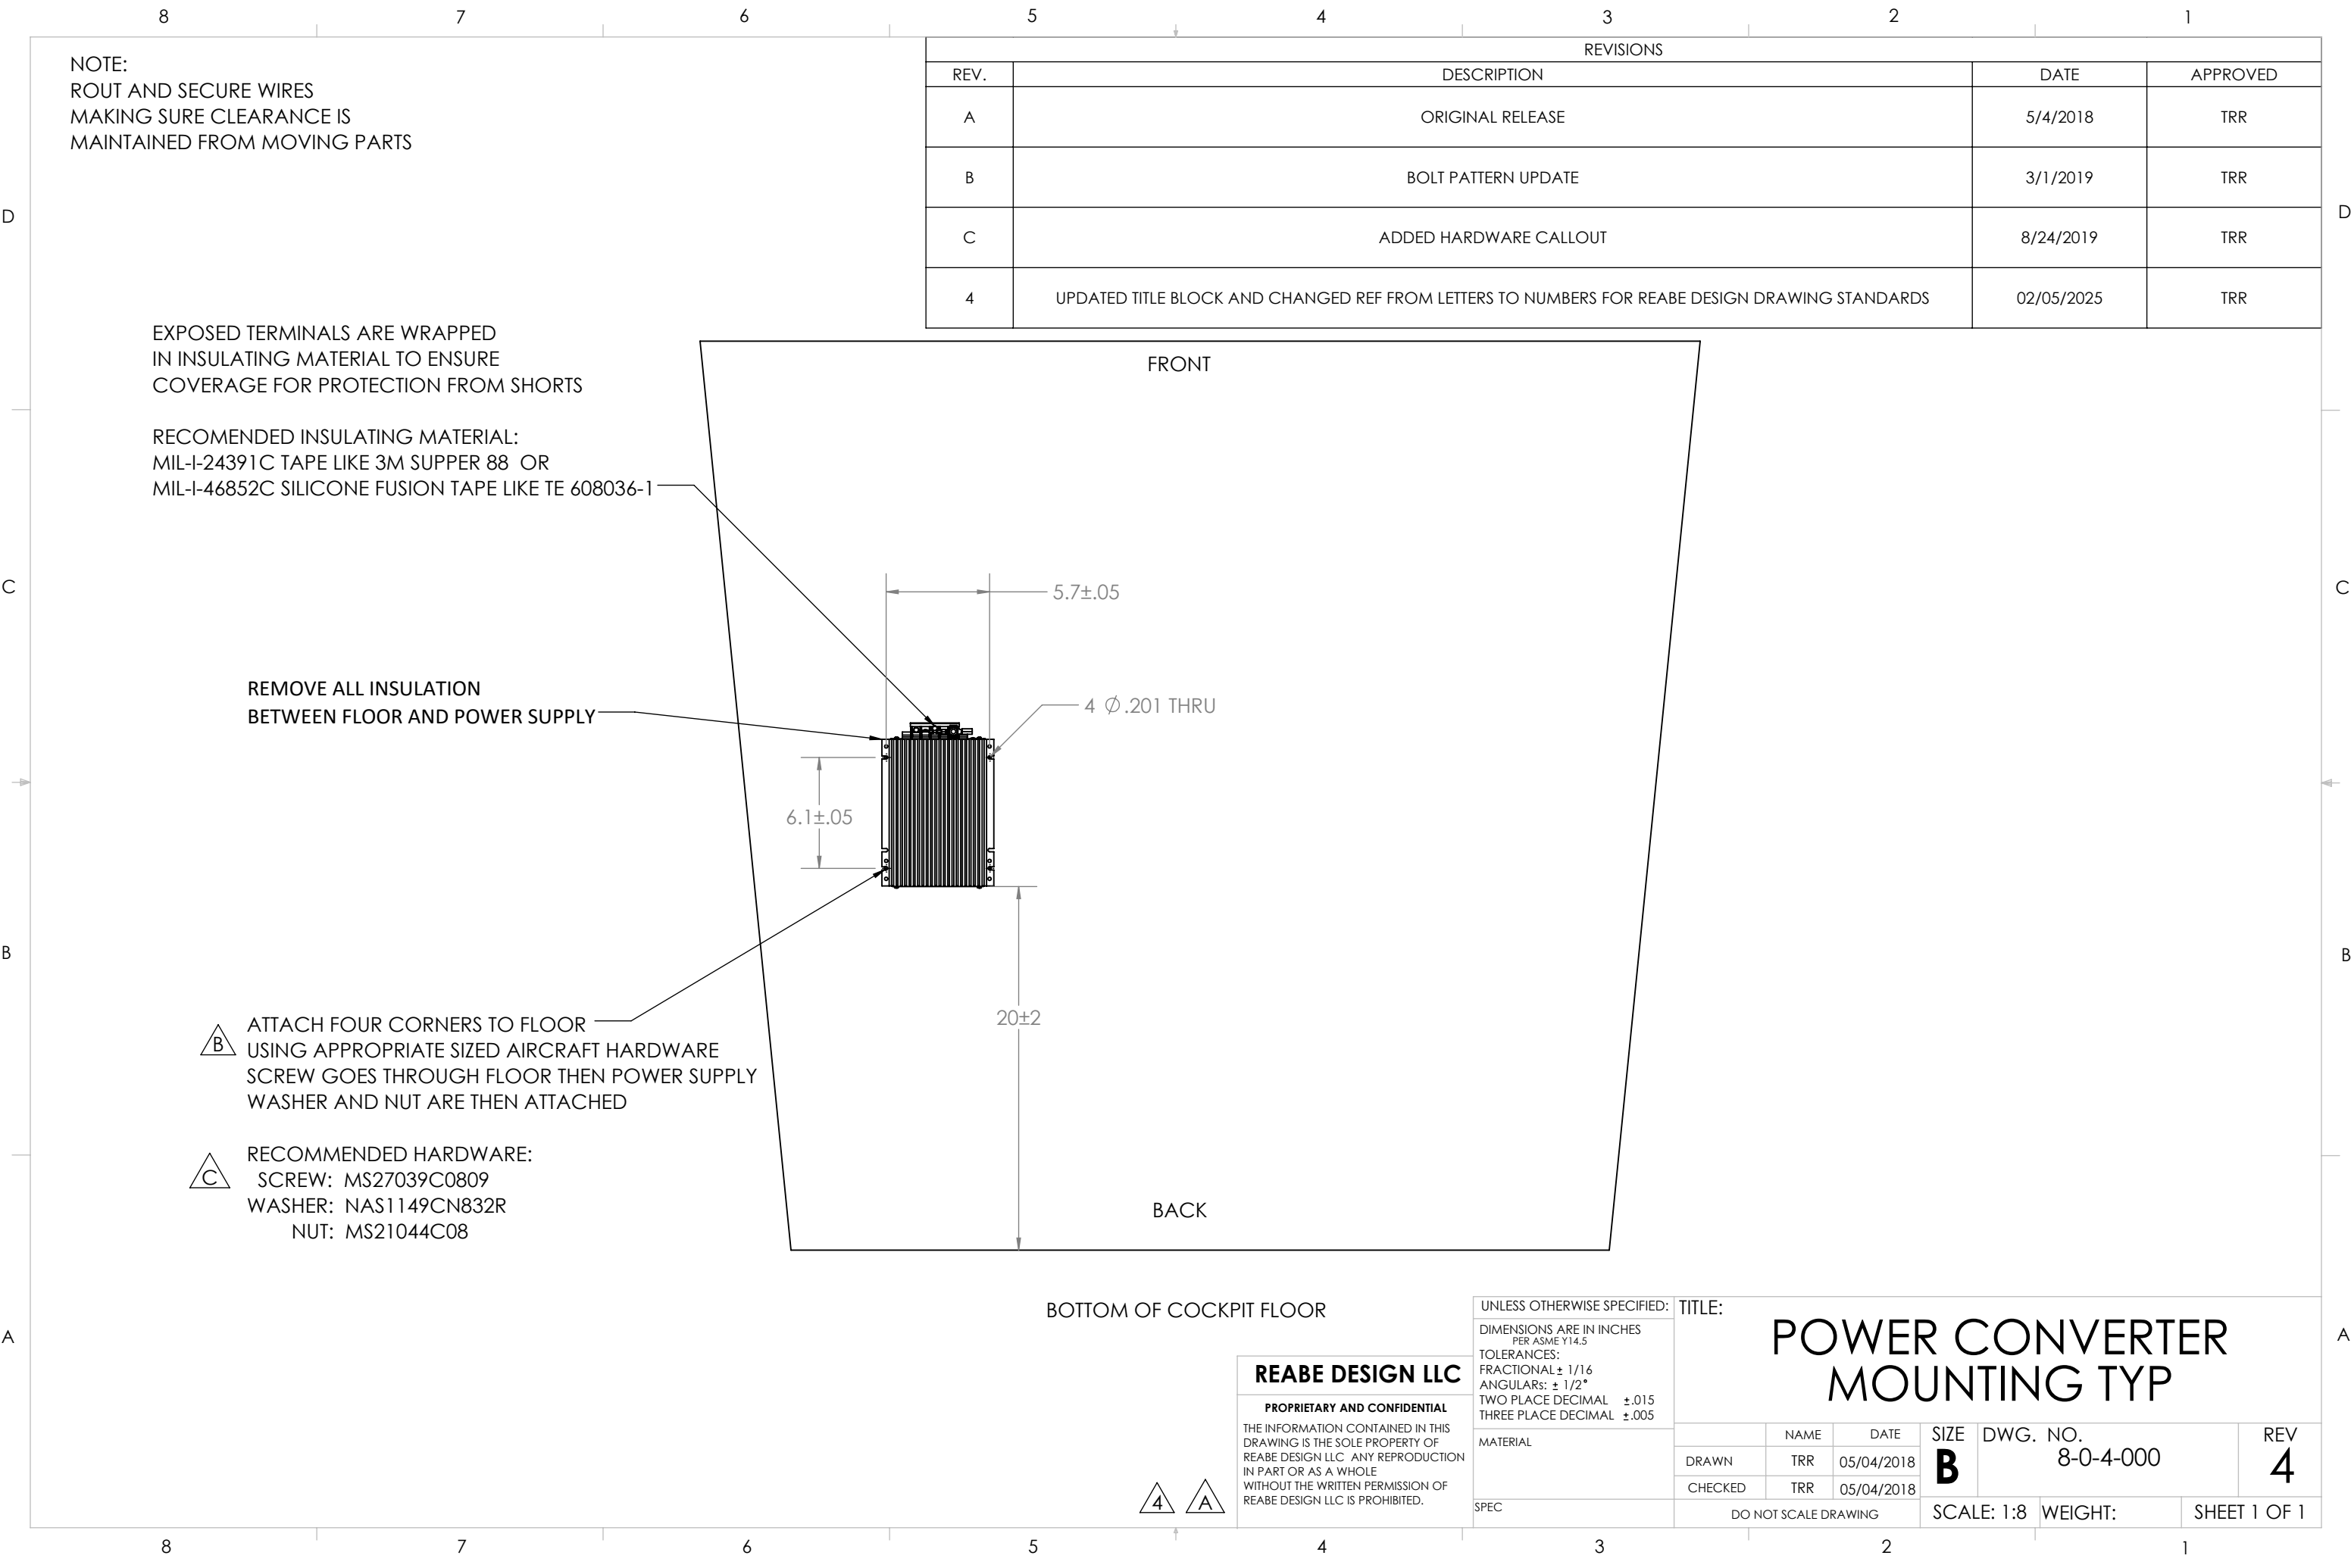

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	ORIGINAL RELEASE	5/4/2018	TRR
B	BOLT PATTERN UPDATE	3/1/2019	TRR
C	ADDED HARDWARE CALLOUT	8/24/2019	TRR
4	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/05/2025	TRR


REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:	
DIMENSIONS ARE IN INCHES PER ASME Y14.5	
TOLERANCES:	
FRACTIONAL: ± 1/16	
ANGULARS: ± 1/2°	
TWO PLACE DECIMAL ±.015	
THREE PLACE DECIMAL ±.005	
MATERIAL	
SPEC	

TITLE:					
POWER CONVERTER MOUNTING TYP					
DRAWN		NAME	DATE	SIZE	DWG. NO.
CHECKED		TRR	05/04/2018	B	8-0-4-000
DO NOT SCALE DRAWING		SCALE: 1:8		WEIGHT:	SHEET 1 OF 1

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	ORIGINAL RELEASE	5/4/2018	TRR
B	ADDED HOPPER VALVE, & PROX SENSOR	3/28/2019	TRR
C	ADDED SKIN PENETRATION AND ROUTING DETAIL	8/26/2019	TRR
D	ADDED SHEET SHOWING SWITCHES IN COCKPIT	10/3/2019	TRR
5	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/05/2025	TRR

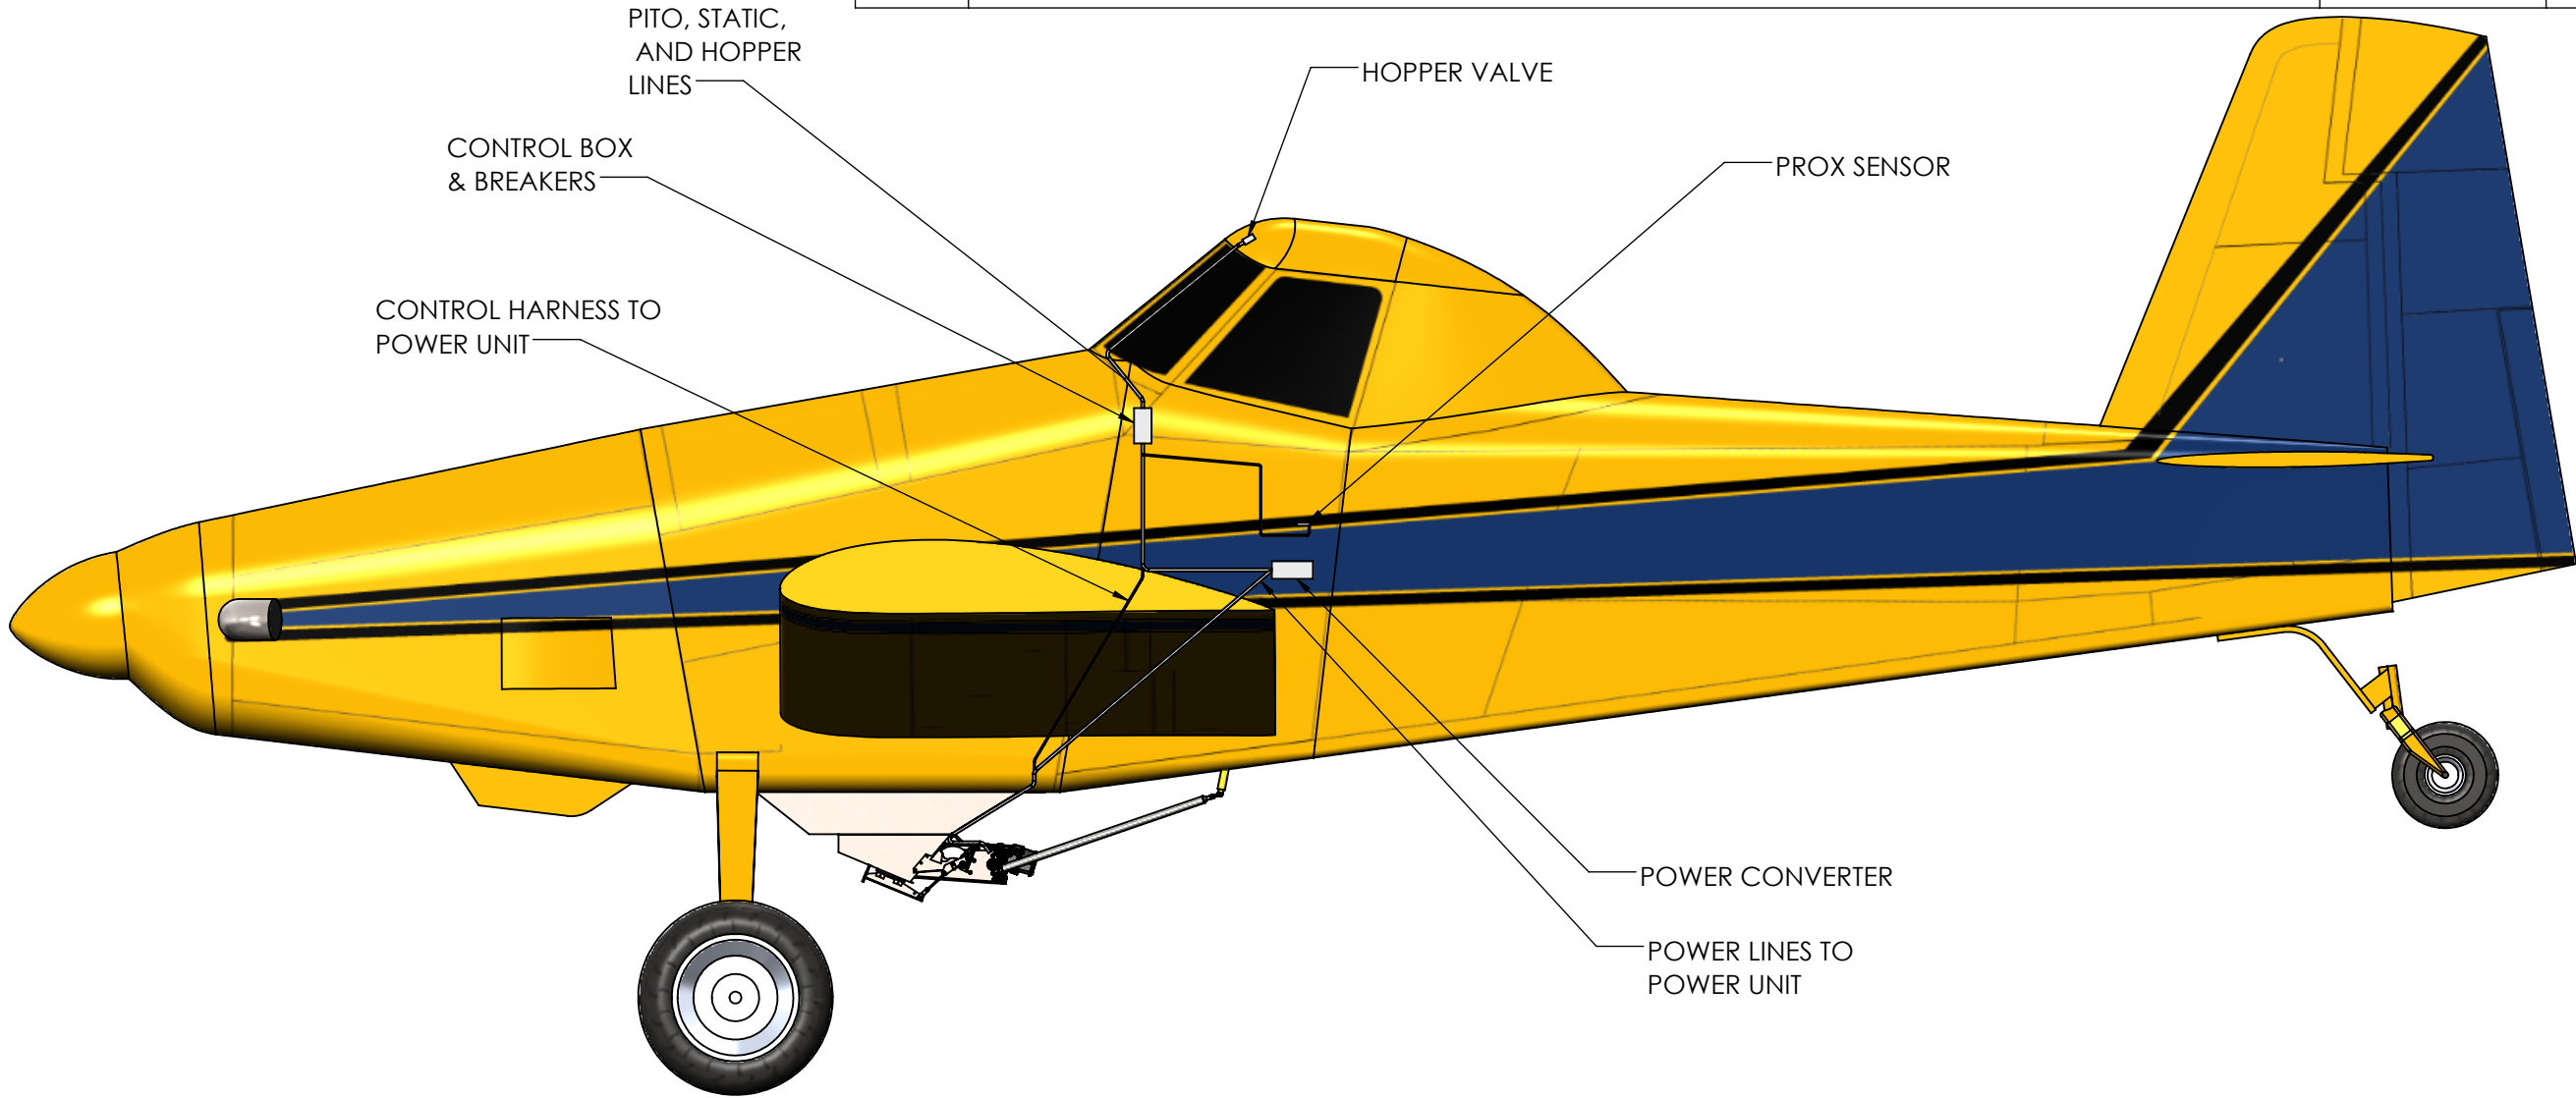

A B C D 5

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL

SPEC

TITLE:

WIRE ROUTING & INSTALLATION

DRAWN	TRR	DATE	05/04/2018	SIZE	B	DWG. NO.	8-0-5-000	REV	5
CHECKED	TRR	DATE	05/04/2018	SCALE	1:32	WEIGHT		SHEET	1 OF 10

DO NOT SCALE DRAWING

SCALE: 1:32 WEIGHT:

SHEET 1 OF 10

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.



NOTE;
WIRE PATH FROM POWER UNIT CONNECTORS TO FIRST CLAMP

INPUT SHAFT AND INPUT ARM 1 NOT SHOWN FOR CLARITY
SHOWN ON A 502 BUT ROUTING FROM POWER UNIT TO
FIRST CLAMP IS SIMULAR FOR ALL MODELS OF AIRCRAFT

CLAMP IS MOUNTED OFF 8-2-1-006 "CROSS BRACE"
POSITION CLAMP TO KEEP WIRES CLEAR OF
INPUT SHAFT AND INPUT ARM

MOUNTING HARDWARE FOR FIRST CLAMP
BRACKET, SUPPORT CLAMP: AN743C12
CLAMP: MS21919WCG6
SCREWS: MS27039C1-08
WASHERS: NAS1149C0316R
NUTS: MS21044C3

WIRES ARE ROUTED FROM POWER CONNECTOR AND DATA CONNECTOR
INBOARD AND FORWARD TOWARD FIRST CLAMP

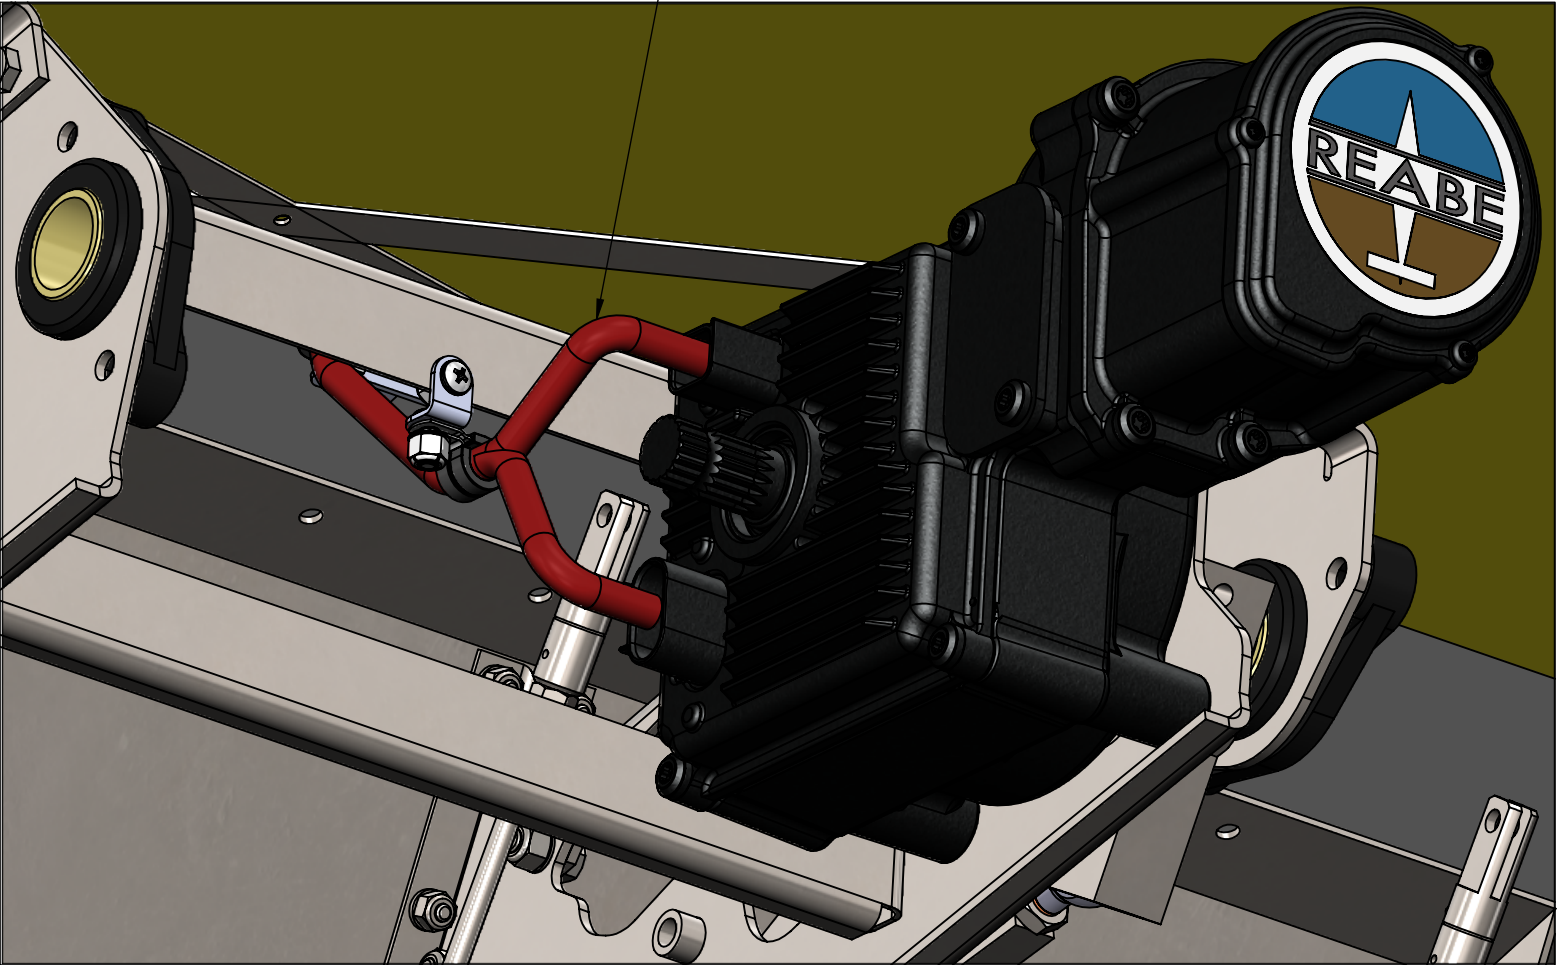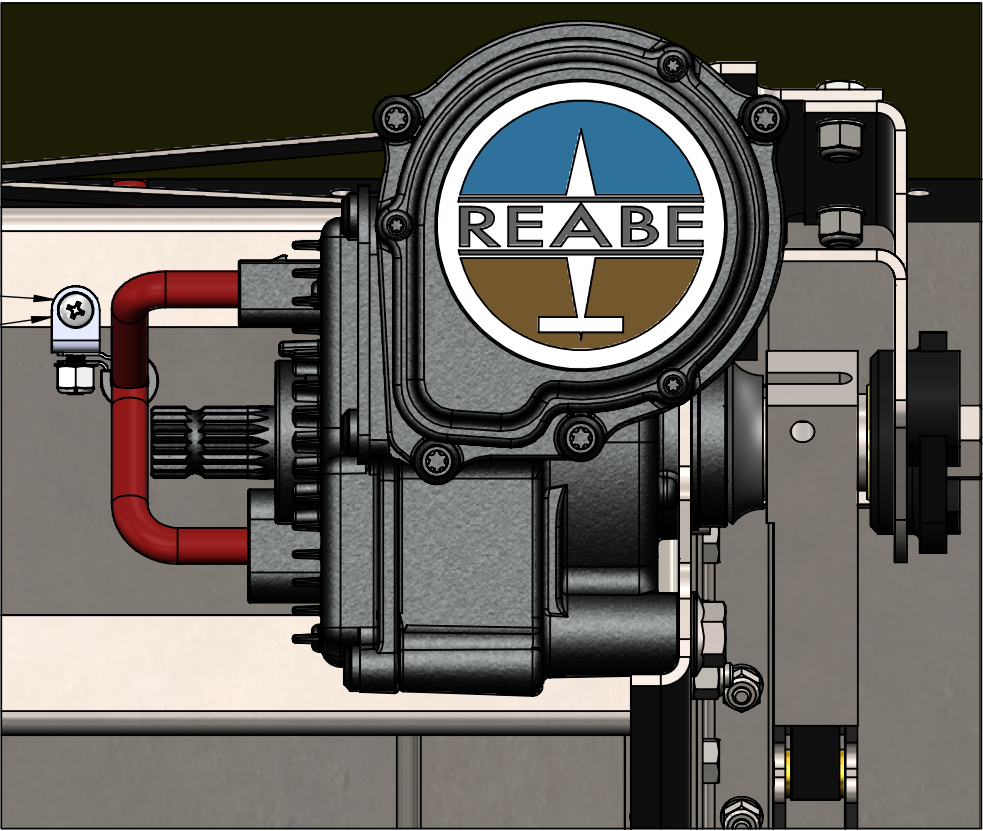

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL

SPEC

TITLE:

WIRE ROUTING &
INSTALLATION



DRAWN		NAME	DATE	SIZE	DWG. NO.	REV
CHECKED		TRR	05/04/2018	B	8-0-5-000	5
DO NOT SCALE DRAWING				SCALE: 1:2	WEIGHT:	SHEET 2 OF 10

NOTE;
AIR TRACTOR 400, 402, 502, 504 AND
THRUSH 510, 550 WIRE ROUTING
WIRE GOES FROM FIRST CLAMP ON CROSS BRACE DIRECTLY UP INTO BELLY SKIN

SEE DETAIL "SKIN PENETRATION" FOR RECOMENDED PASS THROUGH
WIRE CAN BE ATTACHED TO STRUCTURE USING TY525MX, TY528MX OR APPROPRATE MS21919W CLAMP
AT LOCATIONS SHOWN

ROUTE AND SECURE WIRE TO PREVENT INTERFERANCE WITH MOVING PARTS
AND TO PREVENT THE WIRE BEING PINCHED OR CHAFED
SECURE WIRE PER AC43.13-1B CHAPTER 11

HOLE IN BELLY SKIN
2" FORWARD OF STEP IN BELLY SKIN
IN LINE WITH FIRST CLAMP ON "CROSS BRACE"

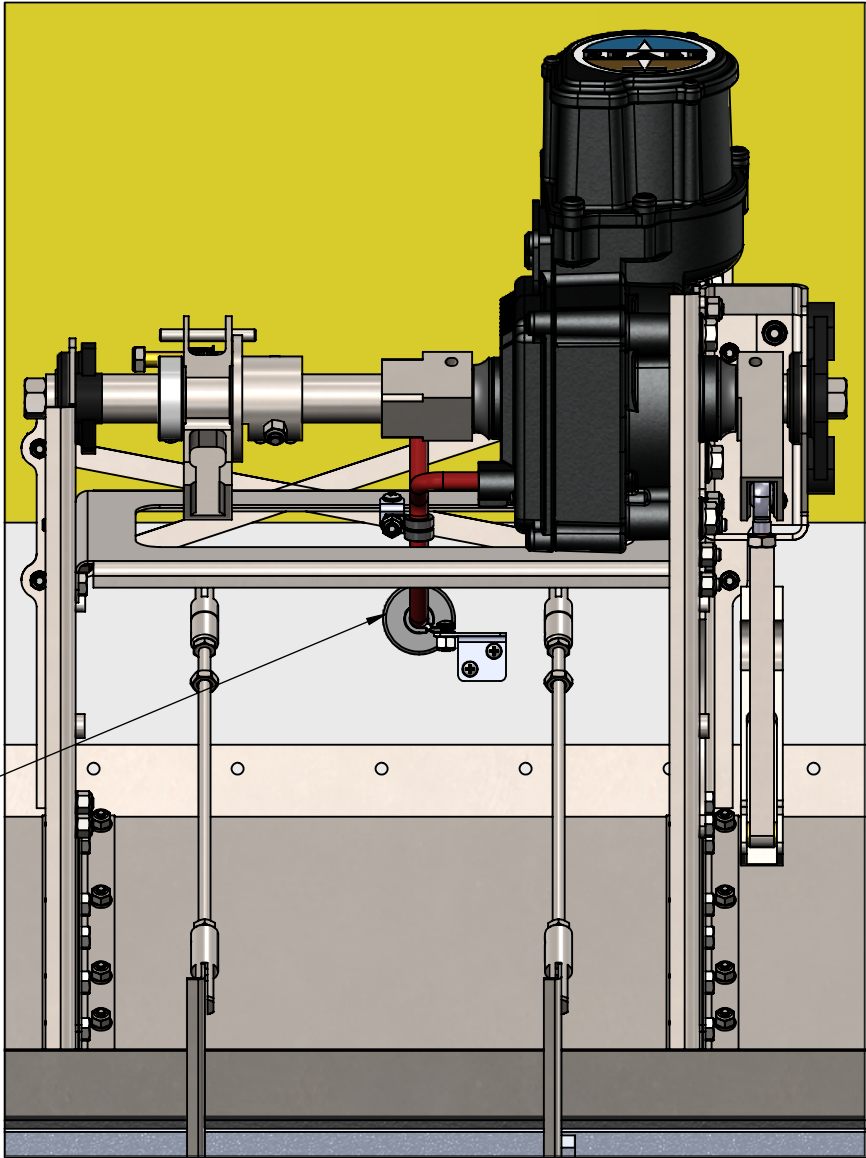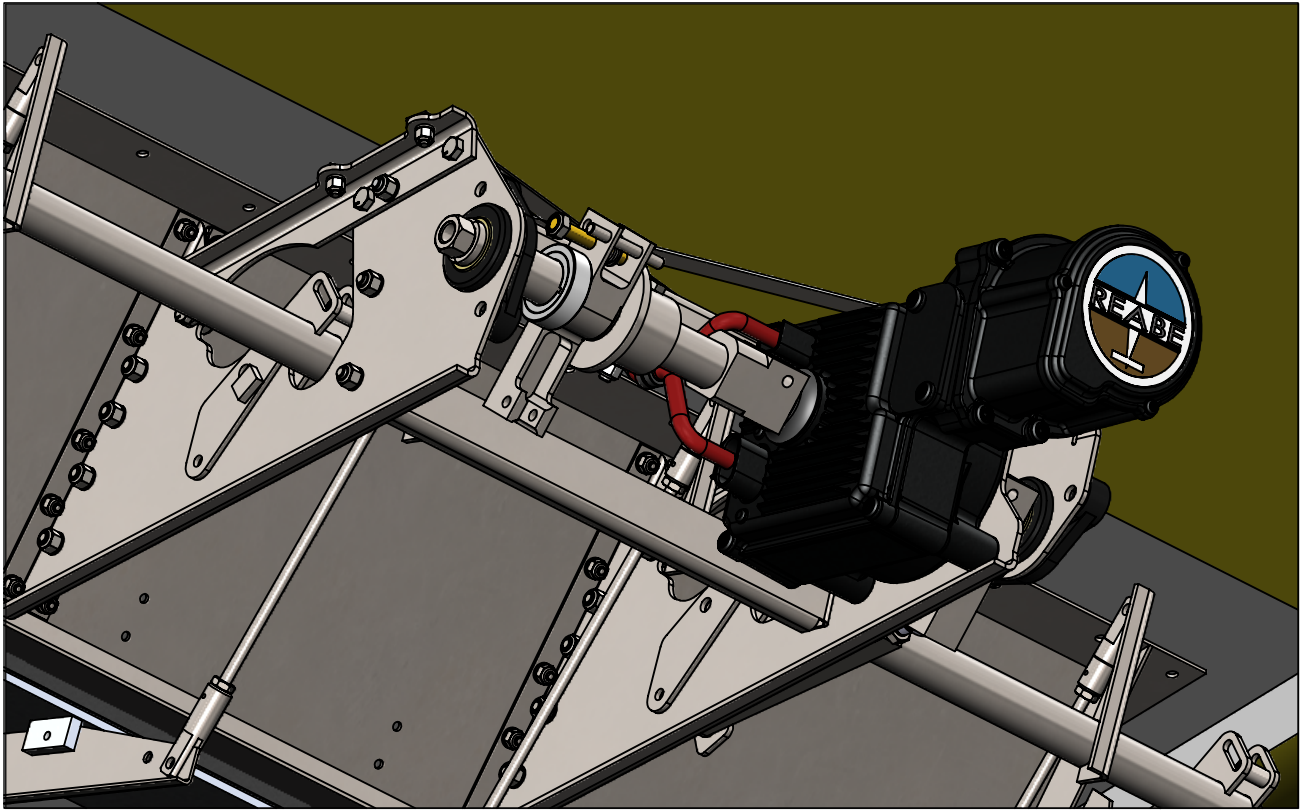

BOTTOM VIEW OF 502 AND 510 WIRE ROUTING
BELL CRANK TORQUE TUBE
NOT SHOWN FOR CLARITY

REABE DESIGN LLC
PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:		TITLE:					
DIMENSIONS ARE IN INCHES PER ASME Y14.5		WIRE ROUTING & INSTALLATION					
TOLERANCES:							
FRACTIONAL ± 1/16							
ANGULARS: ± 1/2°							
TWO PLACE DECIMAL ±.015				SIZE	DWG. NO.	REV 5	
THREE PLACE DECIMAL ±.005				B	8-0-5-000		
MATERIAL		DRAWN	TRR	05/04/2018			
		CHECKED	TRR	05/04/2018			
SPEC		DO NOT SCALE DRAWING			SCALE: 1:4	WEIGHT:	SHEET 3 OF 10

D

NOTE;
AIR TRACTOR 602 AND
THRUSH 710 WIRE ROUTING
WIRE GOES FROM FIRST CLAMP ON CROSS BRACE FORWARD AND UP TO THE JOINT OF THE SUB TANK AND GATE BOX
THE WIRE GOES ALONG THE JOINT OF THE SUBTANK AND GATE BOX TO THE RIGHT SIDE OF THE JOINT.
THE WIRE THEN FOLLOWS THE AFT RIGHT SIDE OF THE SUBTANK UP TOWARDS THE FUSELAGE.
ONCE LEVEL WITH THE BELLY SKIN THE WIRE CAN SPAN LATERALY OVER TO THE RADIUSD LOWER CORNER OF THE FUSELAGE.
THE WIRE THEN ENTERS THE LOWER BELLY SKIN PANNEL


SEE DETAIL "SKIN PENETRATION" FOR RECOMENDED PASS THROUGH
WIRE CAN BE ATTACHED TO STRUCTURE USING TY525MX, TY528MX OR APPROPRATE MS21919W CLAMP
AT LOCATIONS SHOWN

ROUTE AND SECURE WIRE TO PREVENT INTERFERENCE WITH MOVING PARTS
AND TO PREVENT THE WIRE BEING PINCHED OR CHAFED
SECURE WIRE PER AC43.13-1B CHAPTER 11

C

B

A

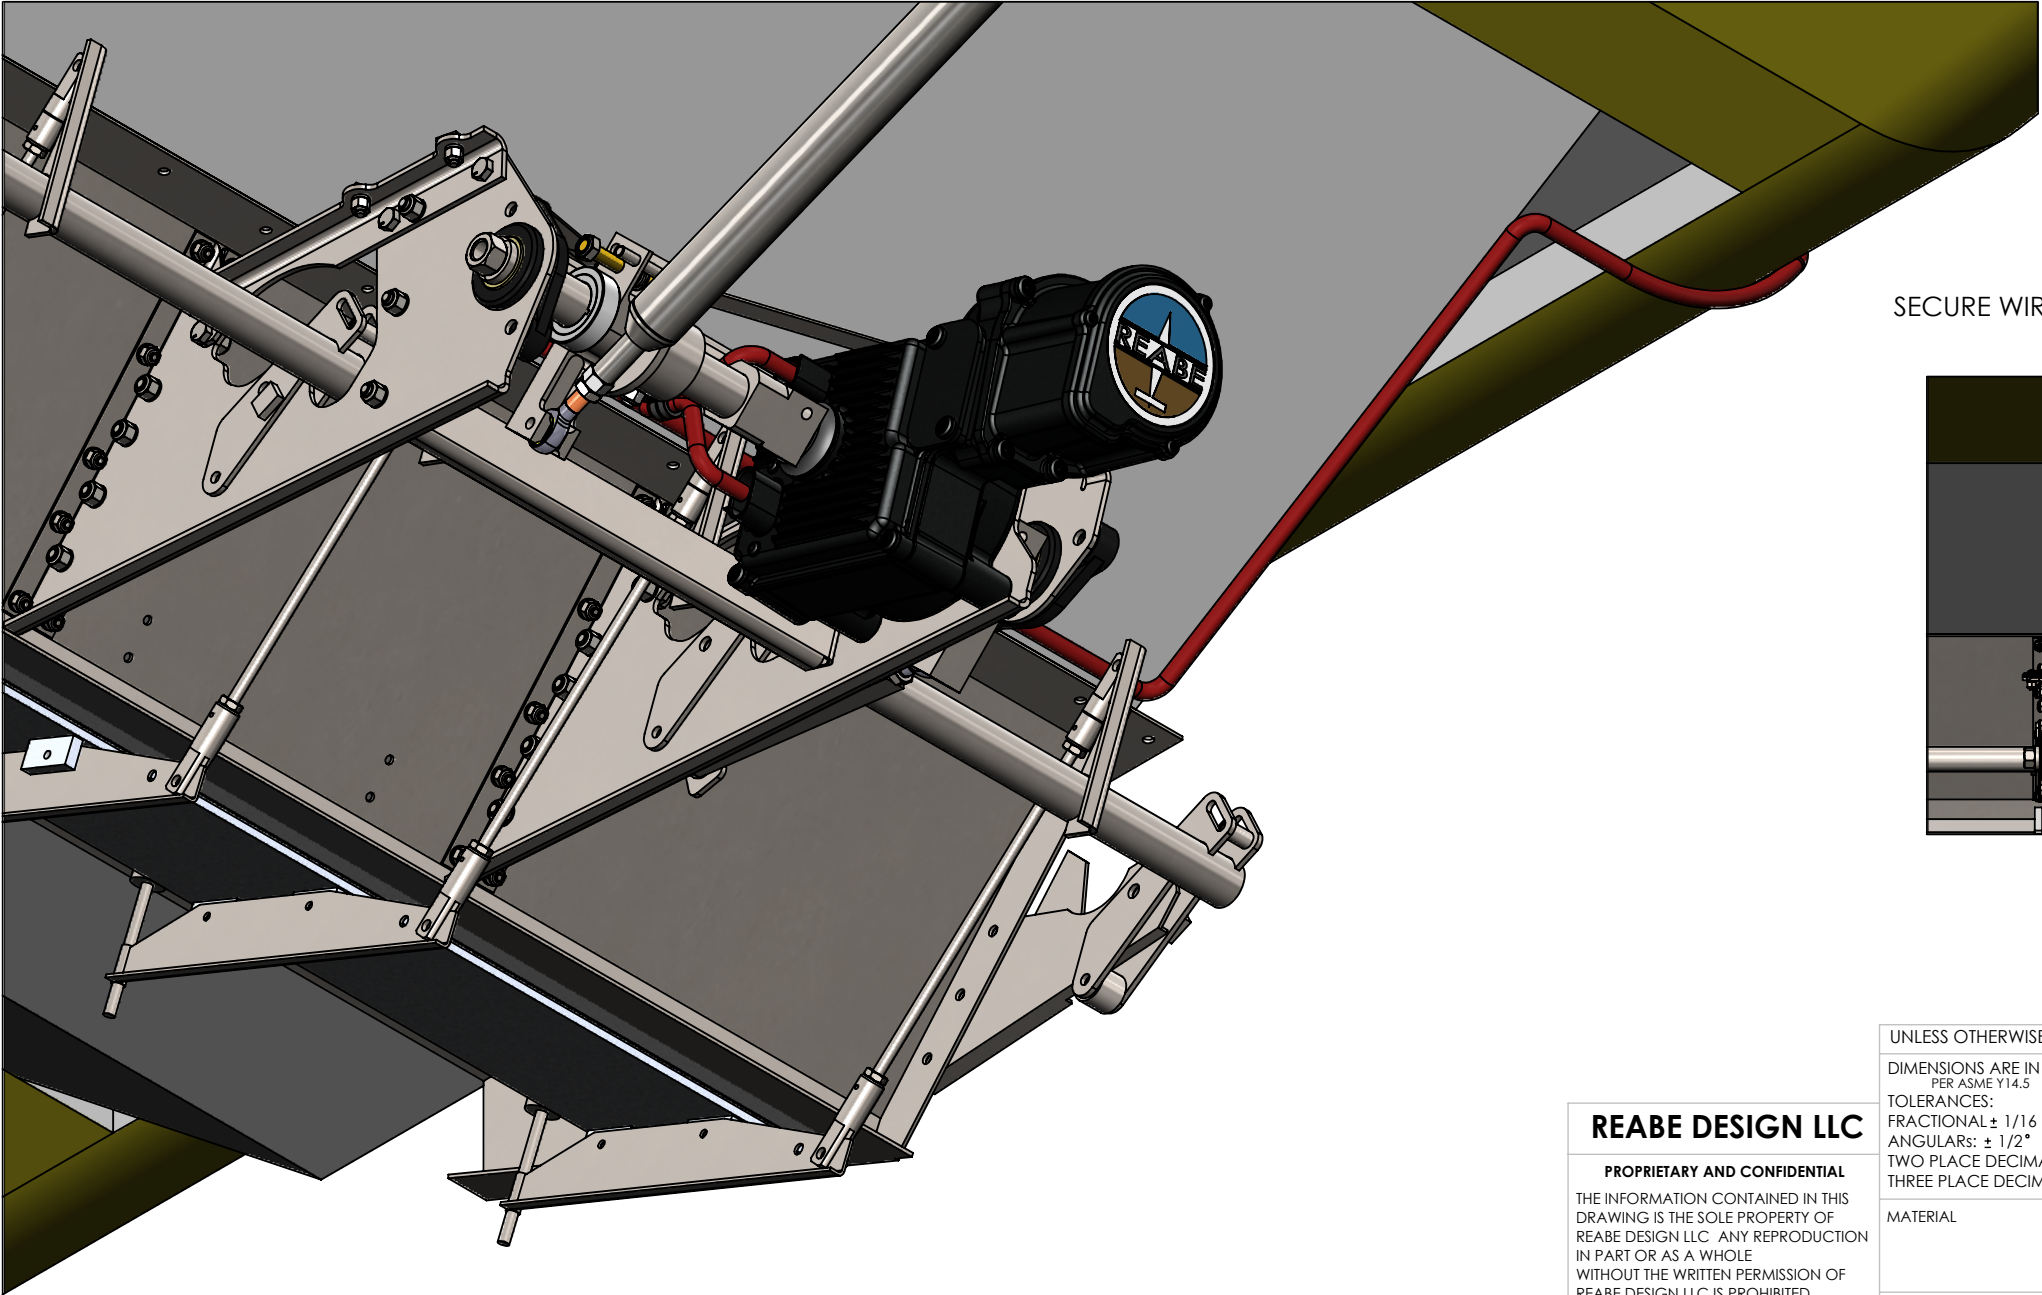


D

C

B

A

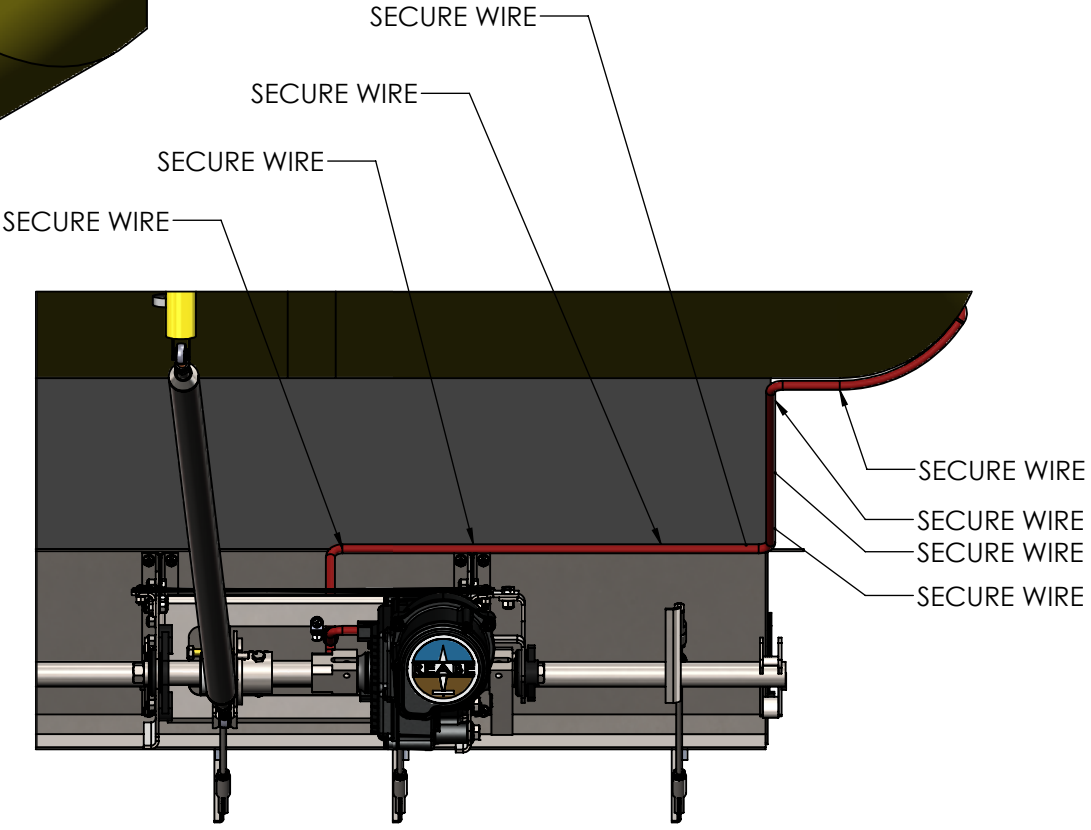

REABE DESIGN LLC
PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL

SPEC

TITLE:
WIRE ROUTING & INSTALLATION

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	B	8-0-5-000	5
CHECKED	TRR	05/04/2018			

DO NOT SCALE DRAWING

SCALE: 1:24

WEIGHT:

SHEET 4 OF 10

D

C


B

A

NOTE;
AIR TRACTOR 802 WIRE ROUTING
WIRE GOES FROM FIRST CLAMP ON CROSS BRACE FORWARD AND UP TO THE JOINT OF THE SUB TANK AND GATE BOX
THE WIRE GOES ALONG THE JOINT OF THE SUBTANK AND GATE BOX TO THE RIGHT SIDE OF THE JOINT.
THE WIRE THEN FOLLOWS THE AFT RIGHT SIDE OF THE SUBTANK UP TOWARDS THE FUSELAGE.
THE WIRE ENTERS THE FUSELAGE THROUGH THE AFT RIGHT FACE OF THE FIBERGLASS ENCLOSURE SKIN (P# 11177-2)

SEE DETAIL "SKIN PENETRATION" FOR RECOMENDED PASS THROUGH
WIRE CAN BE ATTACHED TO STRUCTURE USING TY525MX, TY528MX OR APPROPRATE MS21919W CLAMP
AT LOCATIONS SHOWN

ROUTE AND SECURE WIRE TO PREVENT INTERFERENCE WITH MOVING PARTS
AND TO PREVENT THE WIRE BEING PINCHED OR CHAFED
SECURE WIRE PER AC43.13-1B CHAPTER 11

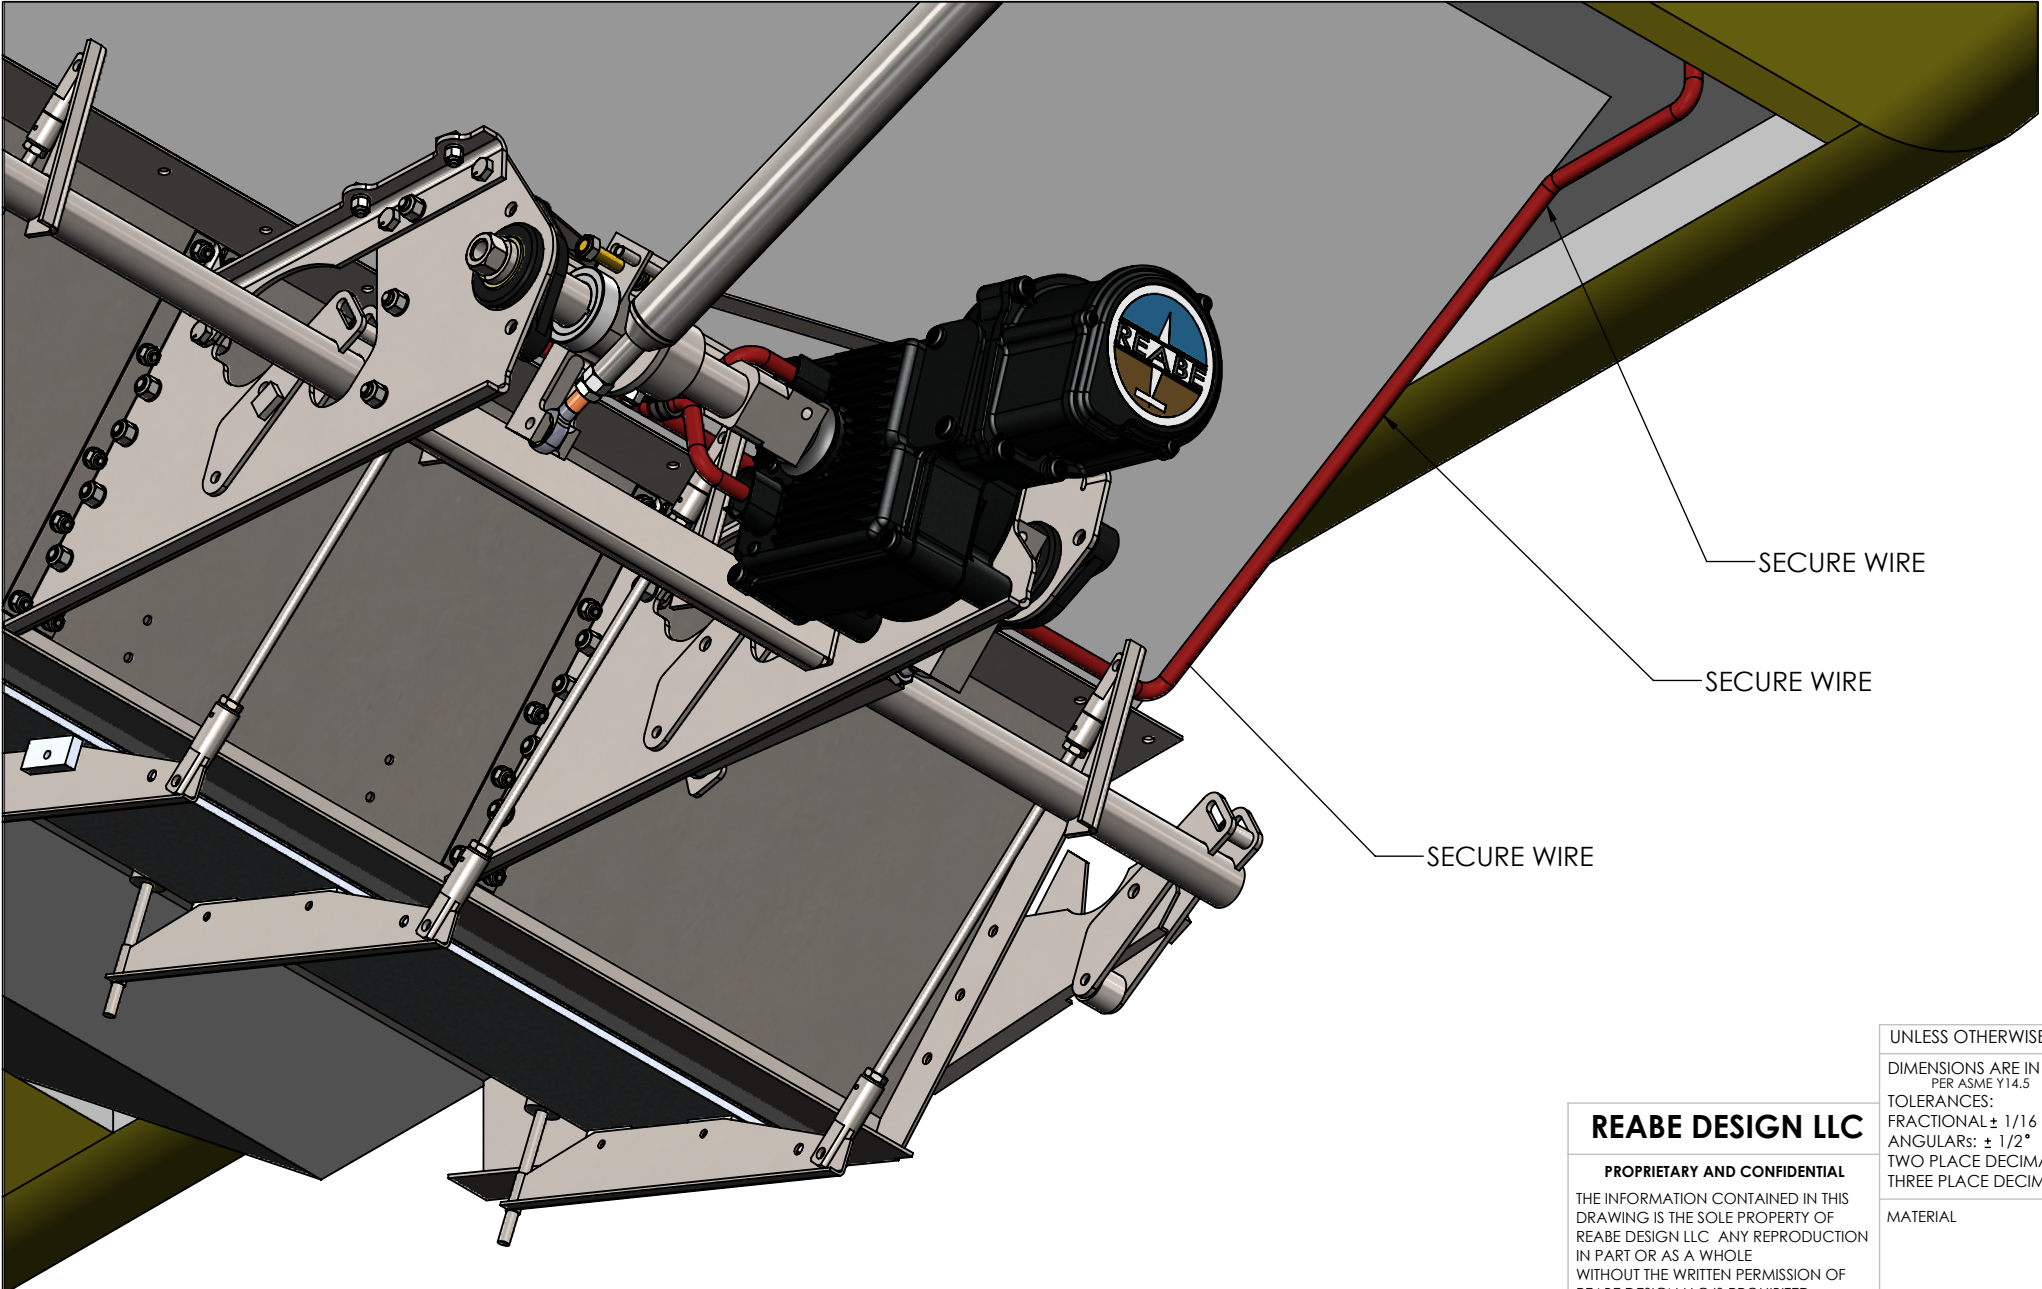


SECURE WIRE


SECURE WIRE

SECURE WIRE

SECURE WIRE

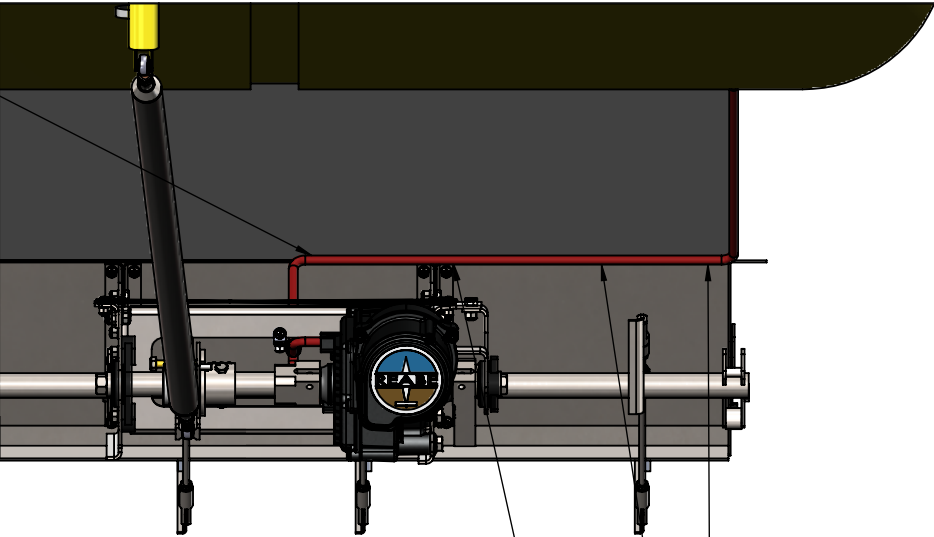

SECURE WIRE
SECURE WIRE
SECURE WIRE

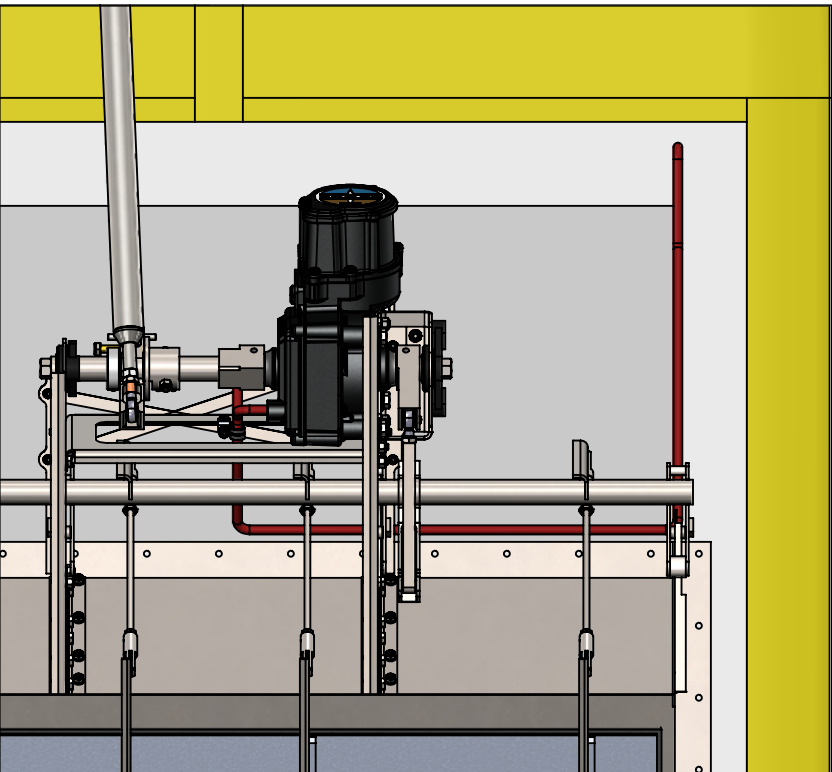

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULAR: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL


SPEC

TITLE:

WIRE ROUTING &
INSTALLATION


	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	B	8-0-5-000	5
CHECKED	TRR	05/04/2018			
DO NOT SCALE DRAWING			SCALE: 1:24 WEIGHT:		SHEET 5 OF 10

NOTE:
WIRE ATTACHMENT TO AFT SIDE OF SUB TANK

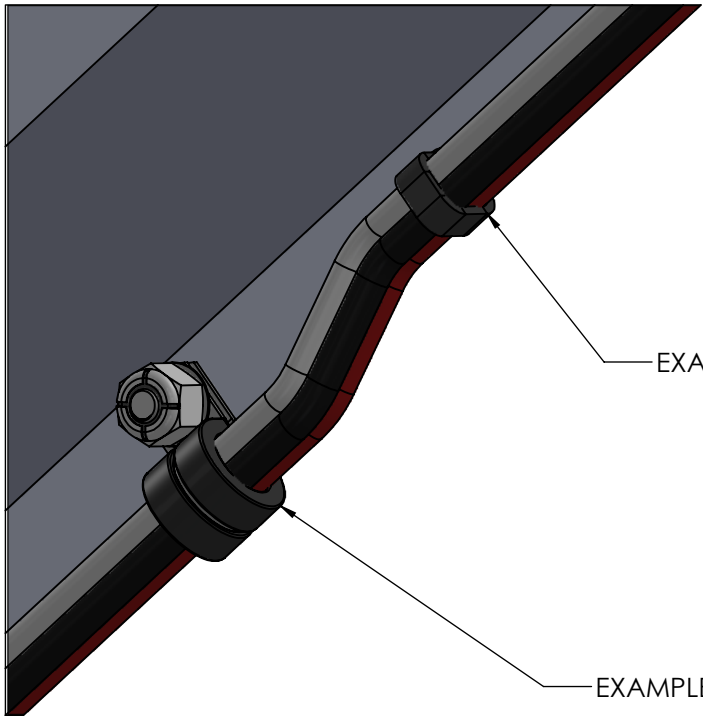

EXAMPLE USE OF TIE WRAP

EXAMPLE USE OF MS21919W CLAMP

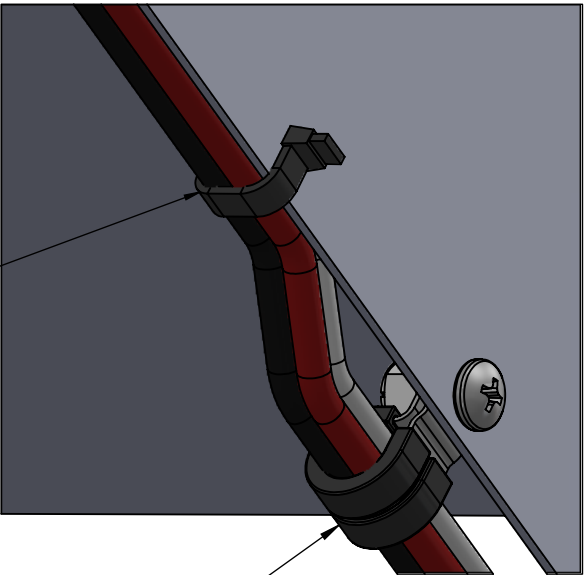

TY525MX CABLE TIE
MOUNTED TO Ø .20 HOLE
.25 IN FROM EDGE OF FLANGE

CLAMP: MS21919WCG6
FASTEND WITH:
SCREW: MS27039C1-08
WASHER: NAS1149C0316R
NUT: MS21044C3

MOUNTED TO Ø .20 HOLE
.25 IN FROM EDGE OF FLANGE

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL ± 1/16
ANGULARs: ± 1/2°
TWO PLACE DECIMAL ± .015
THREE PLACE DECIMAL ± .005

MATERIAL

SPEC

TITLE:

WIRE ROUTING & INSTALLATION

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	B	8-0-5-000	5
CHECKED	TRR	05/04/2018			


DO NOT SCALE DRAWING

SCALE: 1:1


WEIGHT:

SHEET 6 OF 10

NOTE:
AIRCRAFT SKIN PENETRATION

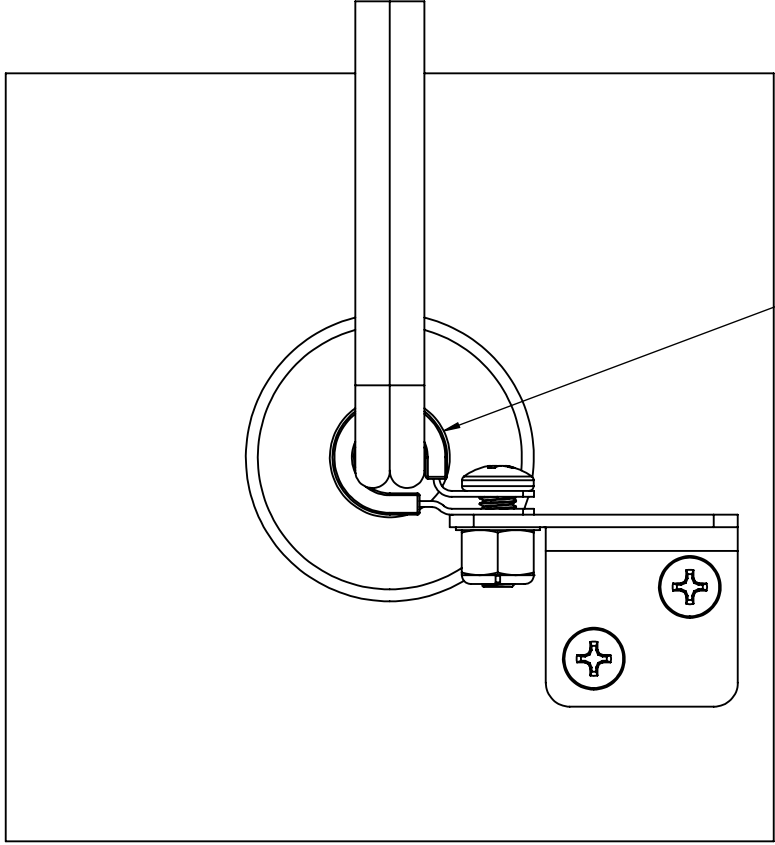


NOTE:
CLAMP IS CENTERED OVER 1-1/4" HOLE IN SKIN
WIRE BEND IS AWAY FROM SPLIT IN CLAMP

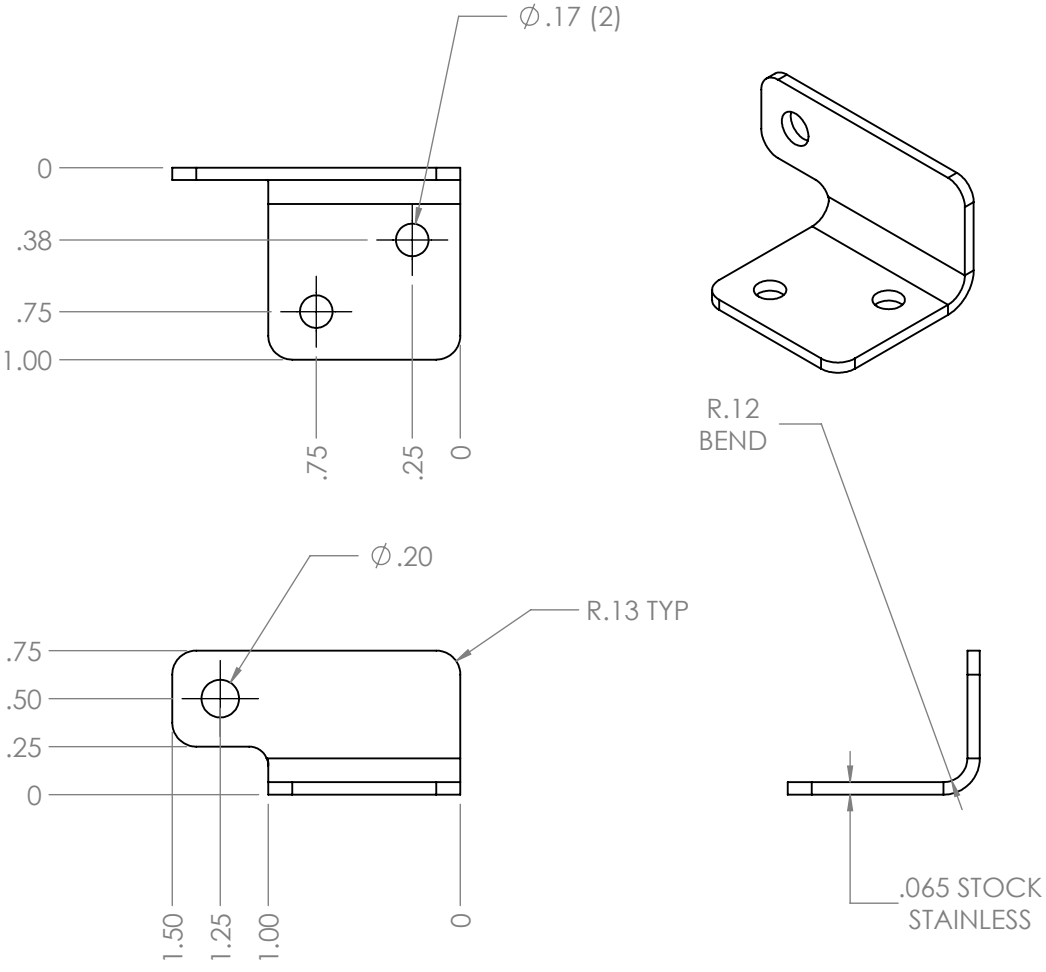

STAINLESS CLAMP SUPPORT
1:1 DRAWING

- CLAMP: MS21919WCG6
- FASTEND TO SUPPORT WITH:
- SCREW: MS27039C1-08
- WASHER: NAS1149C0316R
- NUT: MS21044C3

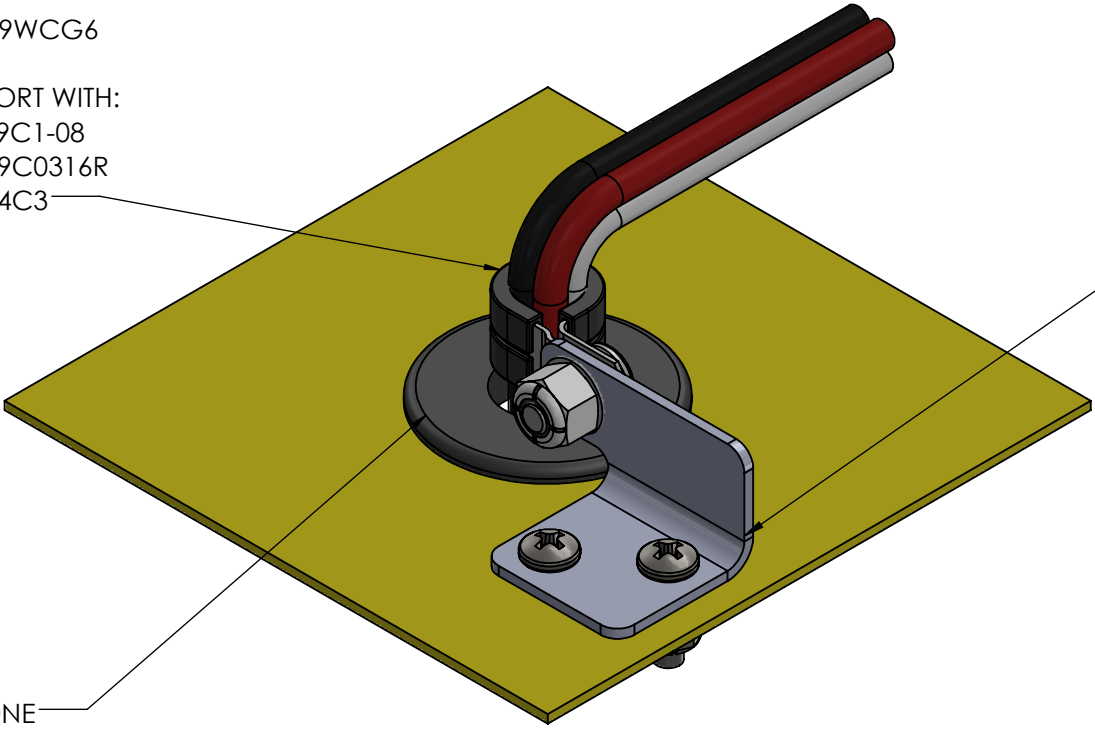

CLAMP SUPPORT IS SECURED
TO THE SKIN WITH AT LEAST
TWO POINT FASTENING

RECOMMENDED HARDWARE:
SCREW: MS27039C0809
WASHER: NAS1149CN832R
NUT: MS21044C08

MS35489-18 GROMMET
SEALED WITH RTV SILICONE

REABE DESIGN LLC
PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL ± 1/16
ANGULARS: ± 1/2°
TWO PLACE DECIMAL ±.015
THREE PLACE DECIMAL ±.005

TITLE:

WIRE ROUTING & INSTALLATION

DRAWN	TRR	05/04/2018	SIZE B	DWG. NO. 8-0-5-000	REV 5
CHECKED	TRR	05/04/2018			

DO NOT SCALE DRAWING



SCALE: 1:1

WEIGHT:

SHEET 7 OF 10

NOTE:
AIR TRACTOR PROX SENSOR MOUNITING AND BRACKET

ALIGN SENSOR WITH LATERAL AXIS OF AIRCRAFT
POSITION SENSOR IN BRACKET ON COCKPIT FLOOR
SENSOR SHOULD BE ON THE OUTBOARD SIDE OF INDICATING SCALE FOR THE DUMP LEVER
SENSOR SHOULD SEE THE INDICATING SCALE WHEN THE DUMP LEVER IS IN THE FULL AFT (STOWED) POSITION



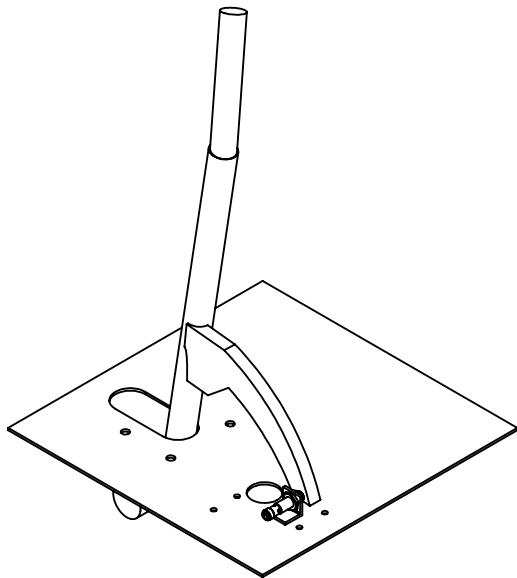
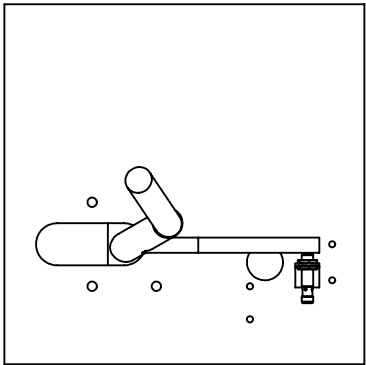


PROX MOUNT

PROX SENSOR
8-1-4-502

PROX MOUNT IS SECURED
TO THE FLOOR WITH AT LEAST
TWO POINT FASTENING

 RECOMMENDED HARDWARE:
SCREW: MS27039C0809
WASHER: NAS1149CN832R
NUT: MS21044C08

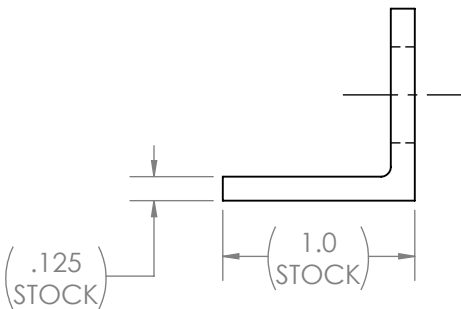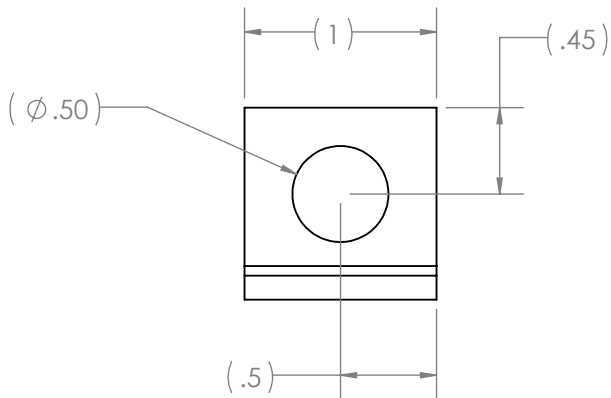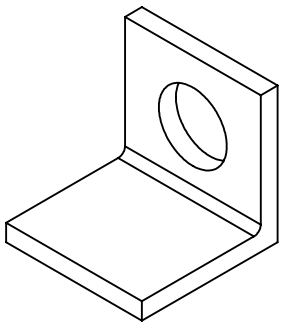

ALUMINUM PROX MOUNT
1:1 DRAWING

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL

SPEC

TITLE:

WIRE ROUTING &
INSTALLATION

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	B	8-0-5-000	5
CHECKED	TRR	05/04/2018			
DO NOT SCALE DRAWING			SCALE: 1:128	WEIGHT:	SHEET 8 OF 10


NOTE:
THRUSH AND OLD AIR TRACTORS
PROX SENSOR MOUNITING, BRACKET AND HOLD BACK

BREAK-AWAY STRAP
UV RESISTANT
120# NYLON CABLE TIE



PROX SENSOR
8-1-4-502

PROX MOUNT

2" X 2" X 1/8"
ALUMINUM ANGLE

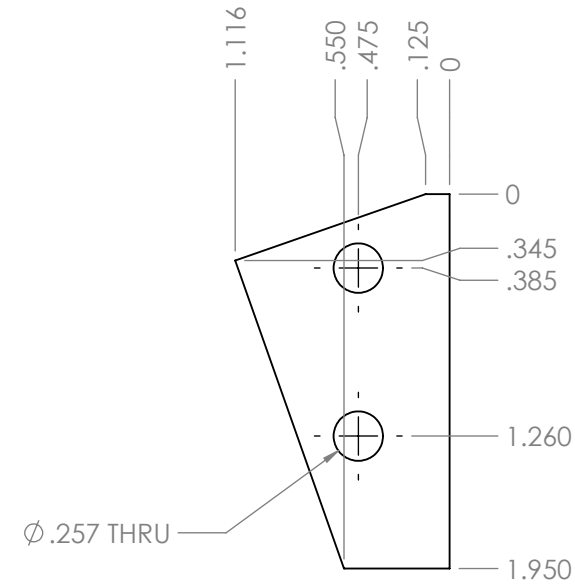

ALUMINUM PROX MOUNT
1:1 DRAWING

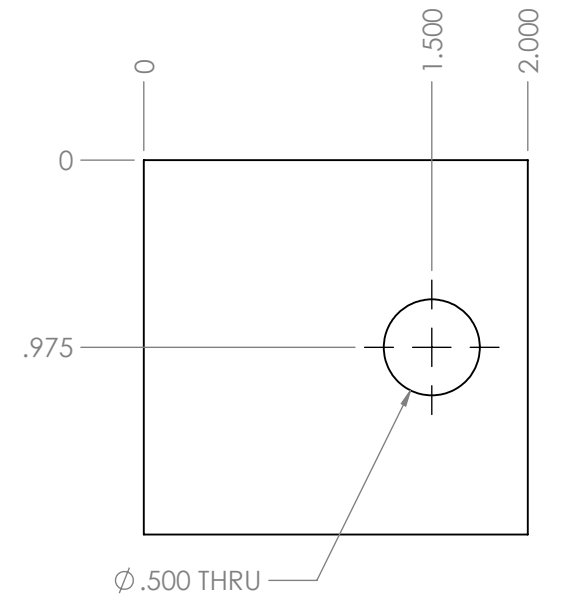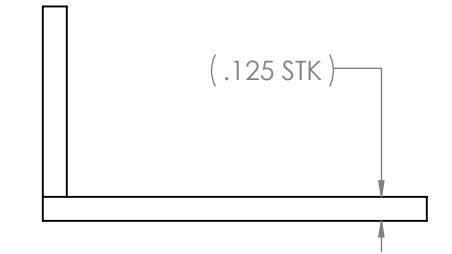

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.


UNLESS OTHERWISE SPECIFIED:	
DIMENSIONS ARE IN INCHES PER ASME Y14.5	
TOLERANCES:	
FRACTIONAL	± 1/16
ANGULARS	± 1/2°
TWO PLACE DECIMAL	± .015
THREE PLACE DECIMAL	± .005
MATERIAL	
SPEC	

TITLE:

WIRE ROUTING &
INSTALLATION

SIZE	DWG. NO.	REV
B	8-0-5-000	5
DO NOT SCALE DRAWING		SCALE: 1:24 WEIGHT:
SHEET 9 OF 10		

- NOTE:
1. MODE SWITCH AND BREAKERS ARE MOUNTED IN BREAKER PANNEL AREA
 2. MULTIPLE CONTROLLER MOUNTING LOCATIONS ARE SHOWN

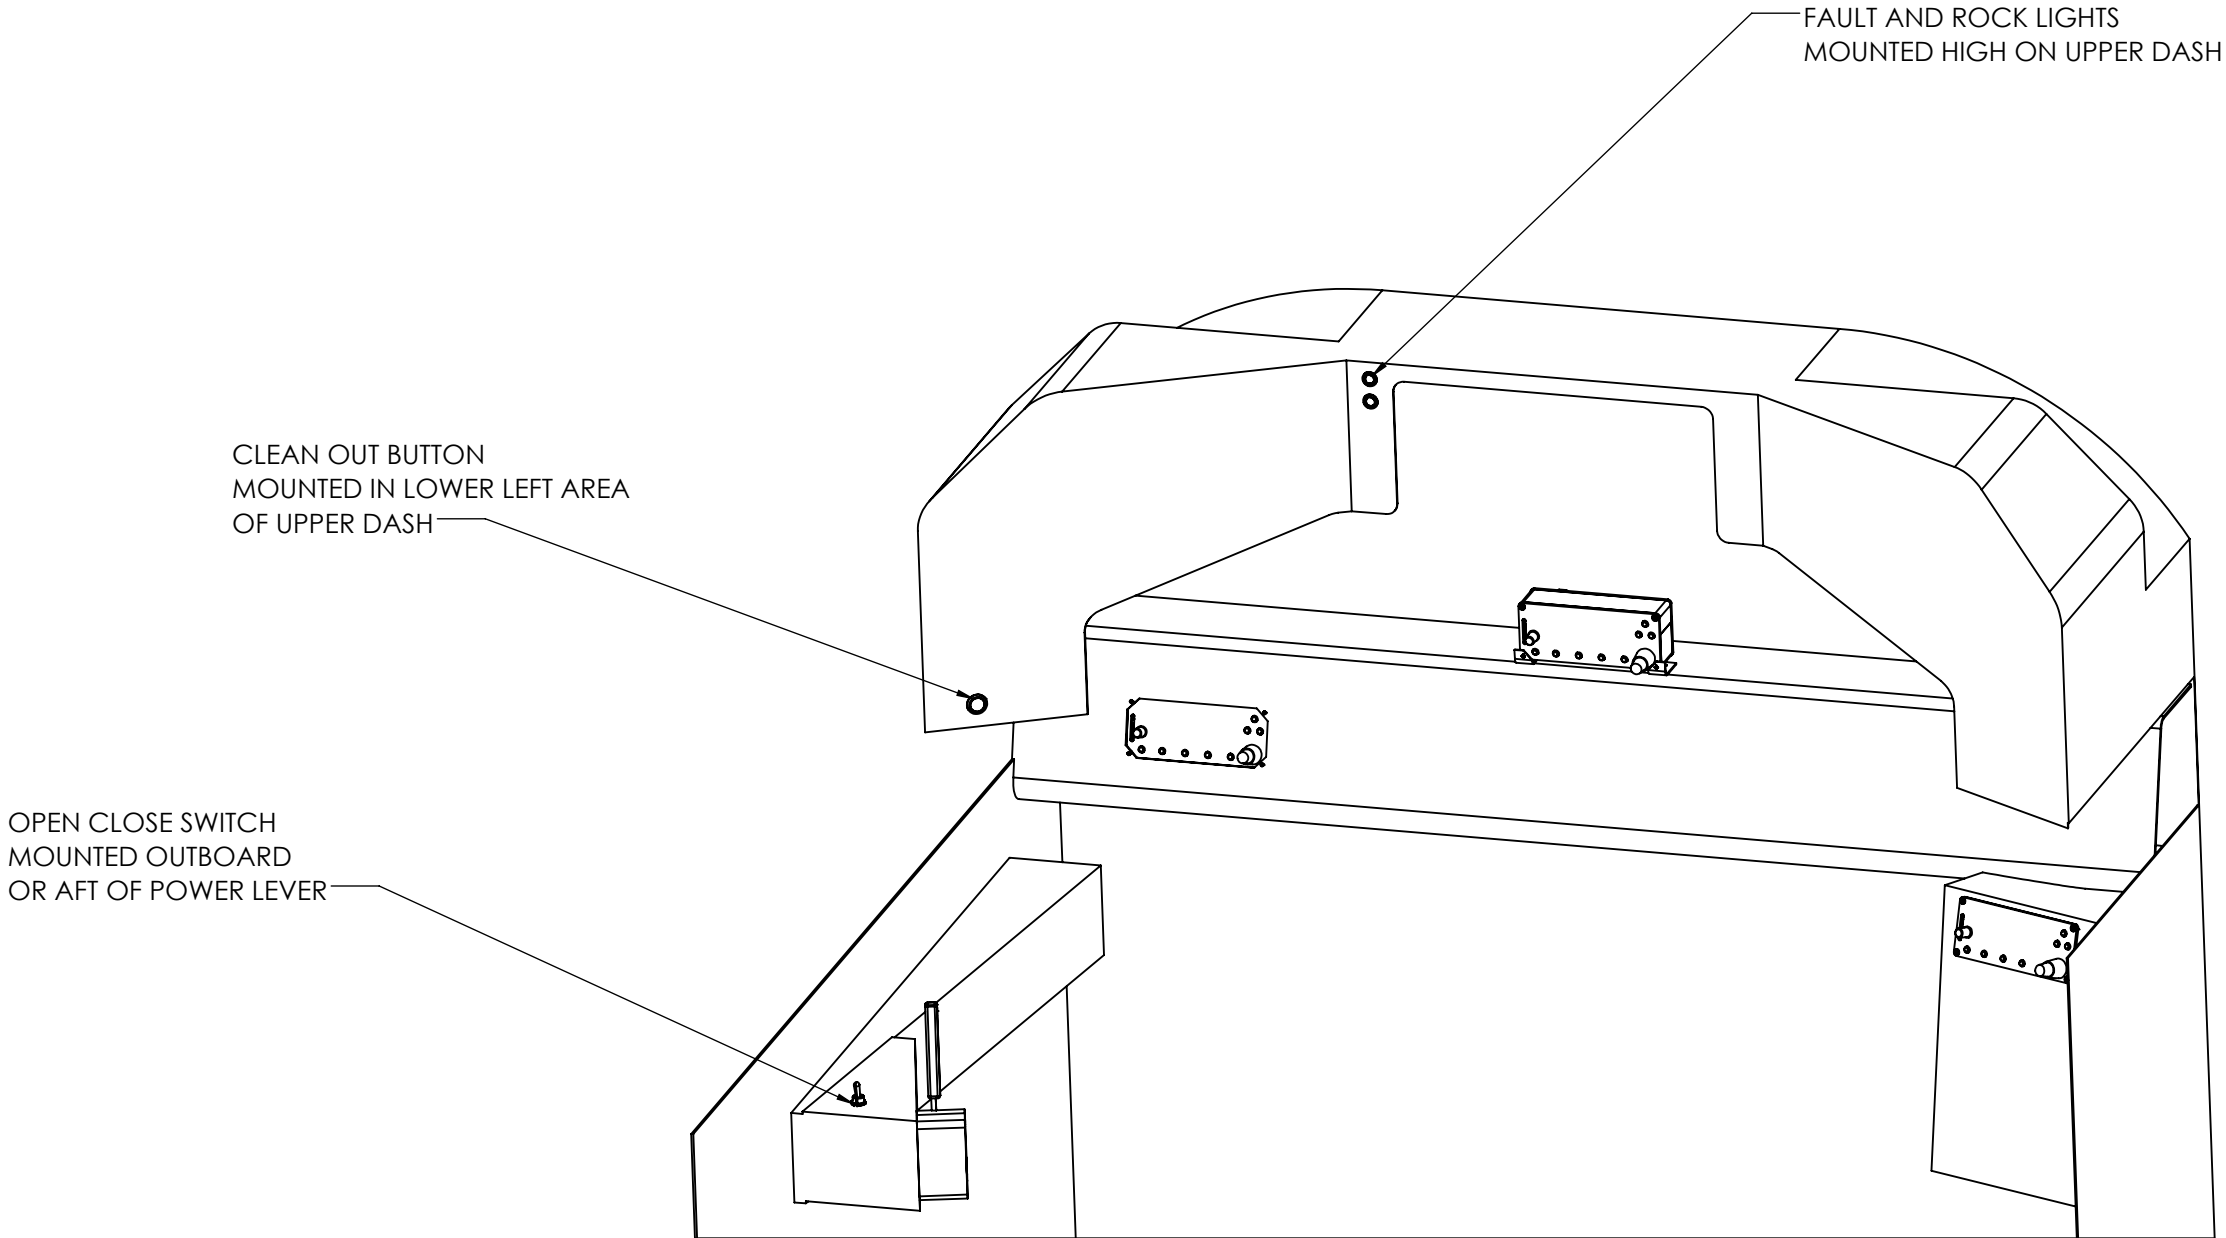



REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:		TITLE:						
DIMENSIONS ARE IN INCHES PER ASME Y14.5		WIRE ROUTING & INSTALLATION						
TOLERANCES:								
FRACTIONAL ± 1/16								
ANGULARs: ± 1/2°								
TWO PLACE DECIMAL ±.015		DRAWN		NAME	DATE	SIZE	DWG. NO.	REV
THREE PLACE DECIMAL ±.005		CHECKED		TRR	05/04/2018	B	8-0-5-000	5
MATERIAL		DO NOT SCALE DRAWING		SCALE: 1:8		WEIGHT:		SHEET 10 OF 10
SPEC								



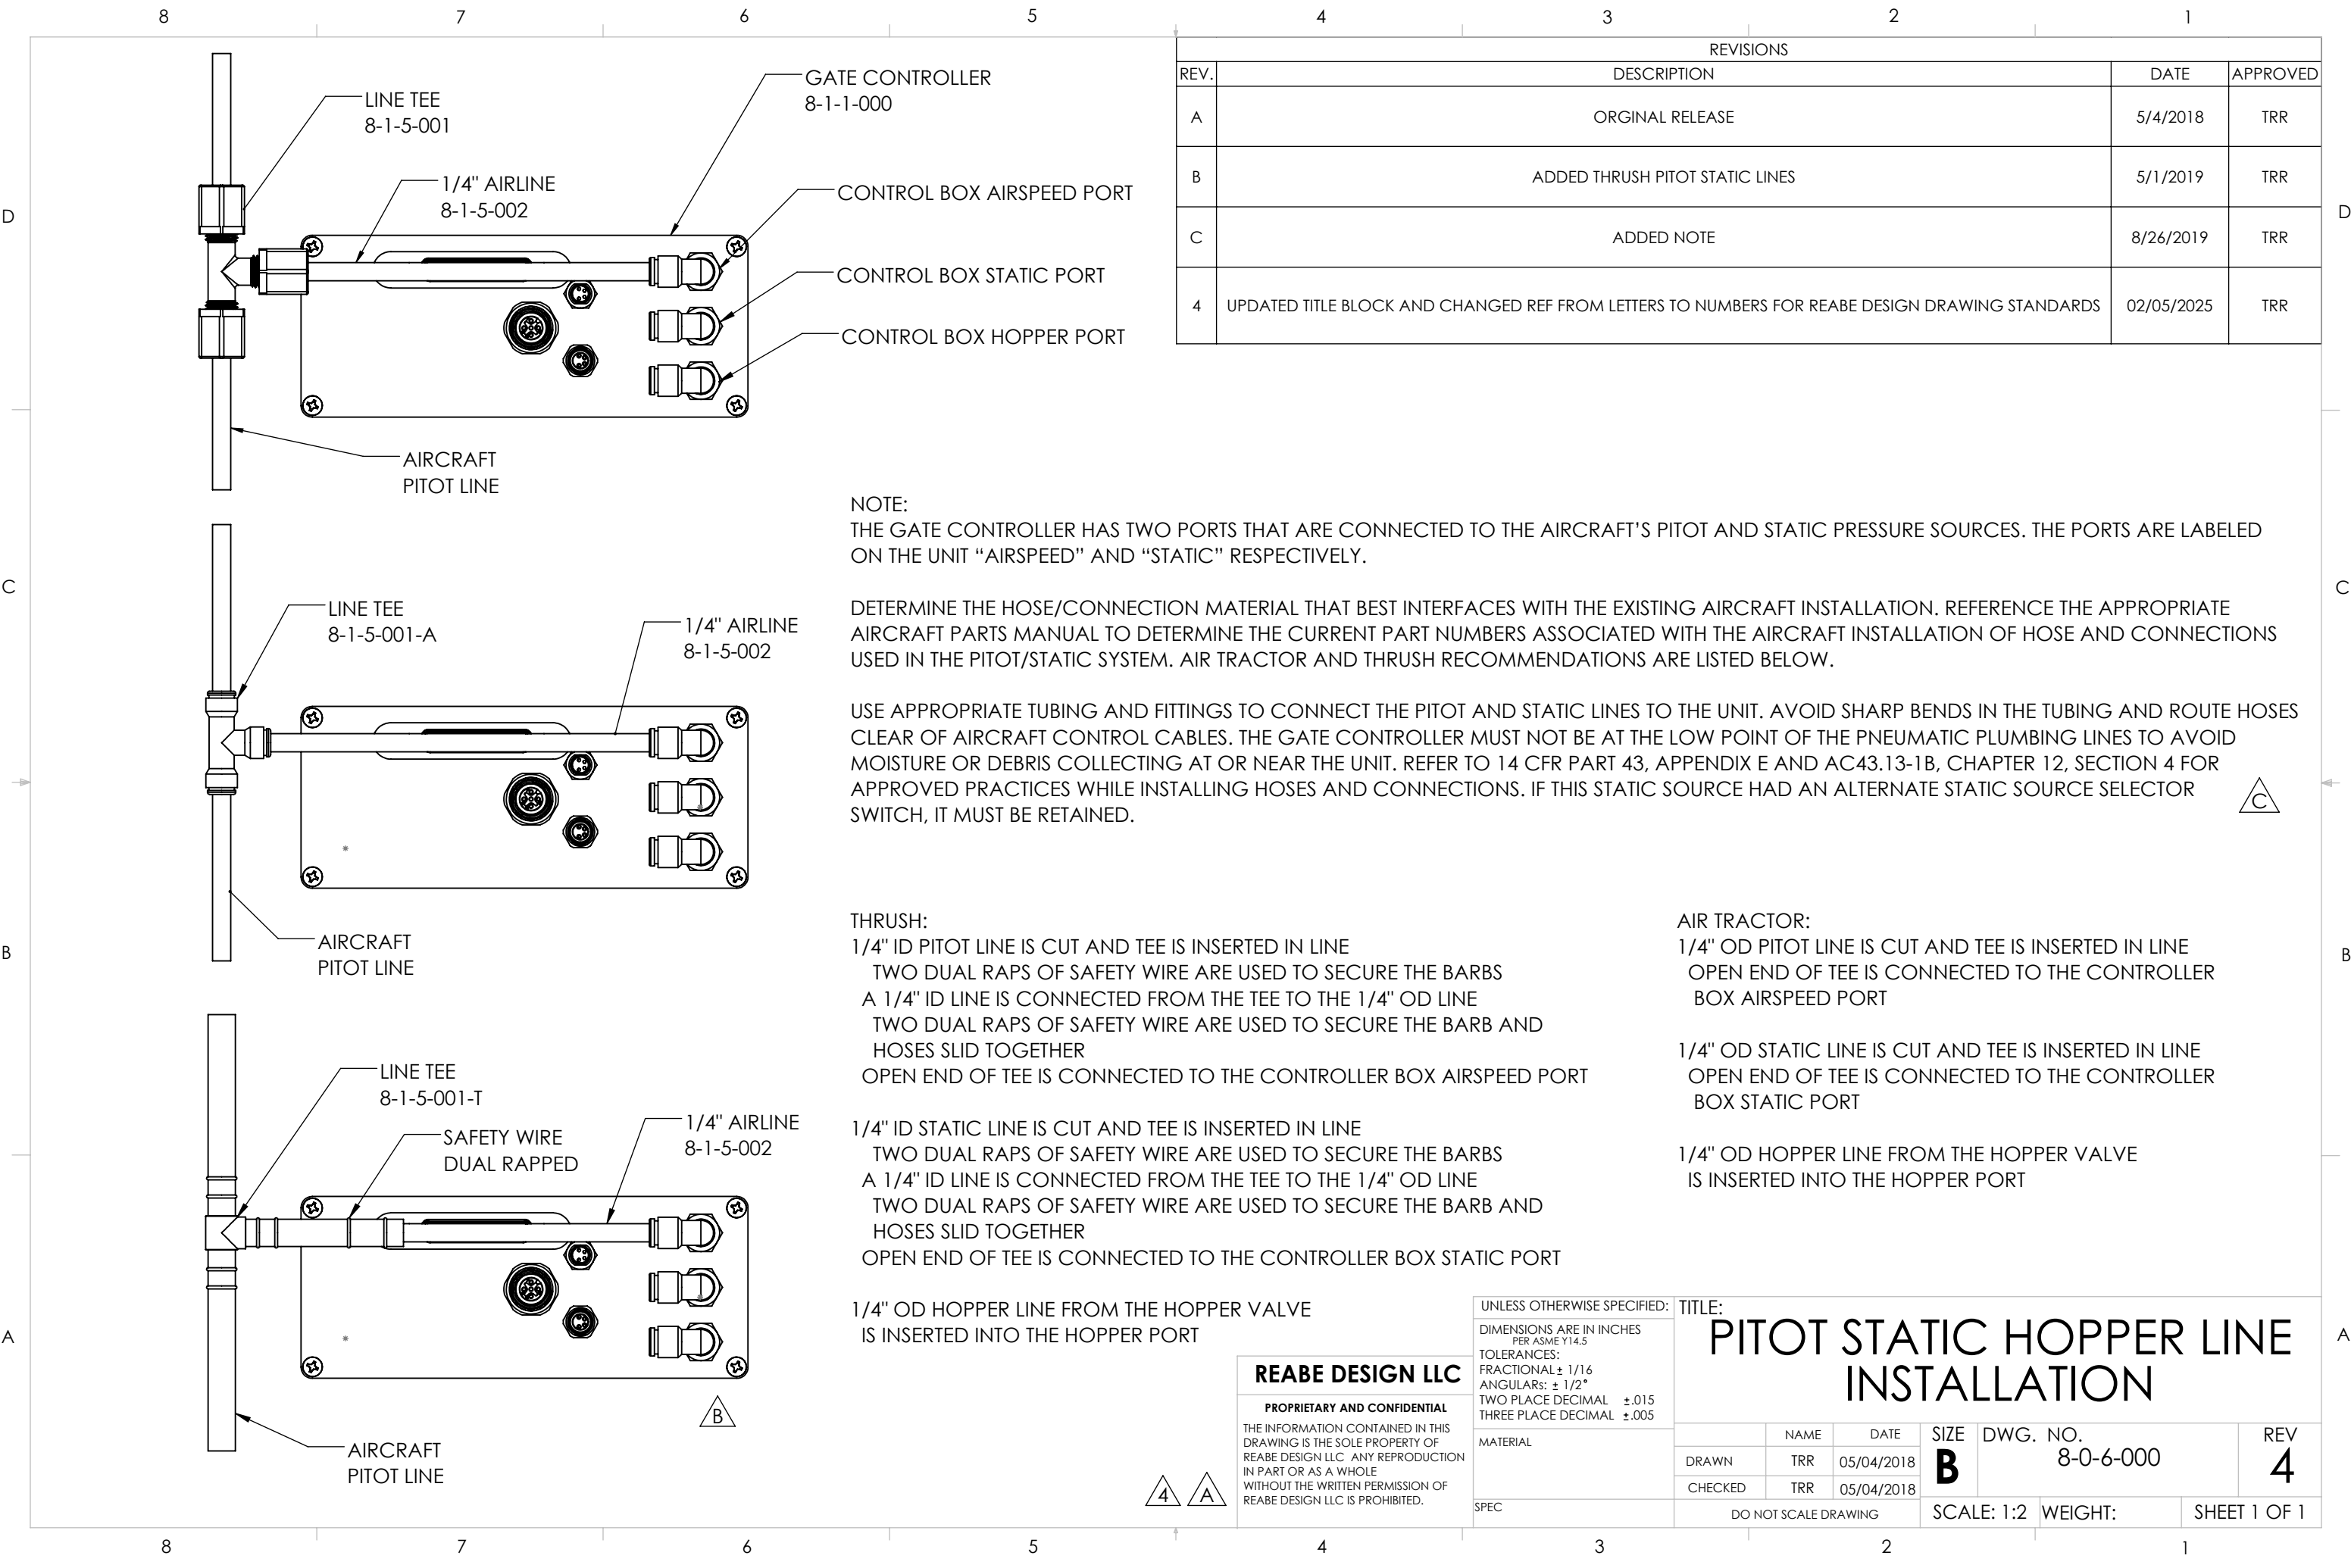


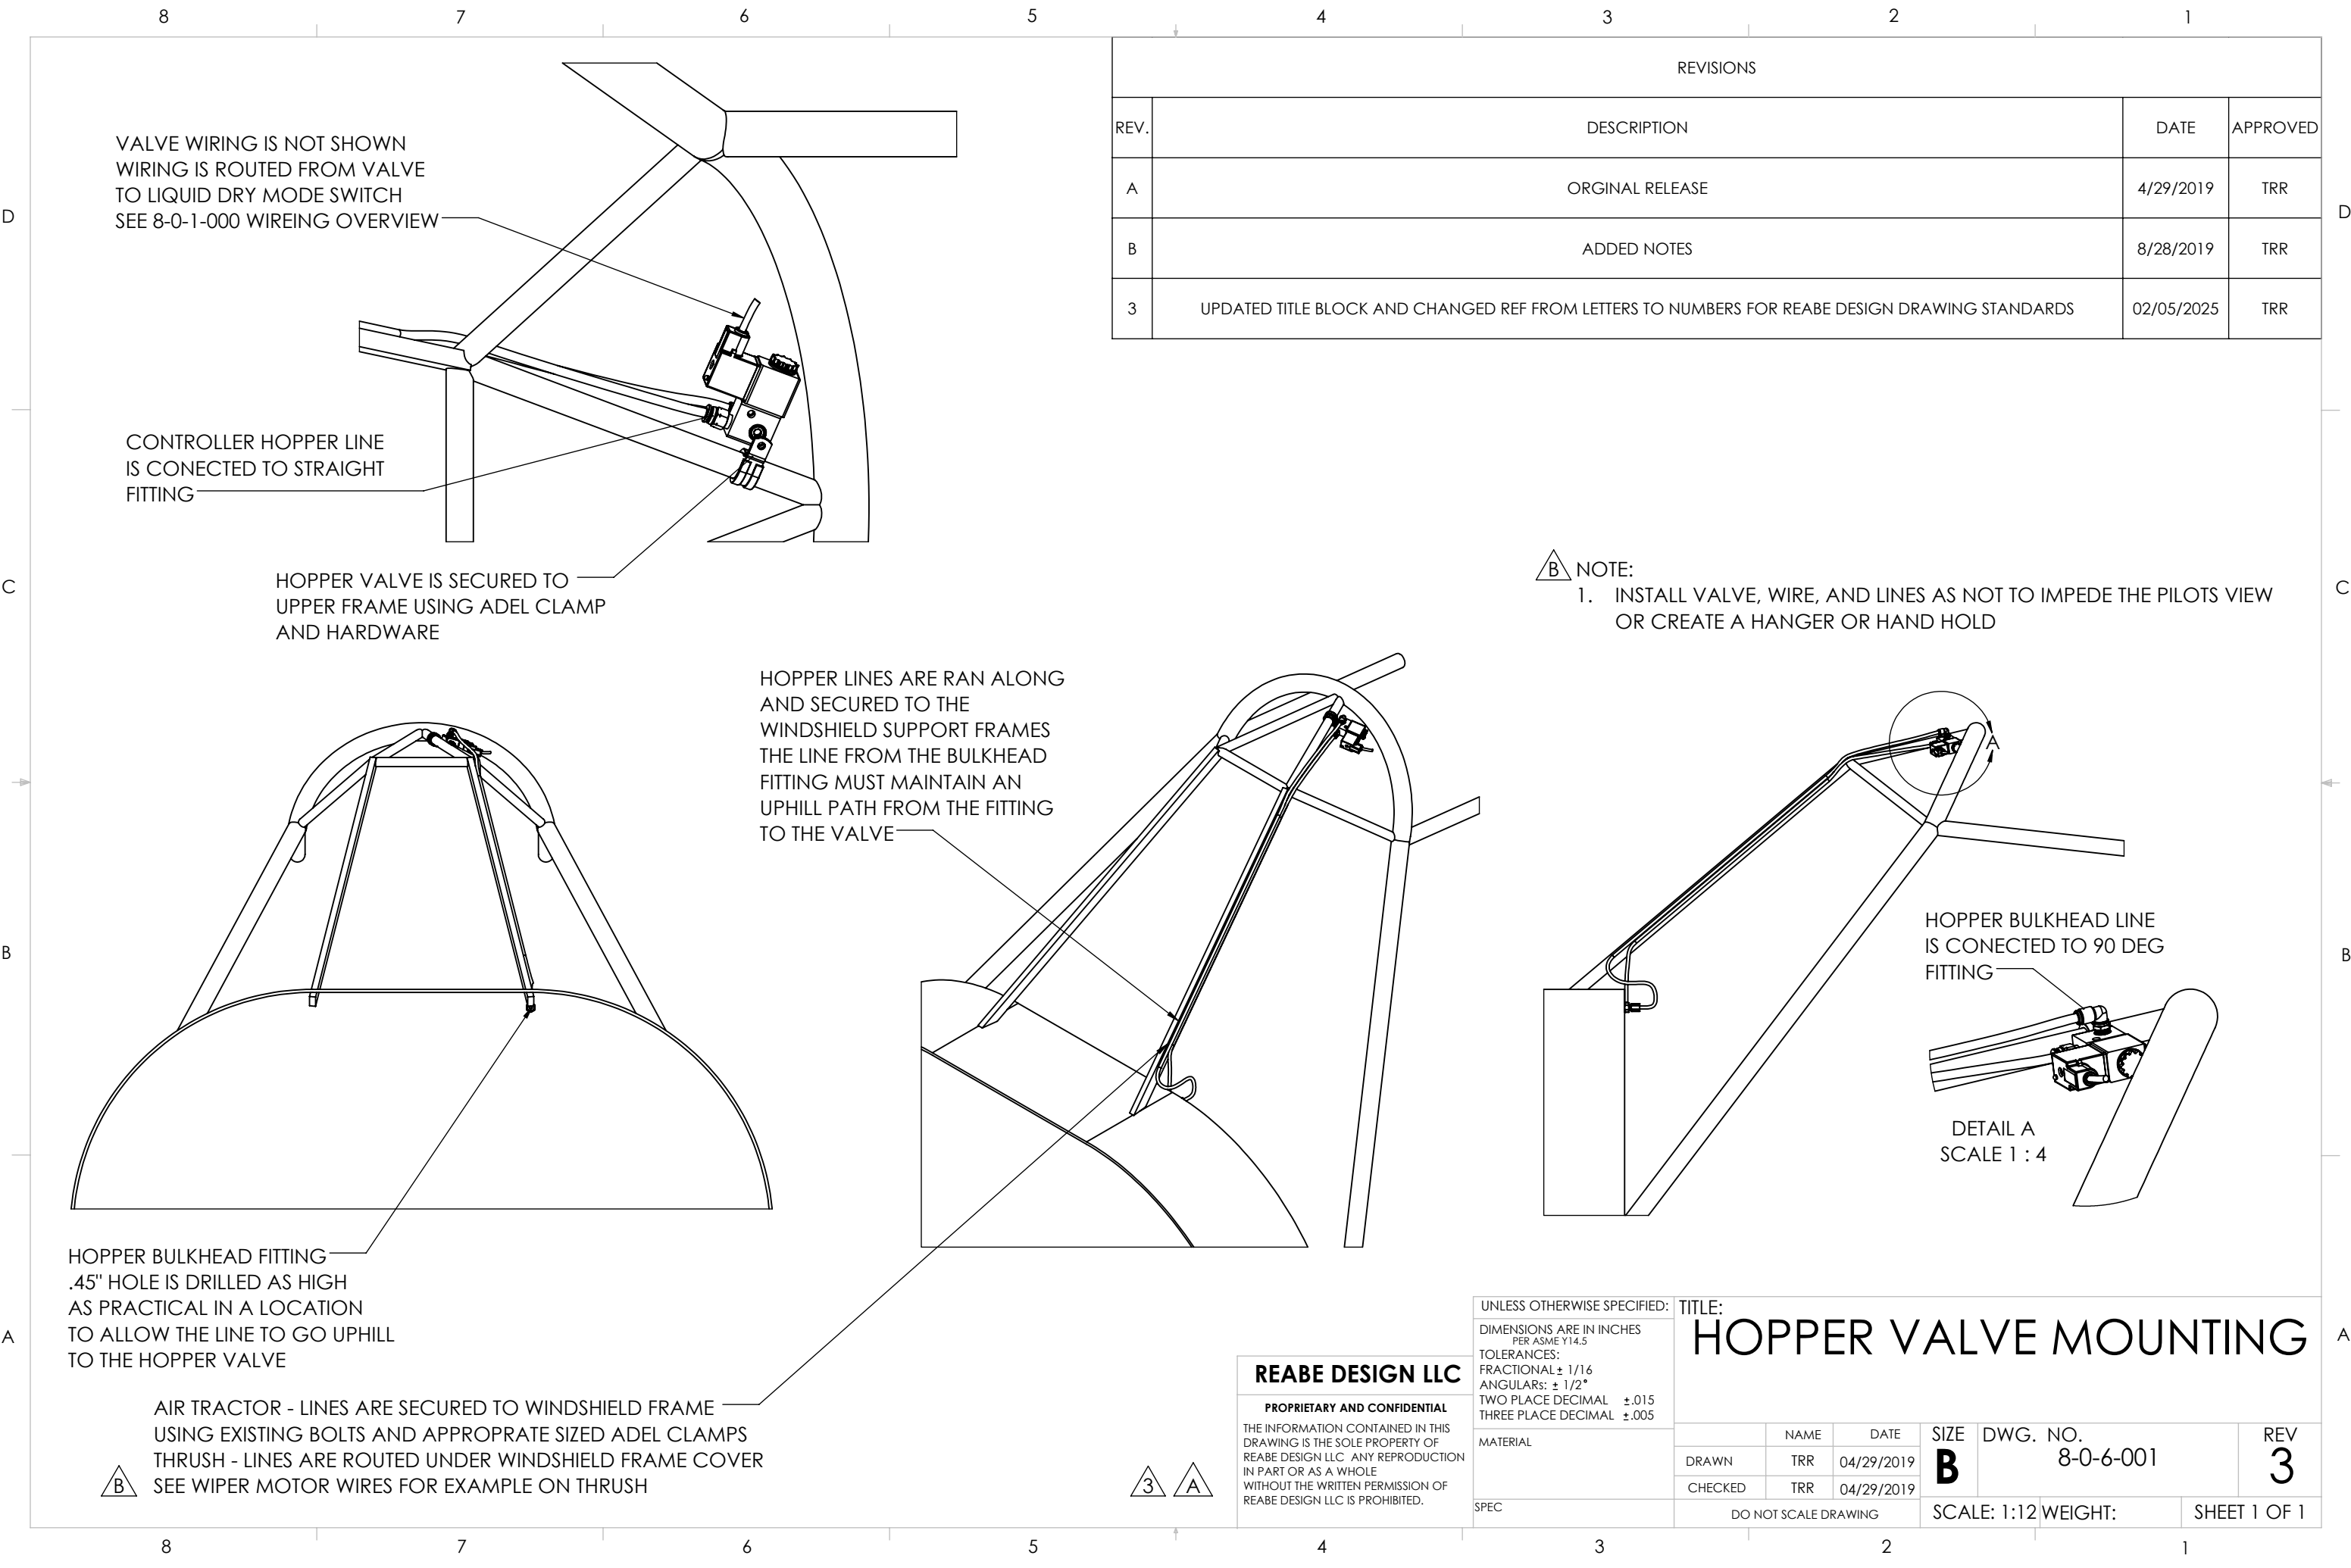

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	4/29/2019	TRR	TRR
B	UPDATE TITLE BLOCK, CROP VIEWS, DRAWING NAME WAS RIGGING	10/11/2019	TRR	KMT
C	OUTPUT ROD LENGHT WAS 7.505 NOW 7.132 WITH REV E "INPUT ARM 2" 8-2-2-002	7/24/2020	TRR	TRR
D	ADDED INFO FOR 7.5" GATE ASSEMBLY	1/27/2021	TRR	TRR
5	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/05/2025	TRR	TRR

NOTE: GATE INPUT SETTING

1. SETUP AND LEVEL GATE
2. CLOSE GATE
3. ADJUST GATE VERNIER IN COCKPIT TO HOLD GATE LEVER IN FULL AFT POSITION OR USE BREAK-AWAY STRAP
4. ADJUST LENGTH OF THE INPUT PUSH-PULL TUBE TO LOOK LIKE "GATE CLOSED LEVER STOWED" VIEW WHERE THE ROD IS TANGENT (TOUCHING) THE INPUT LEVER
5. ROTATE THE CAM TILL FILLET OF THE CAM IS TANGENT TO THE BACK SIDE OF THE INPUT LEVER
6. SLIDE CAM AGAINST INPUT LEVER, THIS COMPRESS THE SPRING ON THE PIN
7. TIGHTEN SCREWS IN CAM TO CLAMP CAM TO SHAFT
8. UNLOCK VERNIER IN COCKPIT
9. MOVE DUMP LEVER FORWARD IN COCKPIT TO ENGAGE PIN.
10. CYCLE GATE FULL OPEN AND CLOSE (CHECK THAT THE INPUT ARM STAYS AT LEAST 20 DEGREES FROM INLINE)
11. CLOSE GATE
12. DIS-ENGAGE PIN AND STOW GATE LEVER,

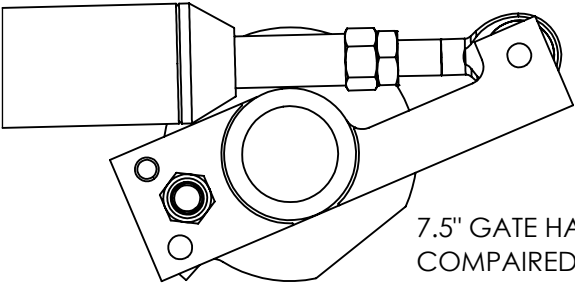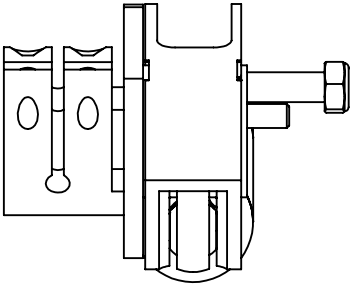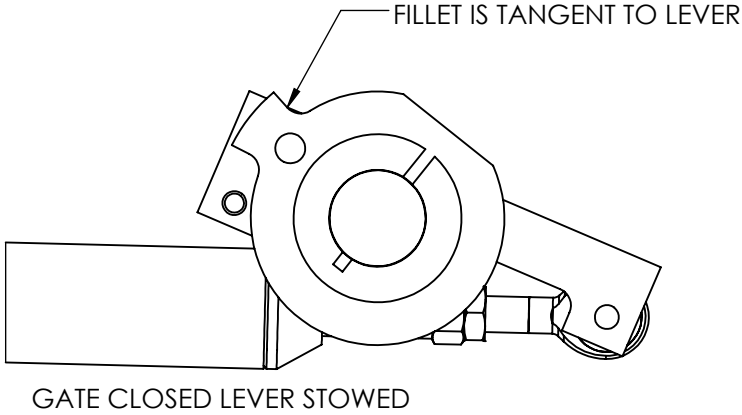

7.5" GATE
INPUT ARM

7.5" GATE HAS INPUT ARM INSTALLED UPSIDE DOWN
COMPAIED TO 5" GATE



REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL ± 1/16
ANGULARS: ± 1/2°
TWO PLACE DECIMAL ±.015
THREE PLACE DECIMAL ±.005

MATERIAL

SPEC


TITLE:


GATE RIGGING

	NAME	DATE
DRAWN	TRR	04/29/2019
CHECKED	MVA	09/30/2019

SIZE	DWG. NO.	REV
B	8-0-7-000	5

SCALE: 1:2	WEIGHT:	SHEET 1 OF 3
------------	---------	--------------

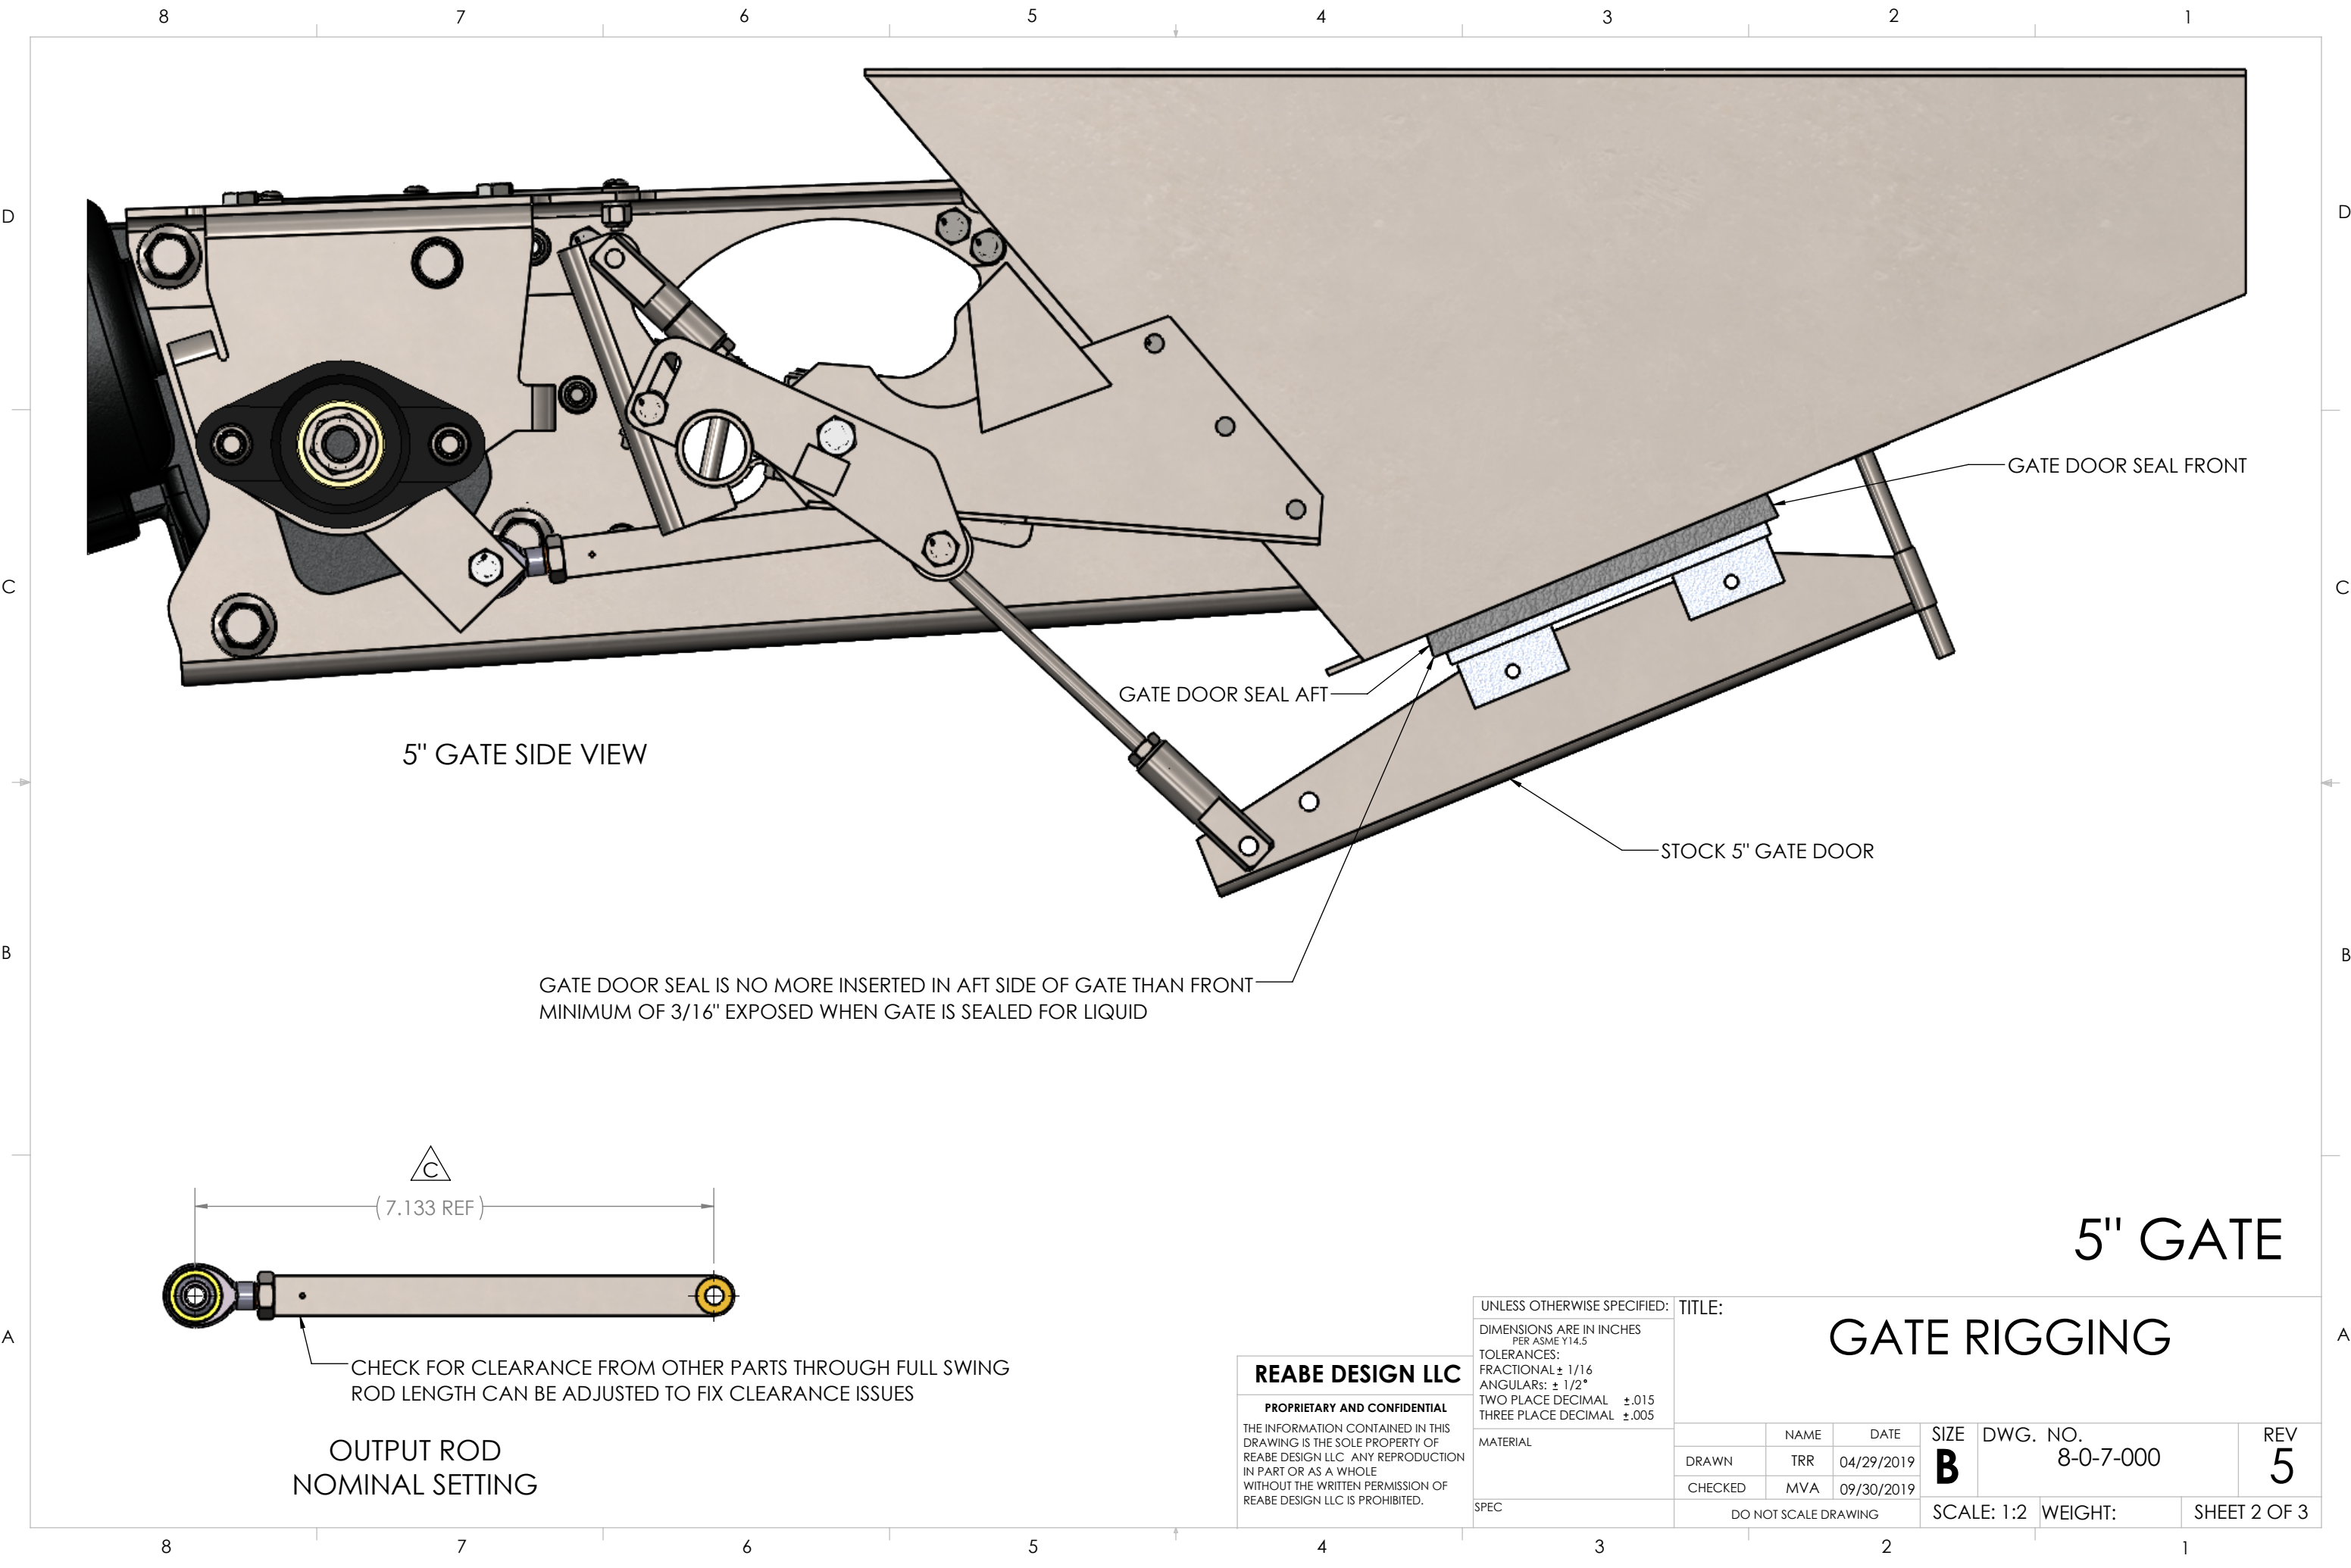

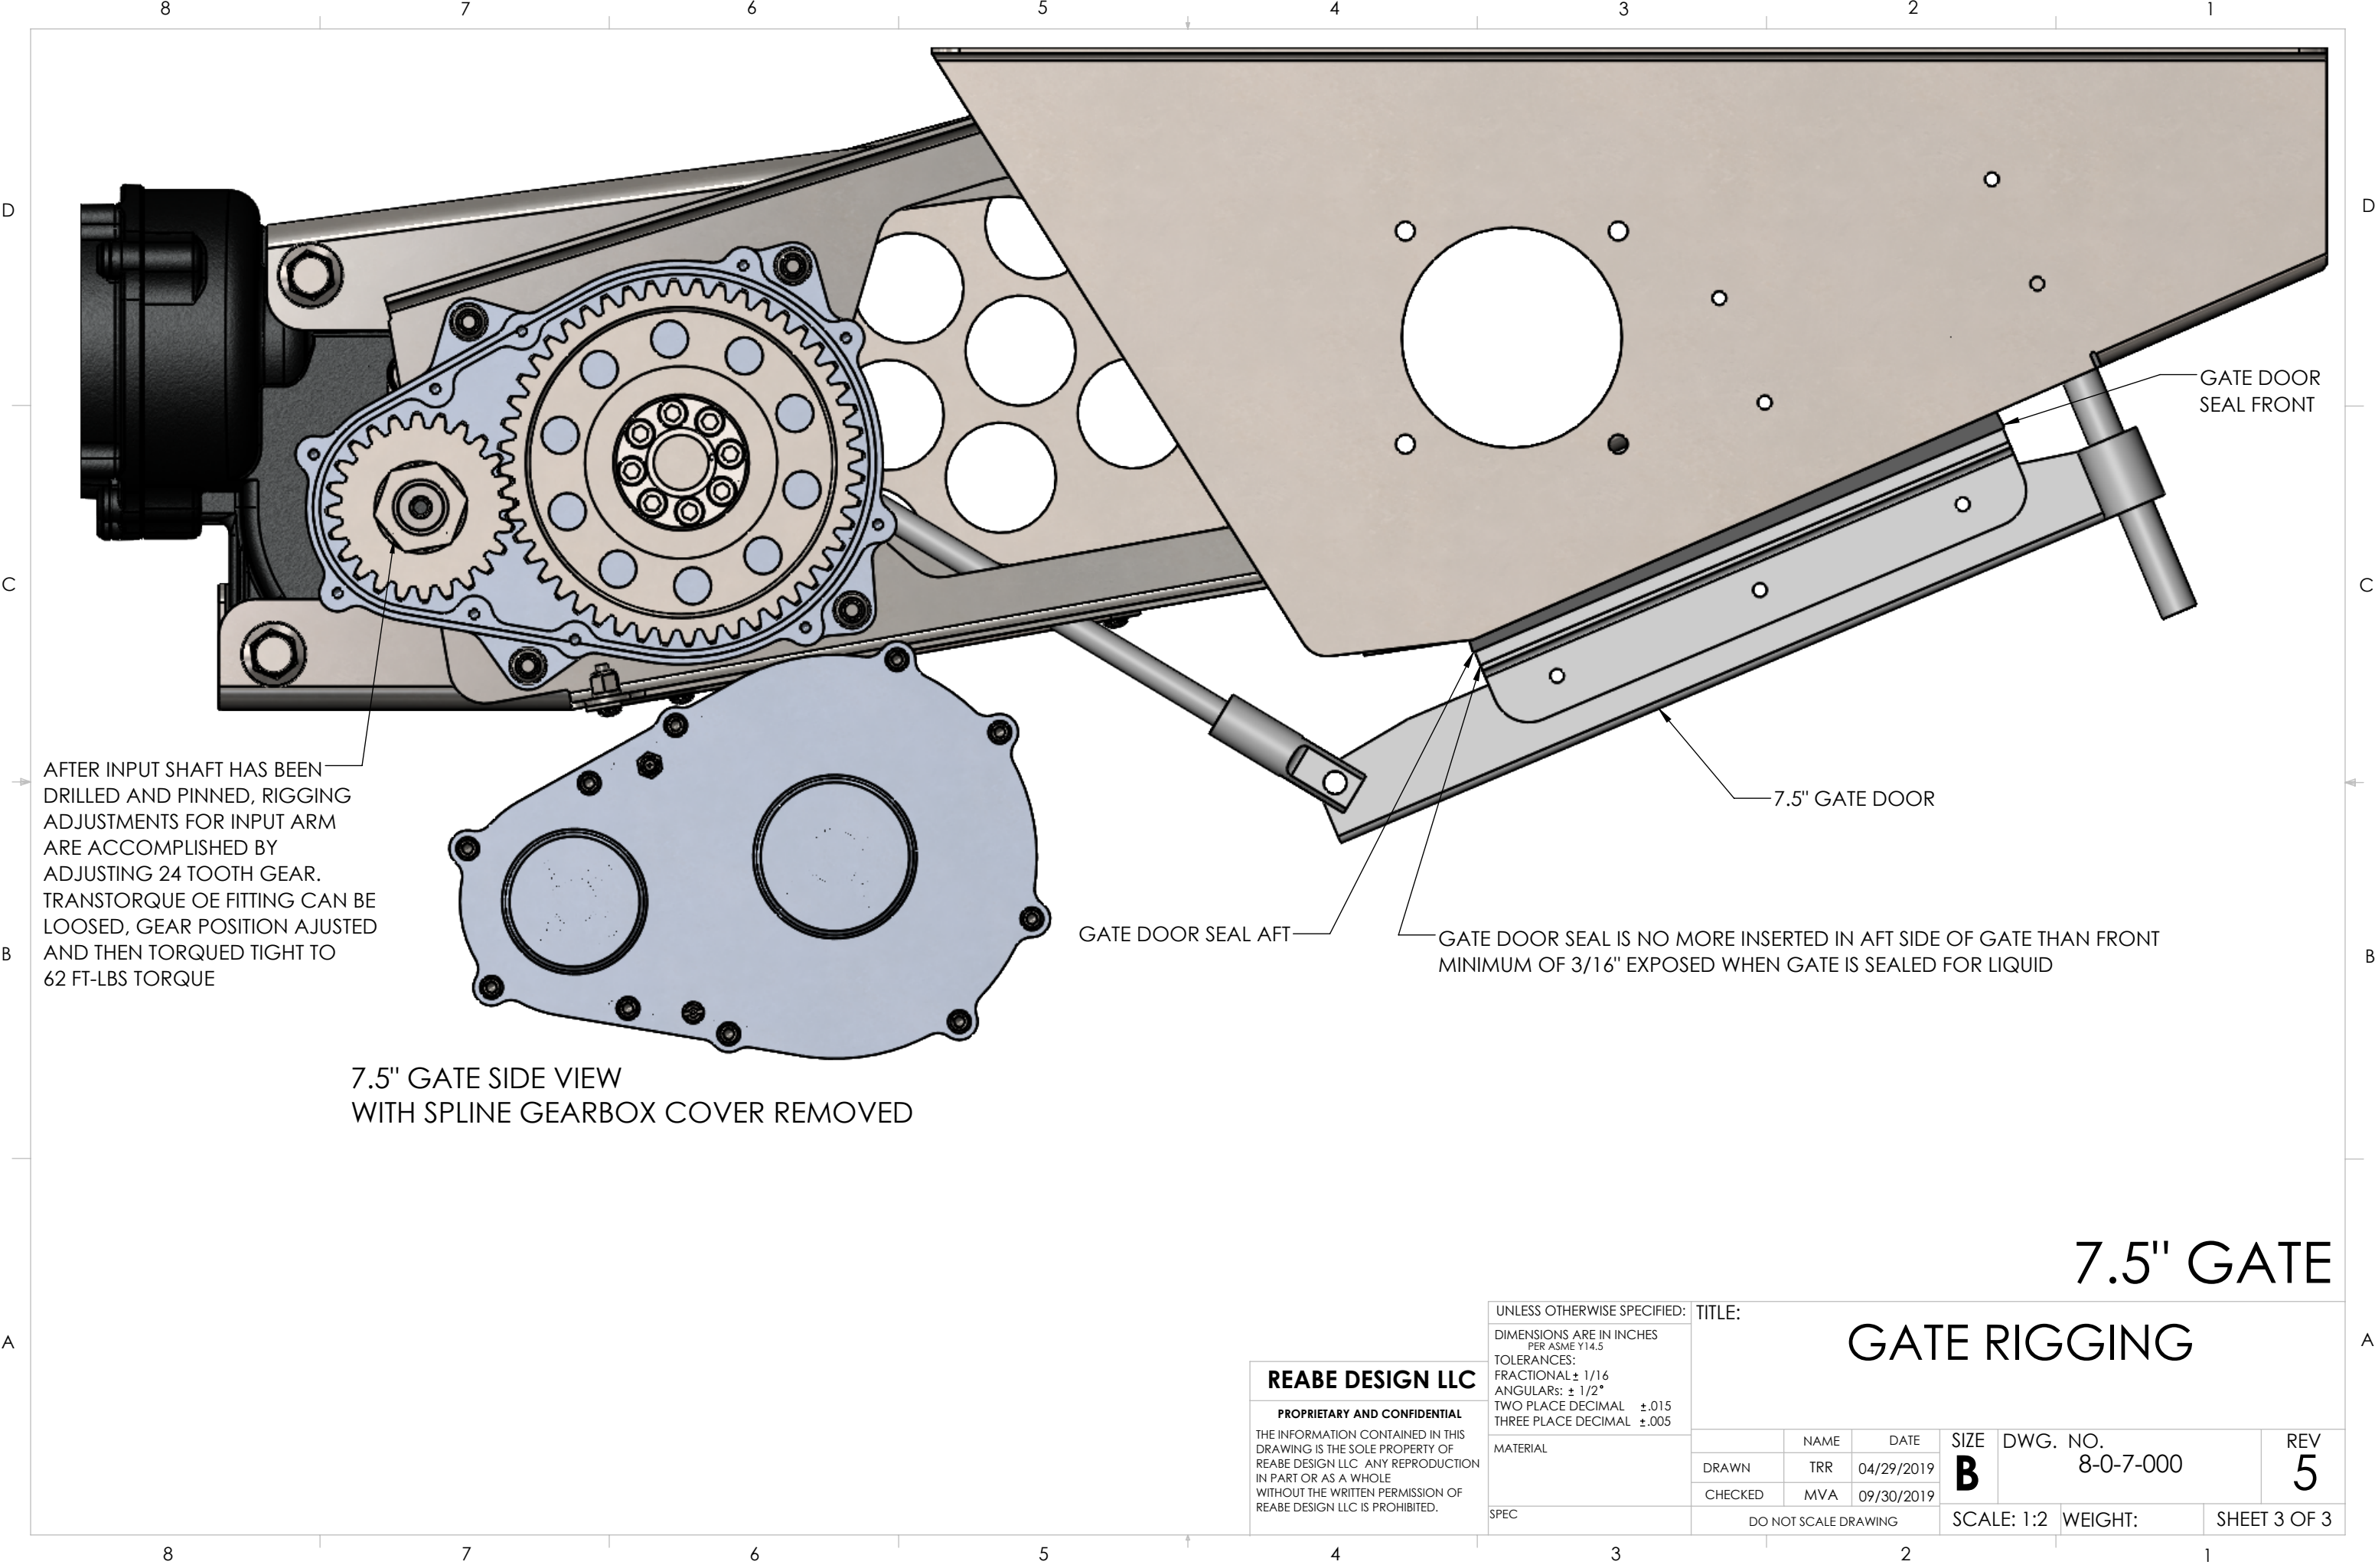

7.5" GATE SIDE VIEW
WITH SPLINE GEARBOX COVER REMOVED

7.5" GATE

GATE RIGGING

REABE DESIGN LLC



PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:		TITLE: GATE RIGGING					
DIMENSIONS ARE IN INCHES PER ASME Y14.5							
TOLERANCES:							
FRACTIONAL ± 1/16							
ANGULARS: ± 1/2°							
TWO PLACE DECIMAL ±.015		SIZE DWG. NO. REV					
THREE PLACE DECIMAL ±.005							
MATERIAL							
SPEC			NAME	DATE	B	8-0-7-000	5
		DRAWN	TRR	04/29/2019			
		CHECKED	MVA	09/30/2019			
		DO NOT SCALE DRAWING			SCALE: 1:2	WEIGHT:	SHEET 3 OF 3

PART NUMBER: 8-1-1-000
MANUFACTURE: REABE DESIGN LLC
MFG PART NUMBER : 6002-01-01

GATE CONTROLLER

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	DRAWING APPROVAL	6/7/2018	TRR	TRR
B	ENCLOSURE WAS SHORTENED FROM 2" TO 1.5"	11/1/2019	TRR	TRR
3	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/04/2025	TRR	TRR

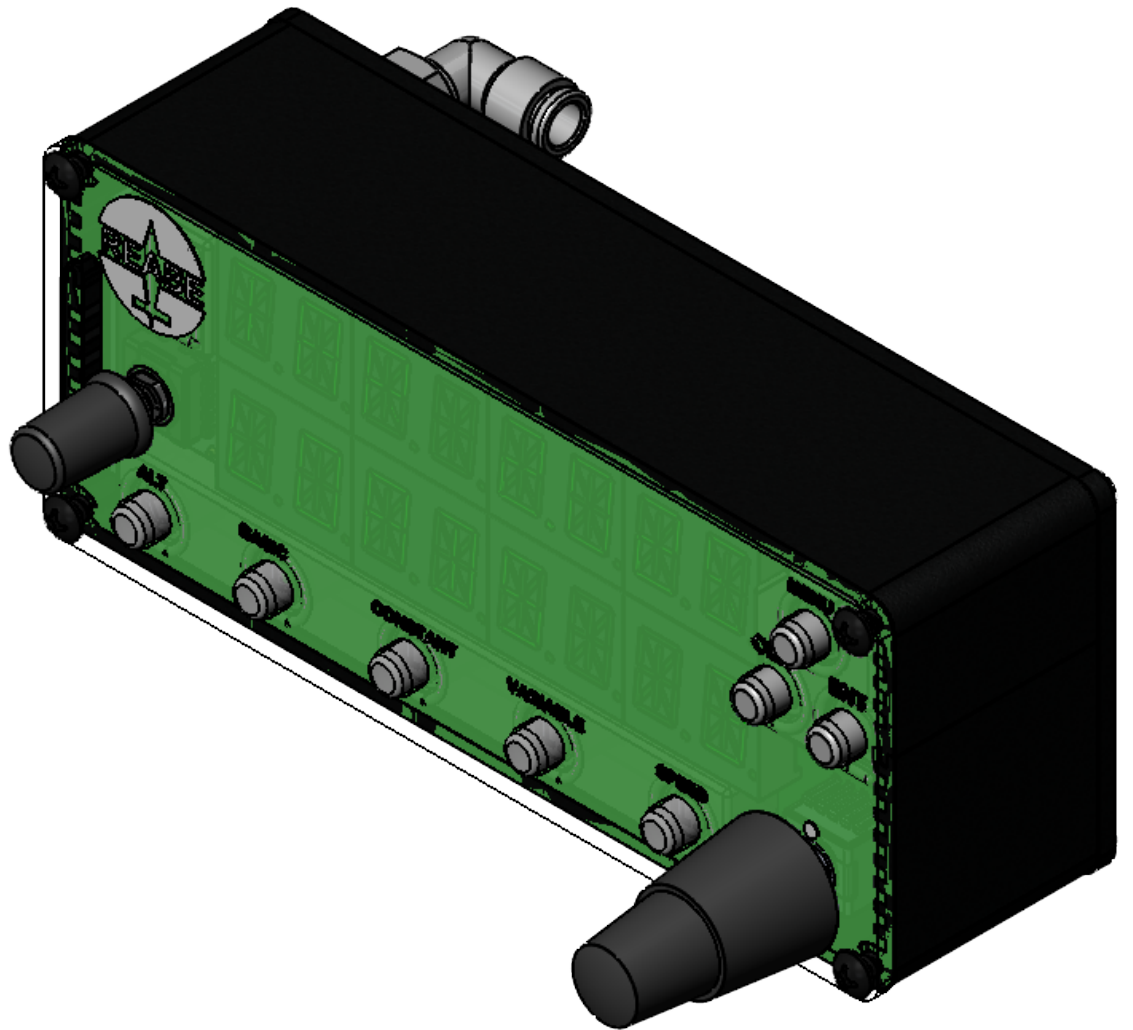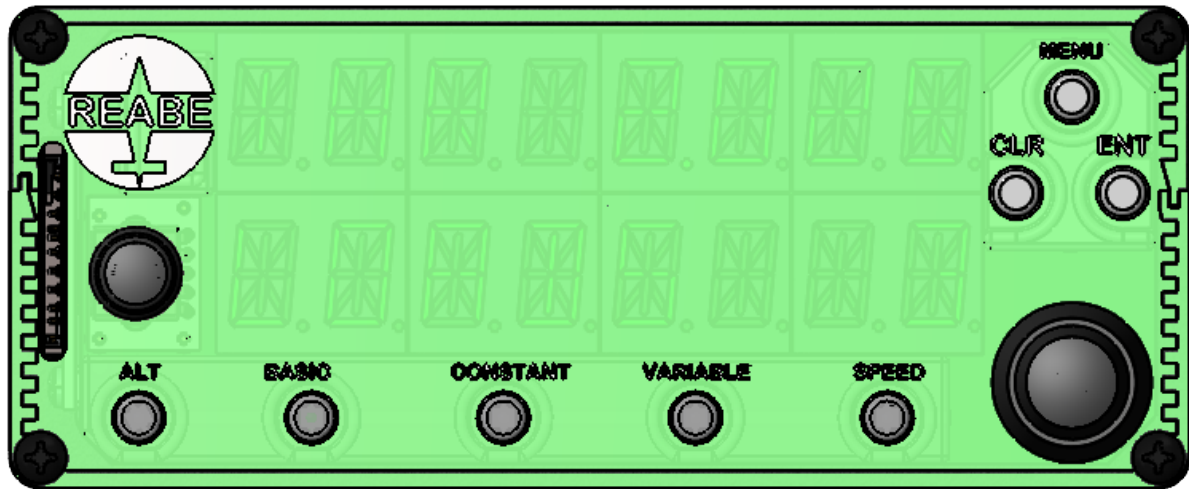

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL

SPEC

TITLE:




GATE CONTROLLER

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	06/07/2018	B	8-1-1-000	3
CHECKED	TRR	06/08/2018			
DO NOT SCALE DRAWING			SCALE: 1:1	WEIGHT:	SHEET 1 OF 3

RATED VOLTAGE
INPUT MIN: 13 VDC
 NOMINAL: 24 VDC
 MAX: 39 VDC

POWER CONSUMPTION DISPLAY ONLY
 MIN: 2.1 WATT
 NOMINAL: 5.0 WATTS
 MAX: 12.5 WATTS

ENVIRONMENTAL
STORAGE TEMP: -40C - +85C
OPERATING TEMP: -20C - +80C
G FORCE: 10 G SHOCK TESTED
IP CODE: 54

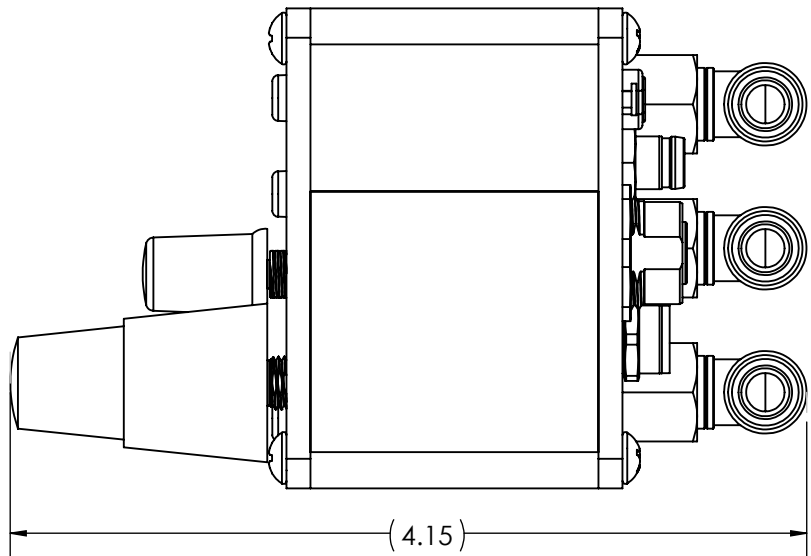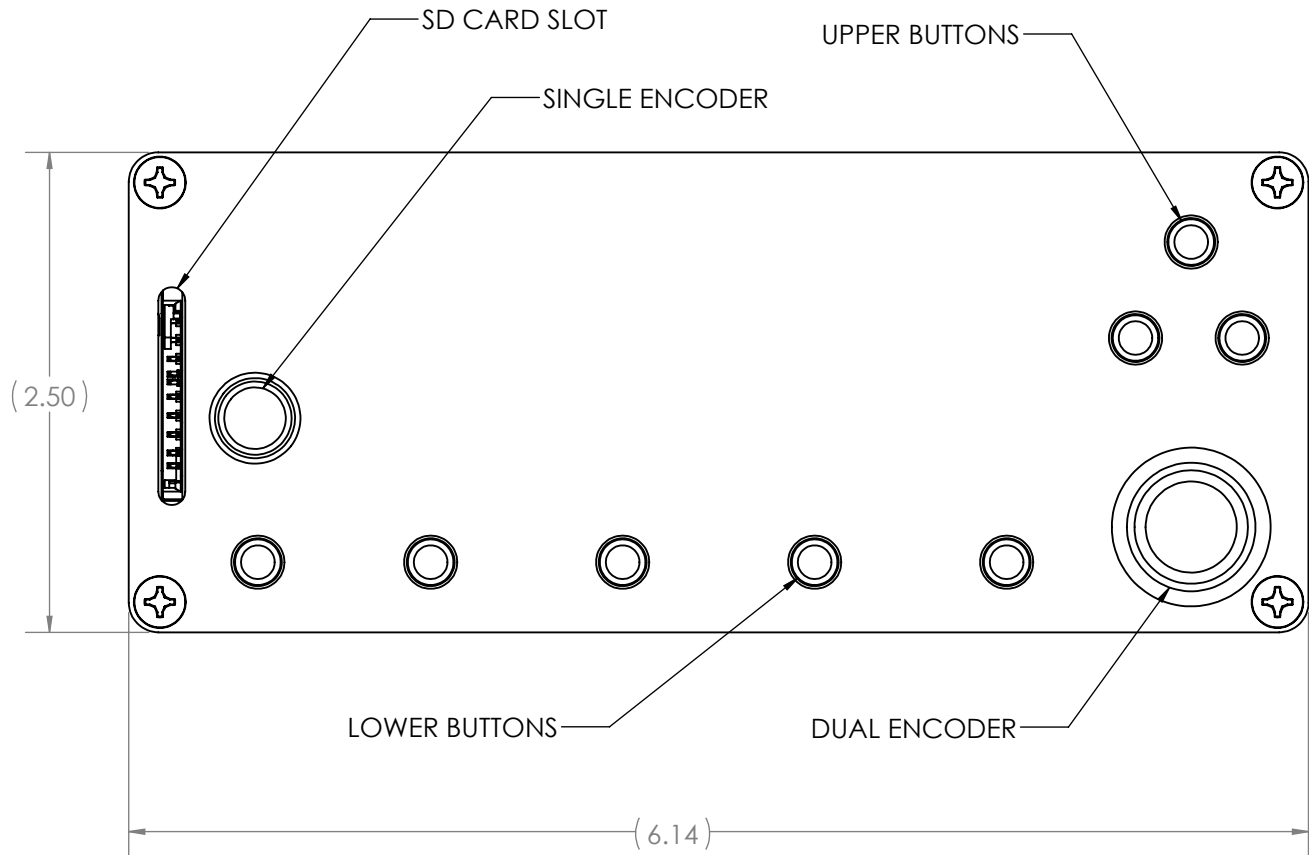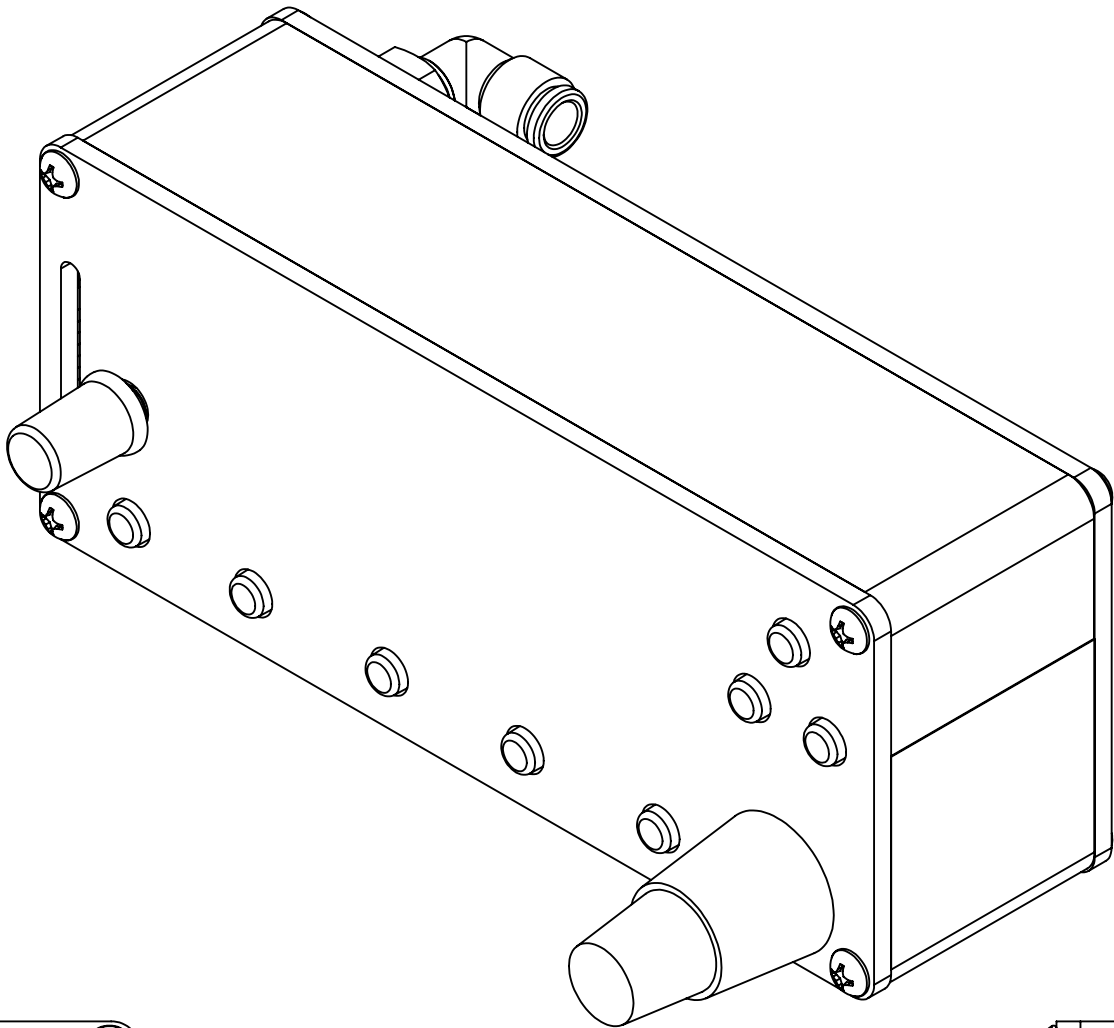

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL


SPEC

TITLE:

GATE CONTROLLER

DRAWN		NAME	DATE	SIZE	DWG. NO.	REV
CHECKED		TRR	06/07/2018	B	8-1-1-000	3
DO NOT SCALE DRAWING				SCALE: 1:1	WEIGHT:	SHEET 2 OF 3

PIN\PORT	MAIN	PROX	REABE HOPPER GAUGE	REABE REMOTE GAUGE
1	FAULT LED+	24V DC	COM IN	COM OUT
2	FAULT LED-	NO-CON	COM OUT	COM IN
3	EPAS FAULT	GND	+V GAUGE	+V GAUGE
4	EPAS IGNITION	PROX-OUT	GND	GND
5	EPAS CAN H			
6	EPAS CAN L			
7	CAN SHIELD			
8	CLEANOUT+			
9	CLEANOUT-			
10	GPS CAN H			
11	GPS CAN L			
12	-			
13	POWER +24V			
14	MODE-B			
15	MODE-COM			
16	MODE-W			
17	O/C-B			
18	O/C-COM			
19	O/C-W			
20	GPS RS-232 IN			
21	GPS RS-232 OUT			
22	ROCK LED-			
23	ROCK LED+			
24	GND			
25	GND			

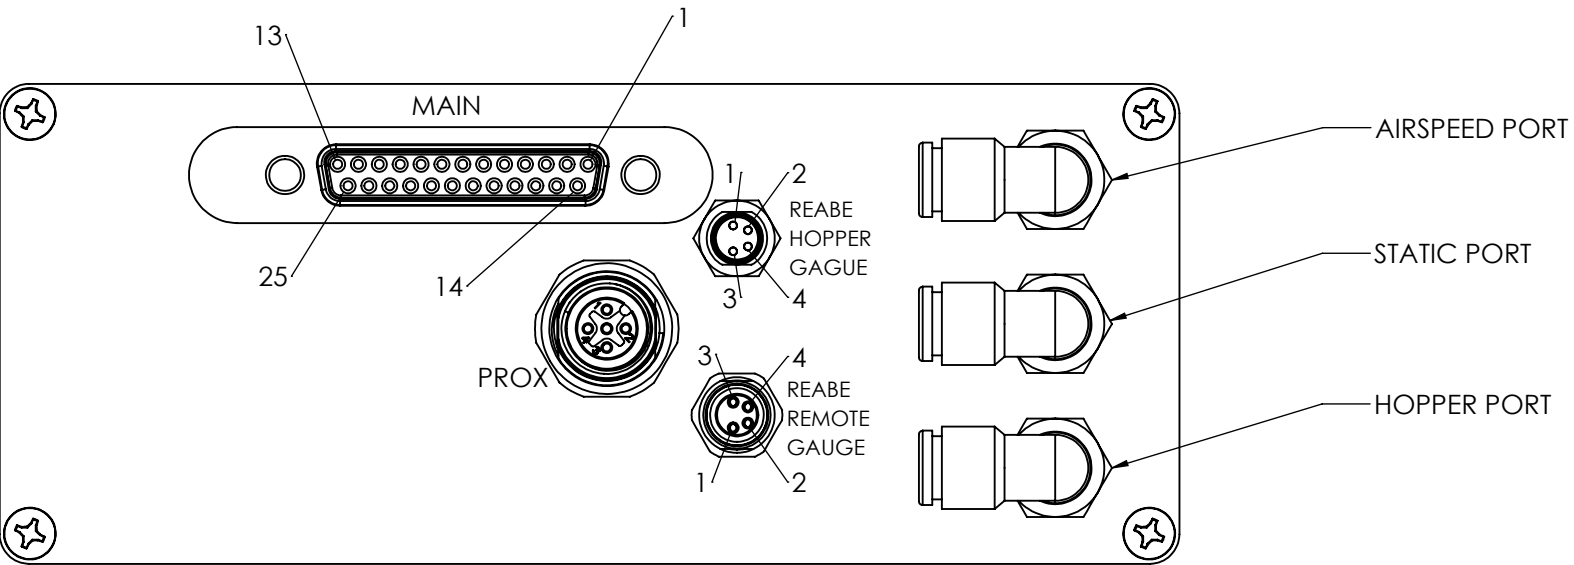

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL ± 1/16
ANGULARS: ± 1/2°
TWO PLACE DECIMAL ±.015
THREE PLACE DECIMAL ±.005

MATERIAL

SPEC

TITLE:

GATE CONTROLLER

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	06/07/2018	B	8-1-1-000	3
CHECKED	TRR	06/08/2018			

DO NOT SCALE DRAWING

SCALE: 1:1

WEIGHT:

SHEET 3 OF 3

8 7 6 5 4 3 2 1

D

D

C

C

B

B





A

A

8 7 6 5 4 3 2 1

POWER CONVERTER

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	ORIGINAL RELEASE	1/24/2018	TRR
B	ADDED DIODES	3/1/2019	TRR
3	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/04/2025	TRR

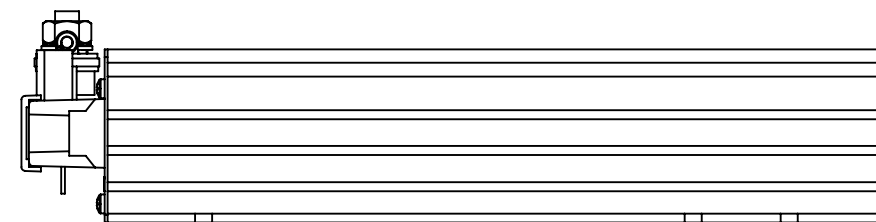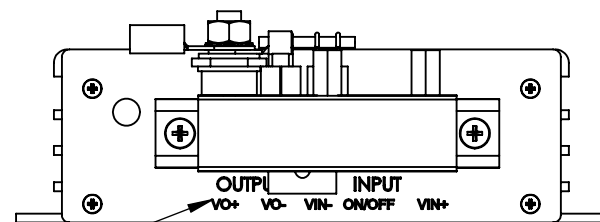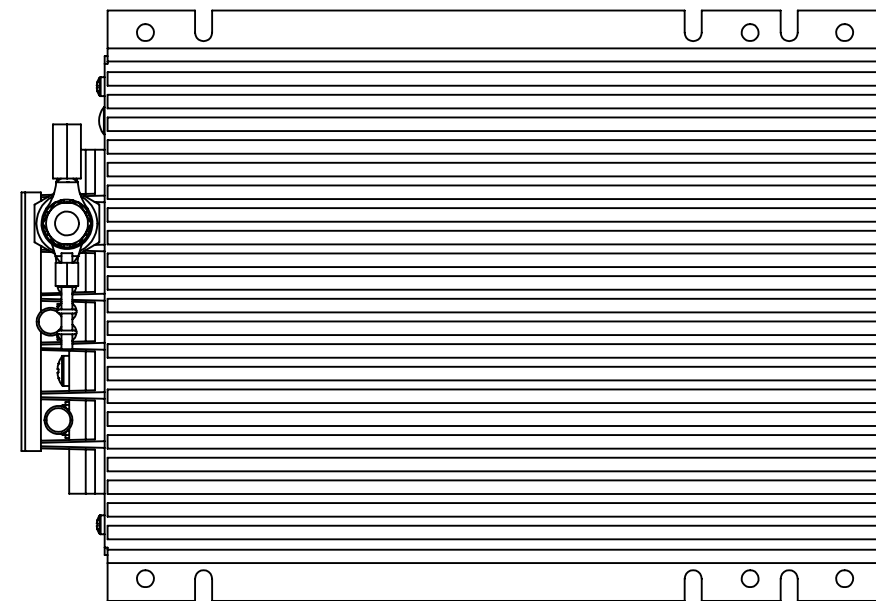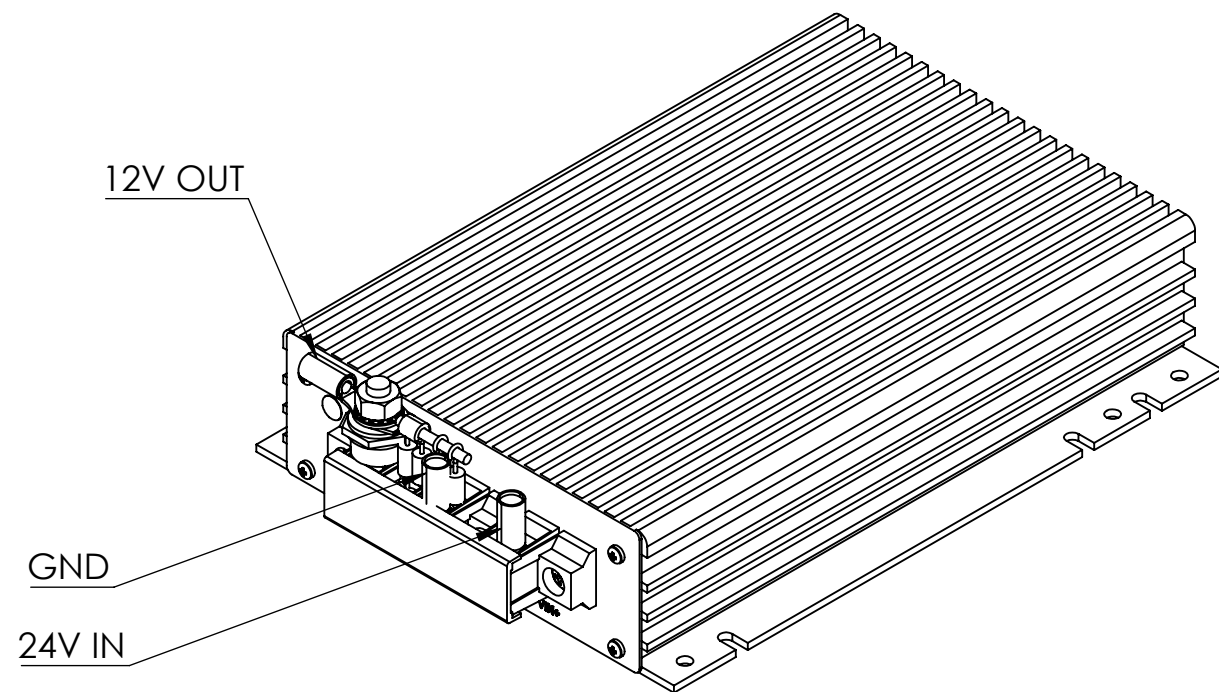

24V TERMINAL: LABELED VIN+
GND TERMINAL: LABELED VIN- AND VO-
12V TERMINAL: STUD OF DIODE ON VO+

UNIT LABEL

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULAR: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL


SPEC

0:	TITLE:
----	--------



POWER CONVERTER

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	1/24/2018	B	8-1-2-000	3
CHECKED	TRR	1/24/2018			

SCALE: 1:2	WEIGHT:	SHEET 1 OF 1
------------	---------	--------------

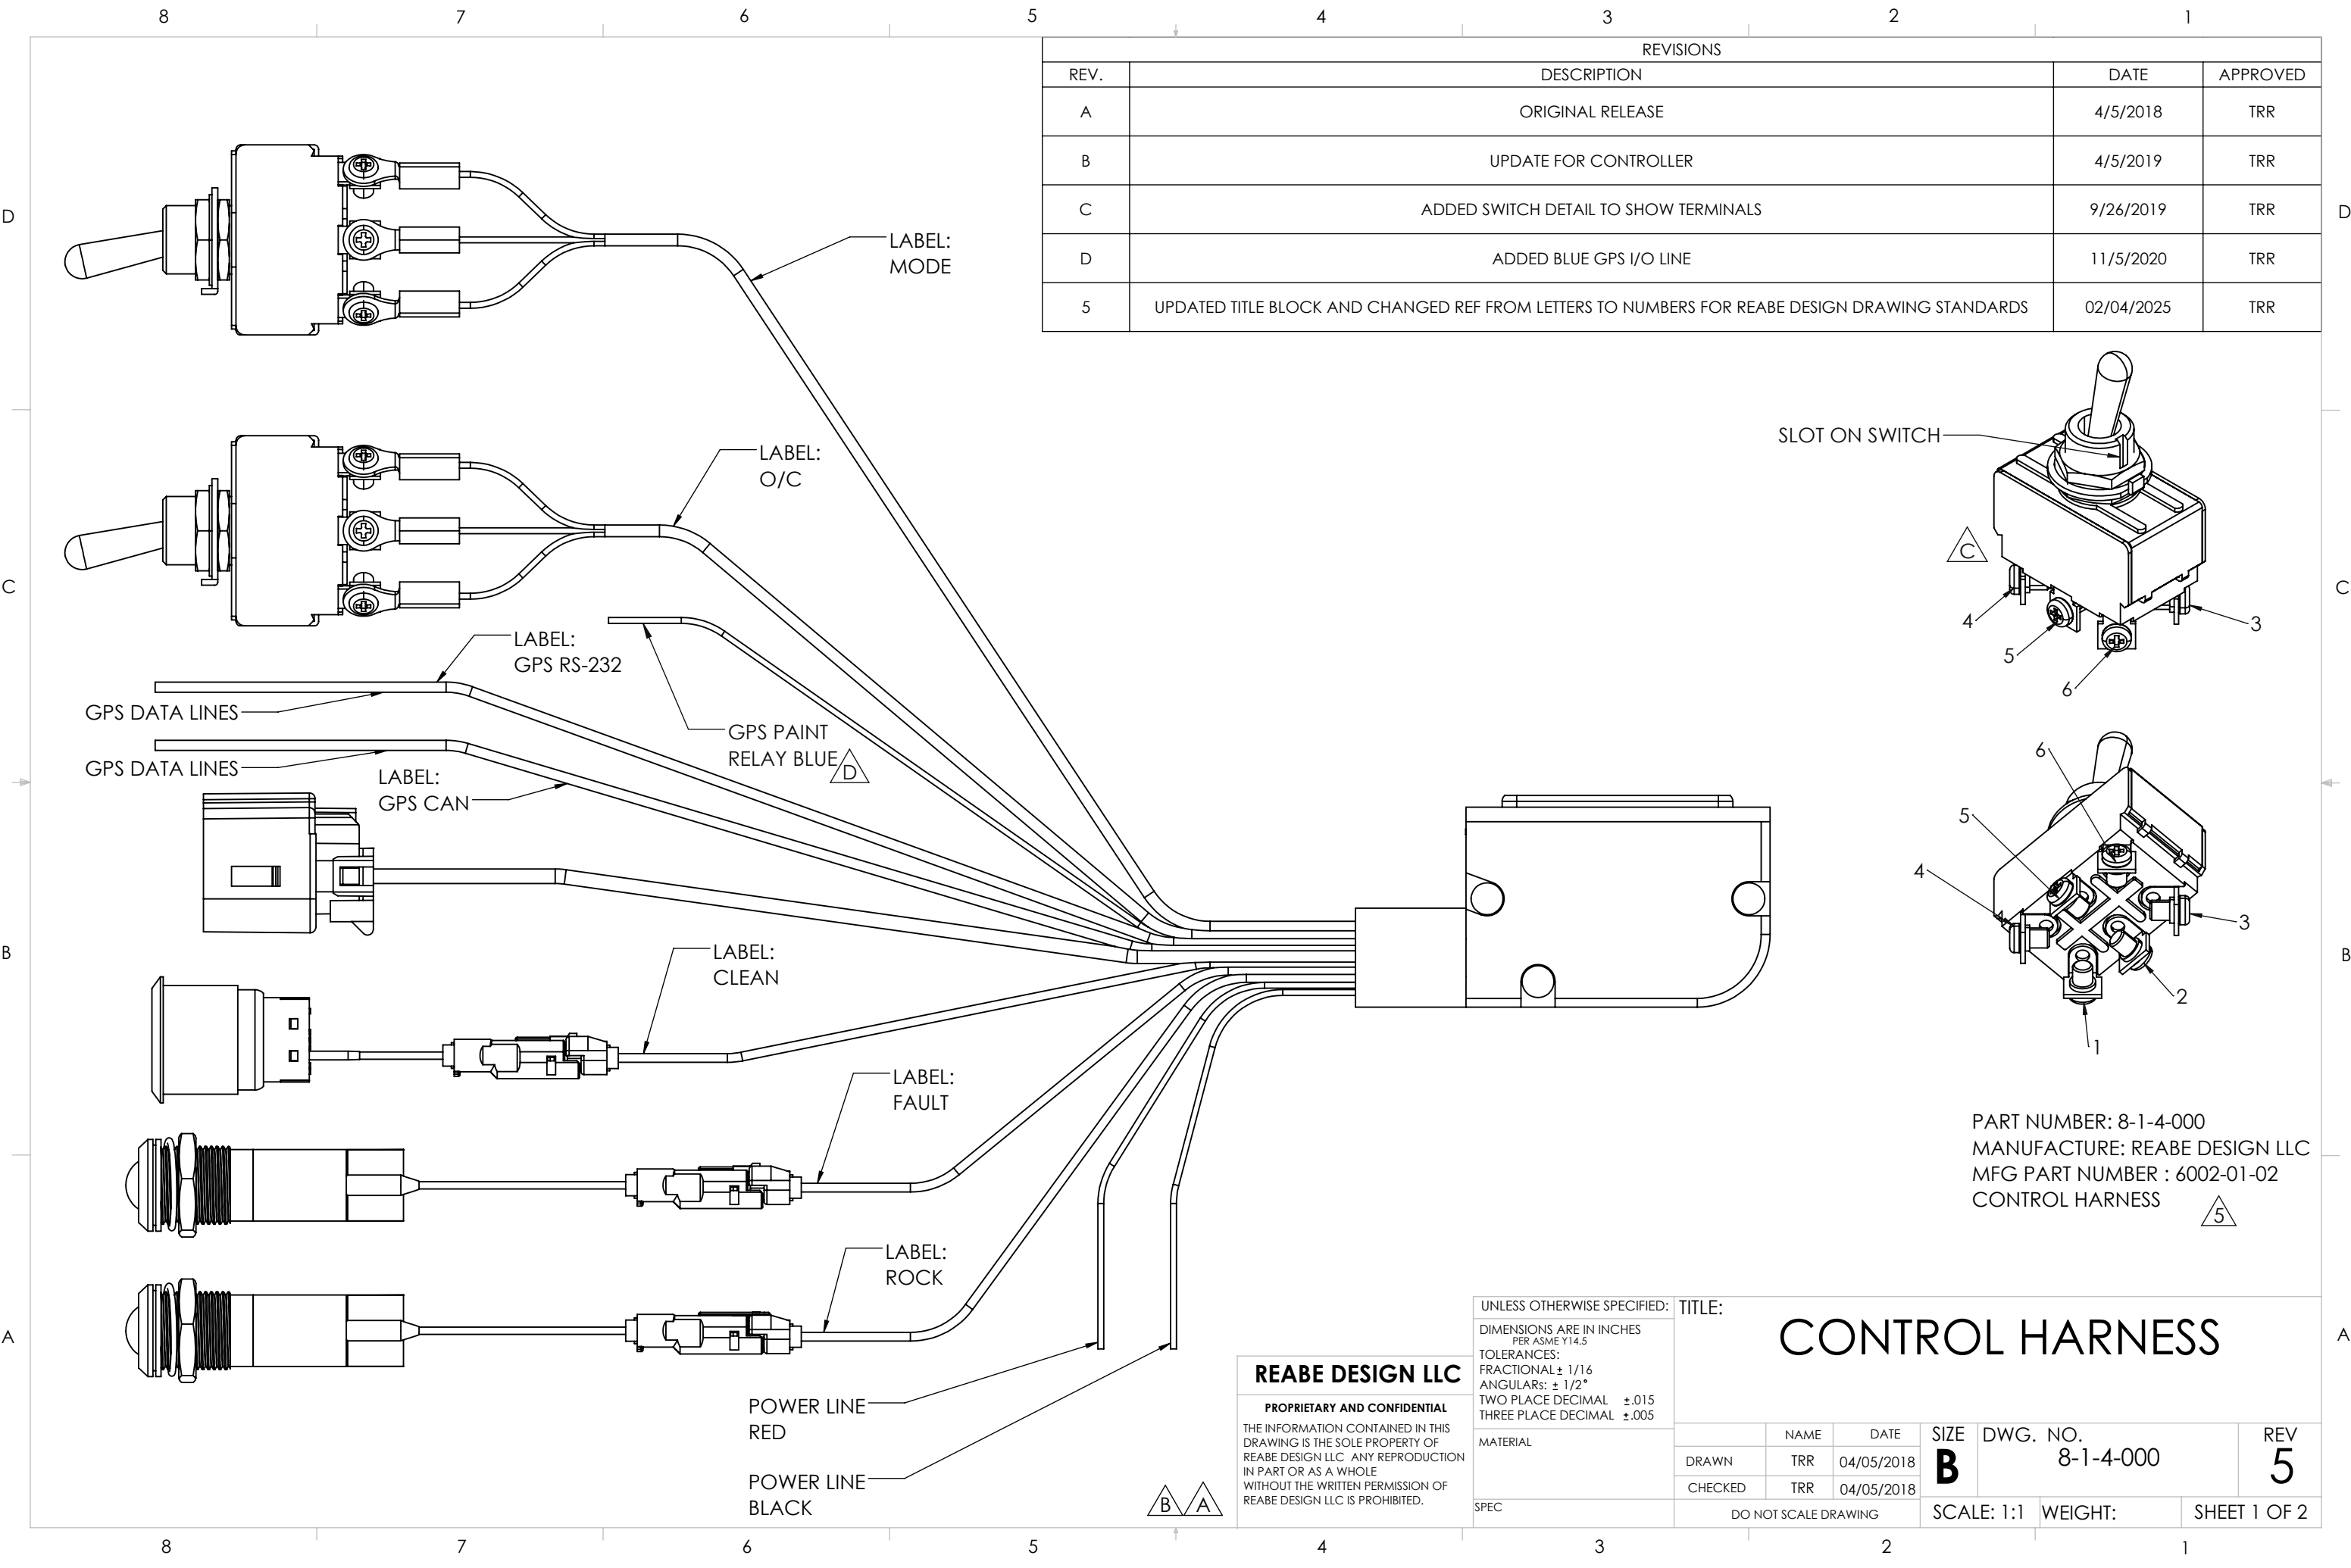

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	ORIGINAL RELEASE	4/5/2018	TRR
B	UPDATE FOR CONTROLLER	4/5/2019	TRR
C	ADDED SWITCH DETAIL TO SHOW TERMINALS	9/26/2019	TRR
D	ADDED BLUE GPS I/O LINE	11/5/2020	TRR
5	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/04/2025	TRR

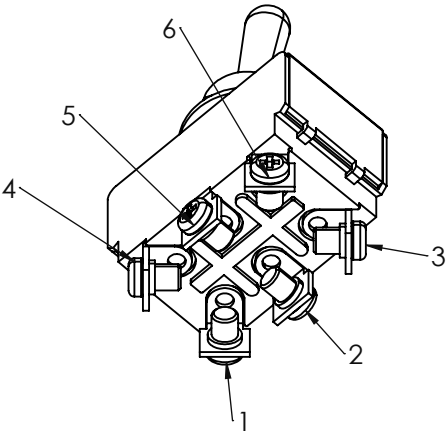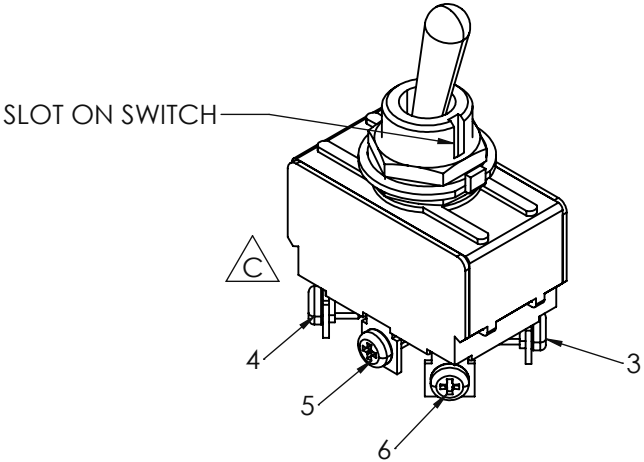

PART NUMBER: 8-1-4-000
MANUFACTURE: REABE DESIGN LLC
MFG PART NUMBER : 6002-01-02
CONTROL HARNESS

REABE DESIGN LLC
PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:	
DIMENSIONS ARE IN INCHES PER ASME Y14.5	
TOLERANCES:	
FRACTIONAL ± 1/16	
ANGULARs: ± 1/2°	
TWO PLACE DECIMAL ±.015	
THREE PLACE DECIMAL ±.005	
MATERIAL	
SPEC	


TITLE:

CONTROL HARNESS


	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	04/05/2018	B	8-1-4-000	5
CHECKED	TRR	04/05/2018			
DO NOT SCALE DRAWING			SCALE: 1:1	WEIGHT:	SHEET 1 OF 2

- NOTE
1. SINLE CONDUCTOR WIRE IS M22759-16-20-9 OR SIMILAR
 2. DUAL CONDUCTOR WIRE IS M27500/20SB2U00 OR SIMILAR
 3. TRIPPLE CONDUCTOR WIRE IS M27500/22SB3U00 OR SIMILAR
 4. DUAL CONDUCTOR SHIELDED WIRE IS M27500/20SB2T23 OR SIMILAR
 5. DPDT SWITCH IS 8824K14 SWITCH OR SIMILAR
 6. #6 RING TERMINAL IS 171508-1 OR SIMILAR
 7. SCHEMATIC DIAGRAM USED TO SHOW WIRE CONECTIONS
 8. SCHEMATIC DIAGRAM IS OF FULL SYSTEM / MORE DATA THAN JUST CONTROL HARNESS
 9. WIRE LENGTH SHOWN IS LENGHT OF WIRE FROM TERMINAL TO TERMINAL
 10. LENGHT TOLORANCE IS PLUS TWO FEET MINUS ONE FOOT

ELECTRICAL WIRE
PNEUMATIC LINE

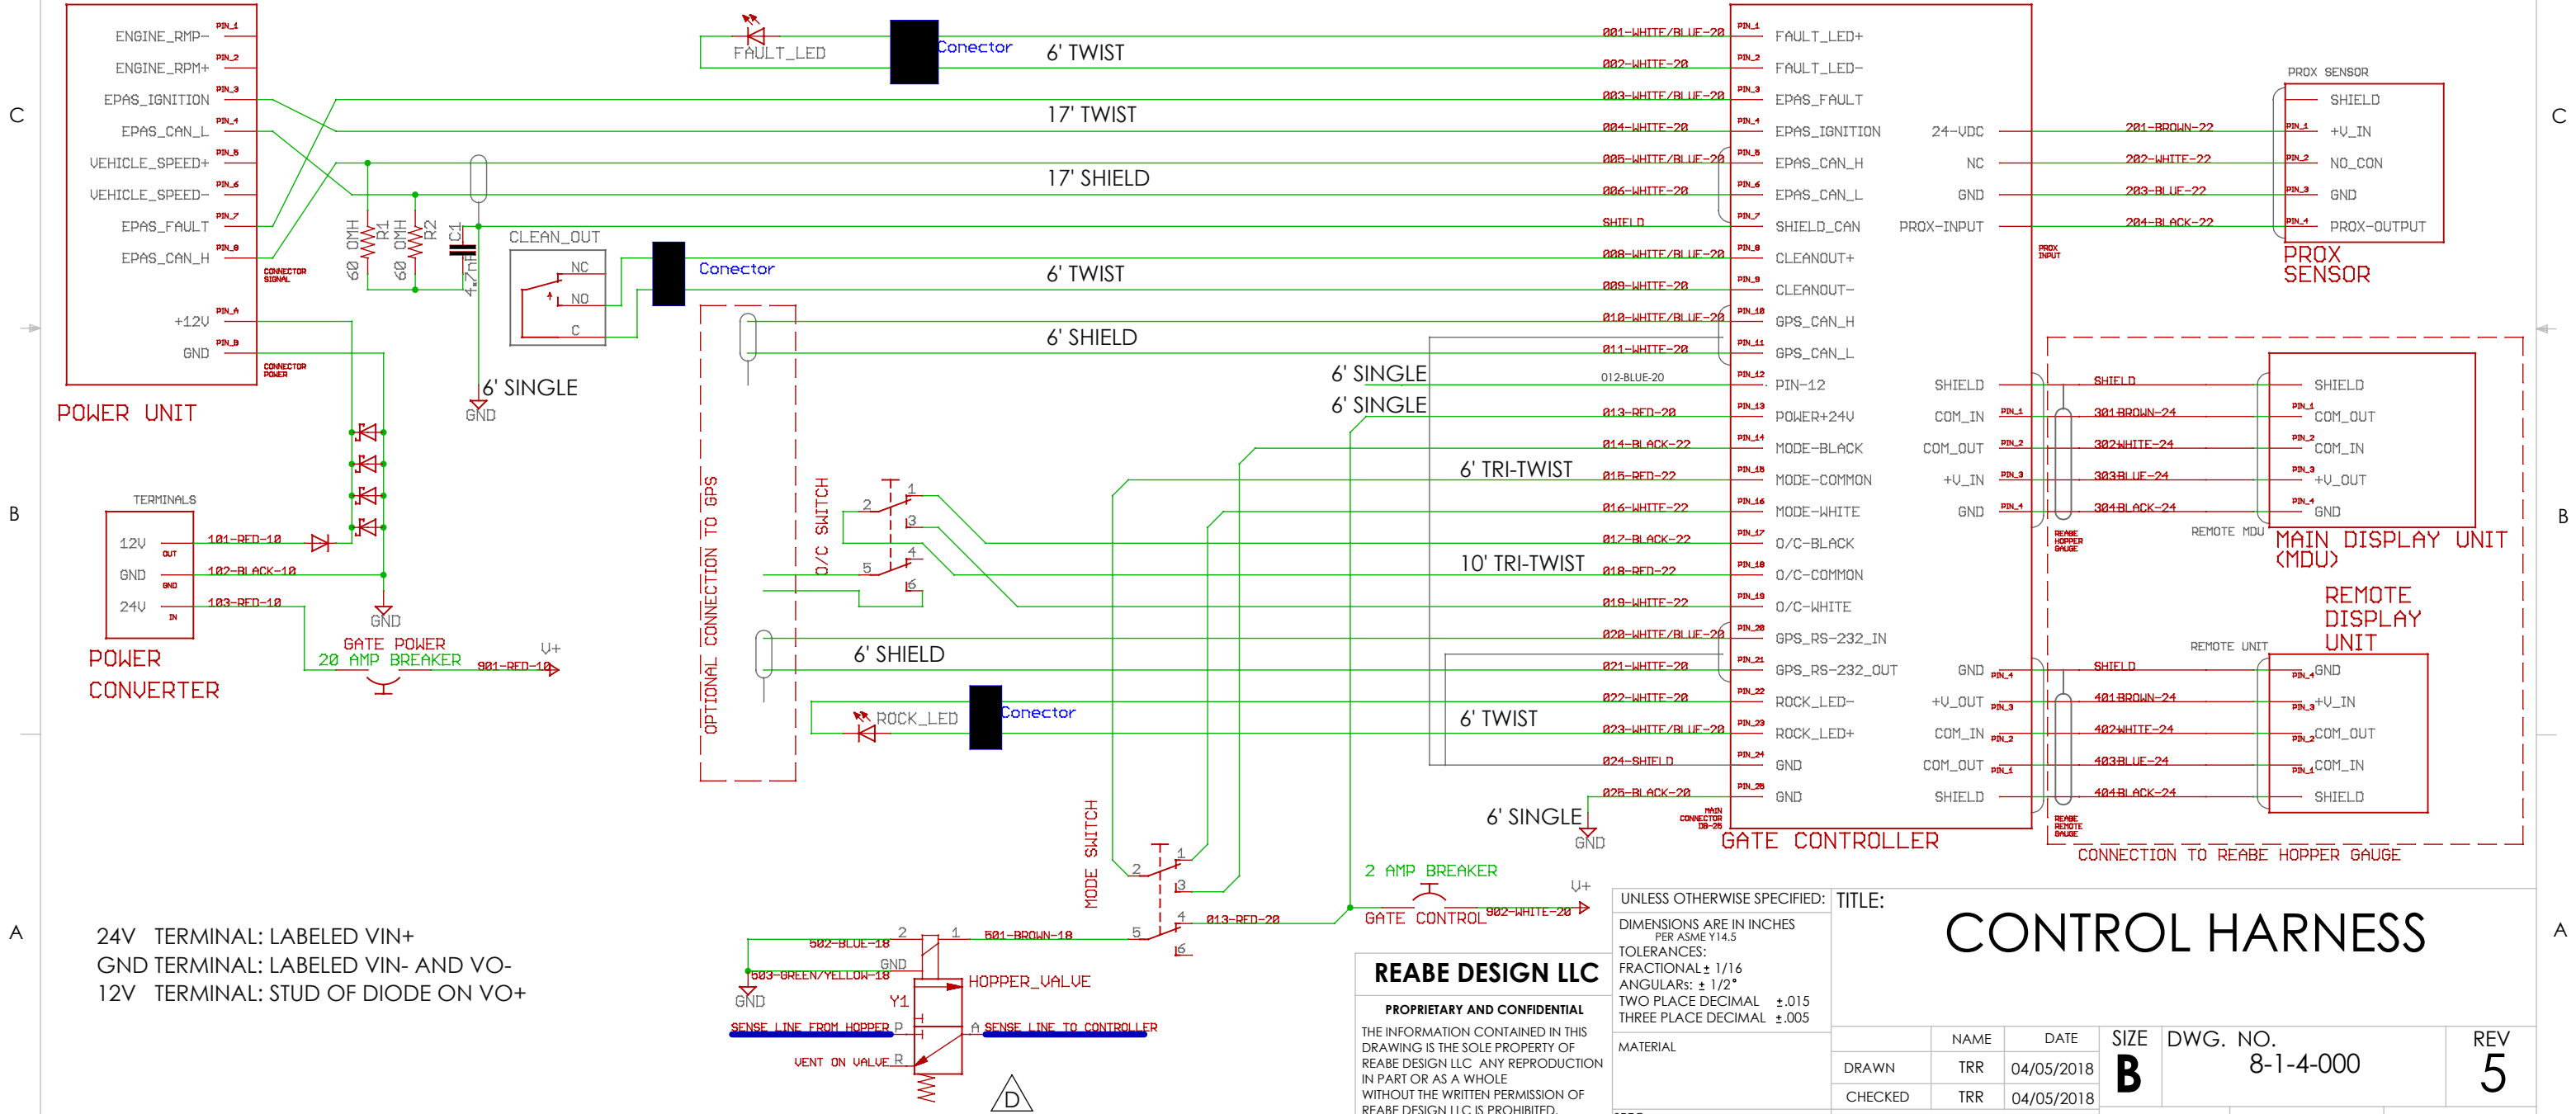

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	ORIGINAL RELEASE	6/1/2018	TRR
2	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/04/2025	TRR

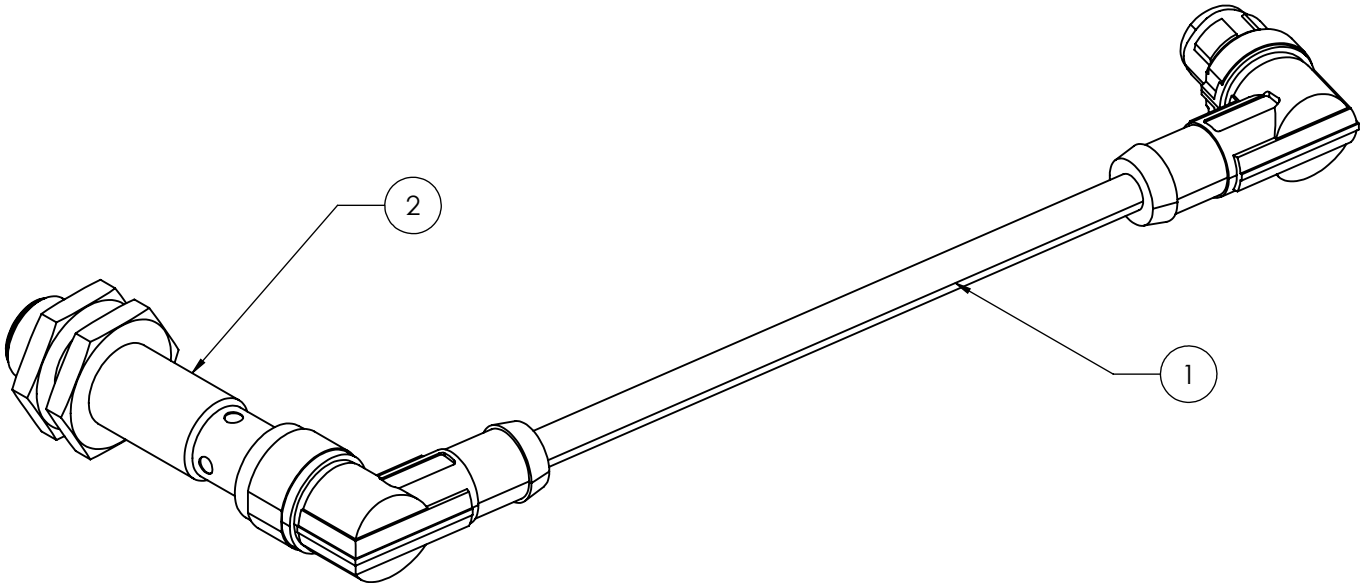

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	8-1-4-501	PROX CABLE	1
2	8-1-4-502	PROX SENSOR	1

UNLESS OTHERWISE SPECIFIED: TITLE:

DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARs: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

PROX CABLE ASSY

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS
PROHIBITED.

MATERIAL

DO NOT SCALE DRAWING


	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	06/01/2018	A	8-1-4-500	2
CHECKED	TRR	06/01/2018			
			SCALE: 1:1	WEIGHT:	SHEET 1 OF 1

REABE DESIGN LLC



NOTE:
8-1-5-002 IS SUPPLIED IN 10 FOOT LENGHTS

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	ORIGINAL RELEASE	4/29/2019	TRR
B	CONNECTOR MOVED TO ASSAMBLY	8/26/2019	TRR
3	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/04/2025	TRR

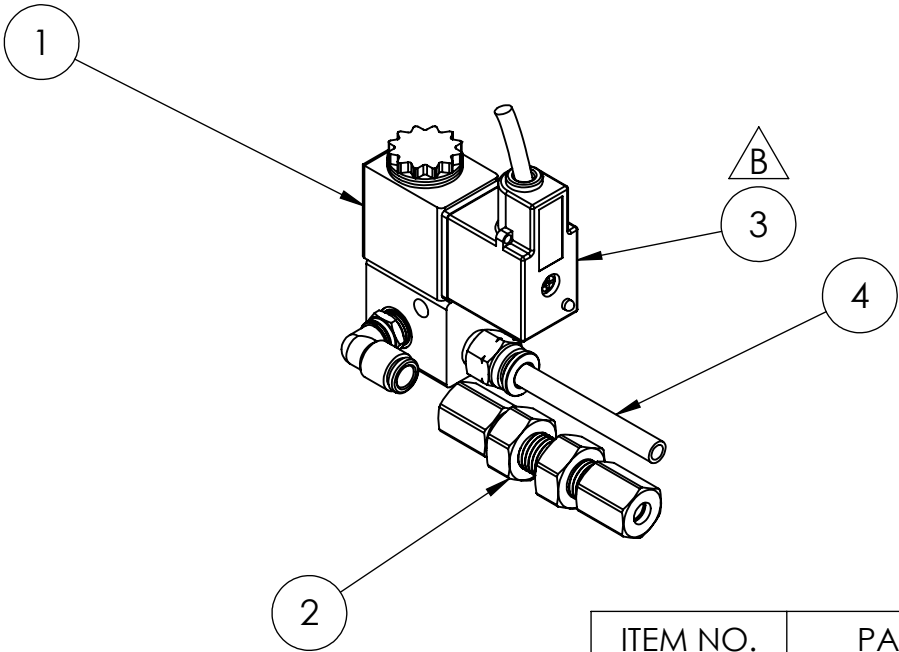

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	8-1-7-100	HOPPER VALVE ASSY	1
2	8-1-7-002	HOPPER 1/4" BULKHEAD	1
3	8-1-7-006	HOPPER VALVE CABLE	1
4	8-1-5-002	1/4" AIRLINE	1

UNLESS OTHERWISE SPECIFIED: TITLE:

DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

HOPPER VALVE KIT

MATERIAL

	NAME	DATE
DRAWN	TRR	04/29/2019
CHECKED	TRR	04/29/2019

SIZE	DWG. NO.	REV
A	8-1-7-000	3

SCALE: 1:2 WEIGHT: SHEET 1 OF 1


DO NOT SCALE DRAWING

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS
PROHIBITED.



REABE DESIGN LLC


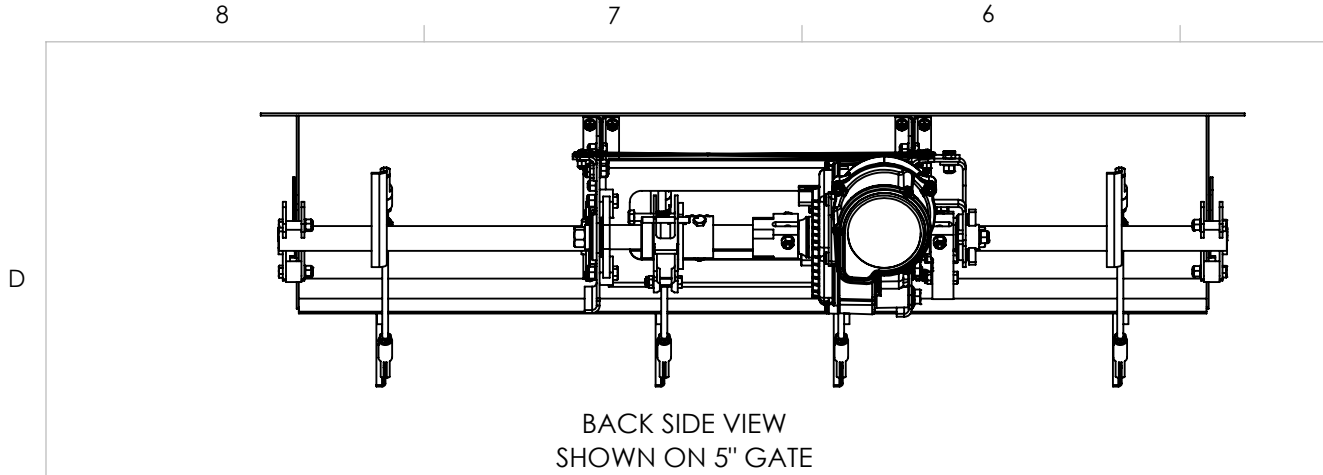


ITEM NO.	PART NUMBER	DESCRIPTION	Default/QT Y.
1	8-2-1-000	POWER GATE FRAME	1
2	8-2-2-002	INPUT ARM 2	1
3	8-2-2-003	OUTPUT ROD	1
4	8-2-2-004	OUTPUT ARM W/SPLINE	1
5	8-2-2-005	INPUT SHAFT	1
6	8-2-2-006	INPUT ARM 1	1
7	8-2-2-007	1" FLANGE BEARINGS	2
8	8-2-2-008	BUSHING 1	4
9	8-2-2-009	BUSHING 2	2
10	8-2-2-010	GATE ROD ASSY	4
11	8-2-2-105	5/16 PIVOT BOLT	4
12	8-2-3-TAB	BELL CRANK TORQUE TUBE	1
13	AN4C12	1/4-28 SS BOLT	1
14	AN4C12A	1/4-28 SS BOLT	6
15	AN4C13	1/4-28 SS BOLT	2
16	AN4C13A	1/4-28 SS BOLT	2
17	AN4C15A	1/4-28 SS BOLT	2
18	AN4C17A	1/4-28 SS BOLT	1
19	AN4C21A	1/4-28 SS BOLT	1
20	AN5C10A	5/16-24 SS BOLT	4
21	AN960C516	5/16 SS WASHER .063"	8
22	AN960C416L	1/4 SS WASHER .032"	14
23	AN310C4	1/4-28 CASTEL NUT SS	3
24	AN365C428	1/4-28 SS NYLON LOCK NUT	12
25	AN365C524	5/16-24 SS NYLON LOCK NUT	8


C

B

  A



REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	5/4/2018	TRR	TRR
B	CHANGED OUTPUT SUPPORT & ADDED CLEARANCE	1/19/2019	TRR	TRR
C	UPDATE TITLE BLOCK, MOVED NOTES TO GENERAL NOTES	10/11/2019	TRR	KMT
4	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/04/2025	TRR	TRR

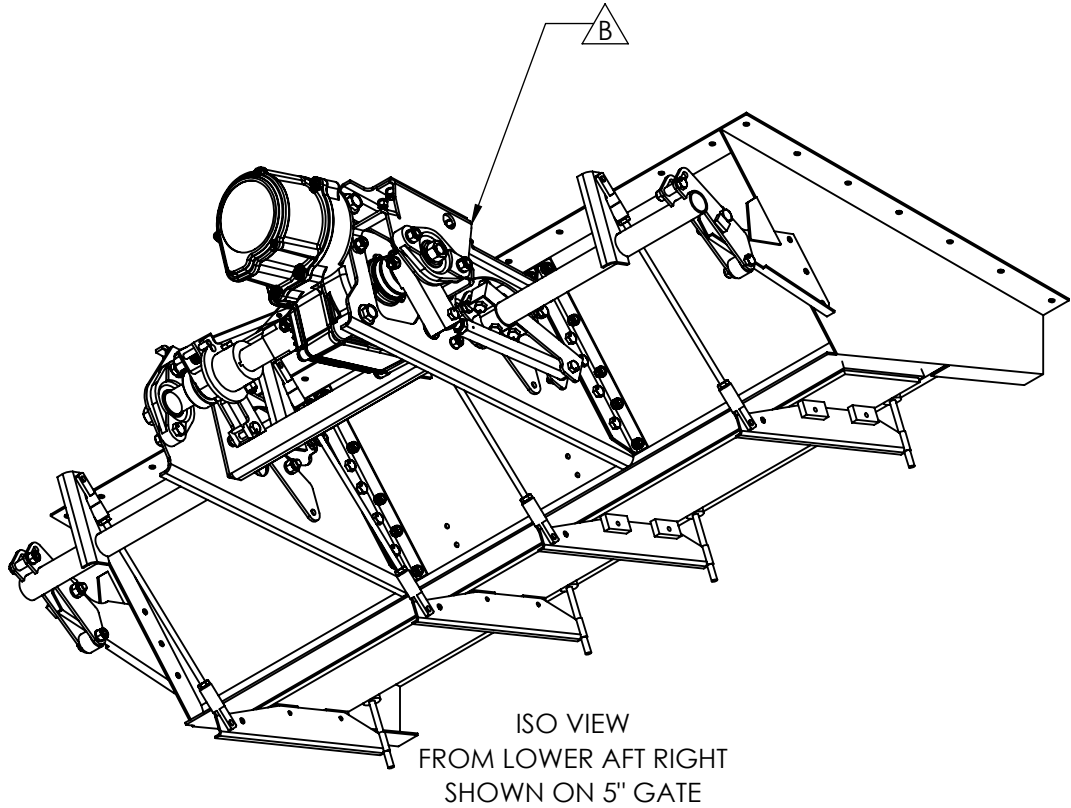


- NOTES:
- 8-2-3-380 38" BELL CRANK TORQUE TUBE USED IN 8-2-0-380 38" POWER GATE ASSY
 - 8-2-3-410 41" BELL CRANK TORQUE TUBE USED IN 8-2-0-410 41" POWER GATE ASSY
 - STOCK GATE ROD ASSY CAN BE USED IN PLACE OF 8-2-2-010 GATE ROD ASSY
 - ALL HARDWARE TORQUED PER FAA AC 43.13-1B, UNLESS OTHERWISE SPECIFIED
 - PIVOT POINT BOLTS DO NOT PINCH JOINT
 - SECURE NUT WITH COTTER PIN
 - SEE PART DRAWING FOR MATERIAL DATA
 - SEE DOCUMENT "WEIGHT-8" FOR WEIGHT AND BALANCE DATA

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:		TITLE:					
DIMENSIONS ARE IN INCHES PER ASME Y14.5		POWER GATE ASSY					
TOLERANCES:							
FRACTIONAL ± 1/16							
ANGULARS: ± 1/2°							
TWO PLACE DECIMAL ±.015							
THREE PLACE DECIMAL ±.005							
MATERIAL			NAME	DATE	SIZE	DWG. NO.	REV
		DRAWN	TRR	04/05/2018	B	8-2-0-TAB	4
		CHECKED	MVA	10/03/2019			
SPEC		DO NOT SCALE DRAWING			SCALE: 1:8	WEIGHT: 36.6#	SHEET 1 OF 3

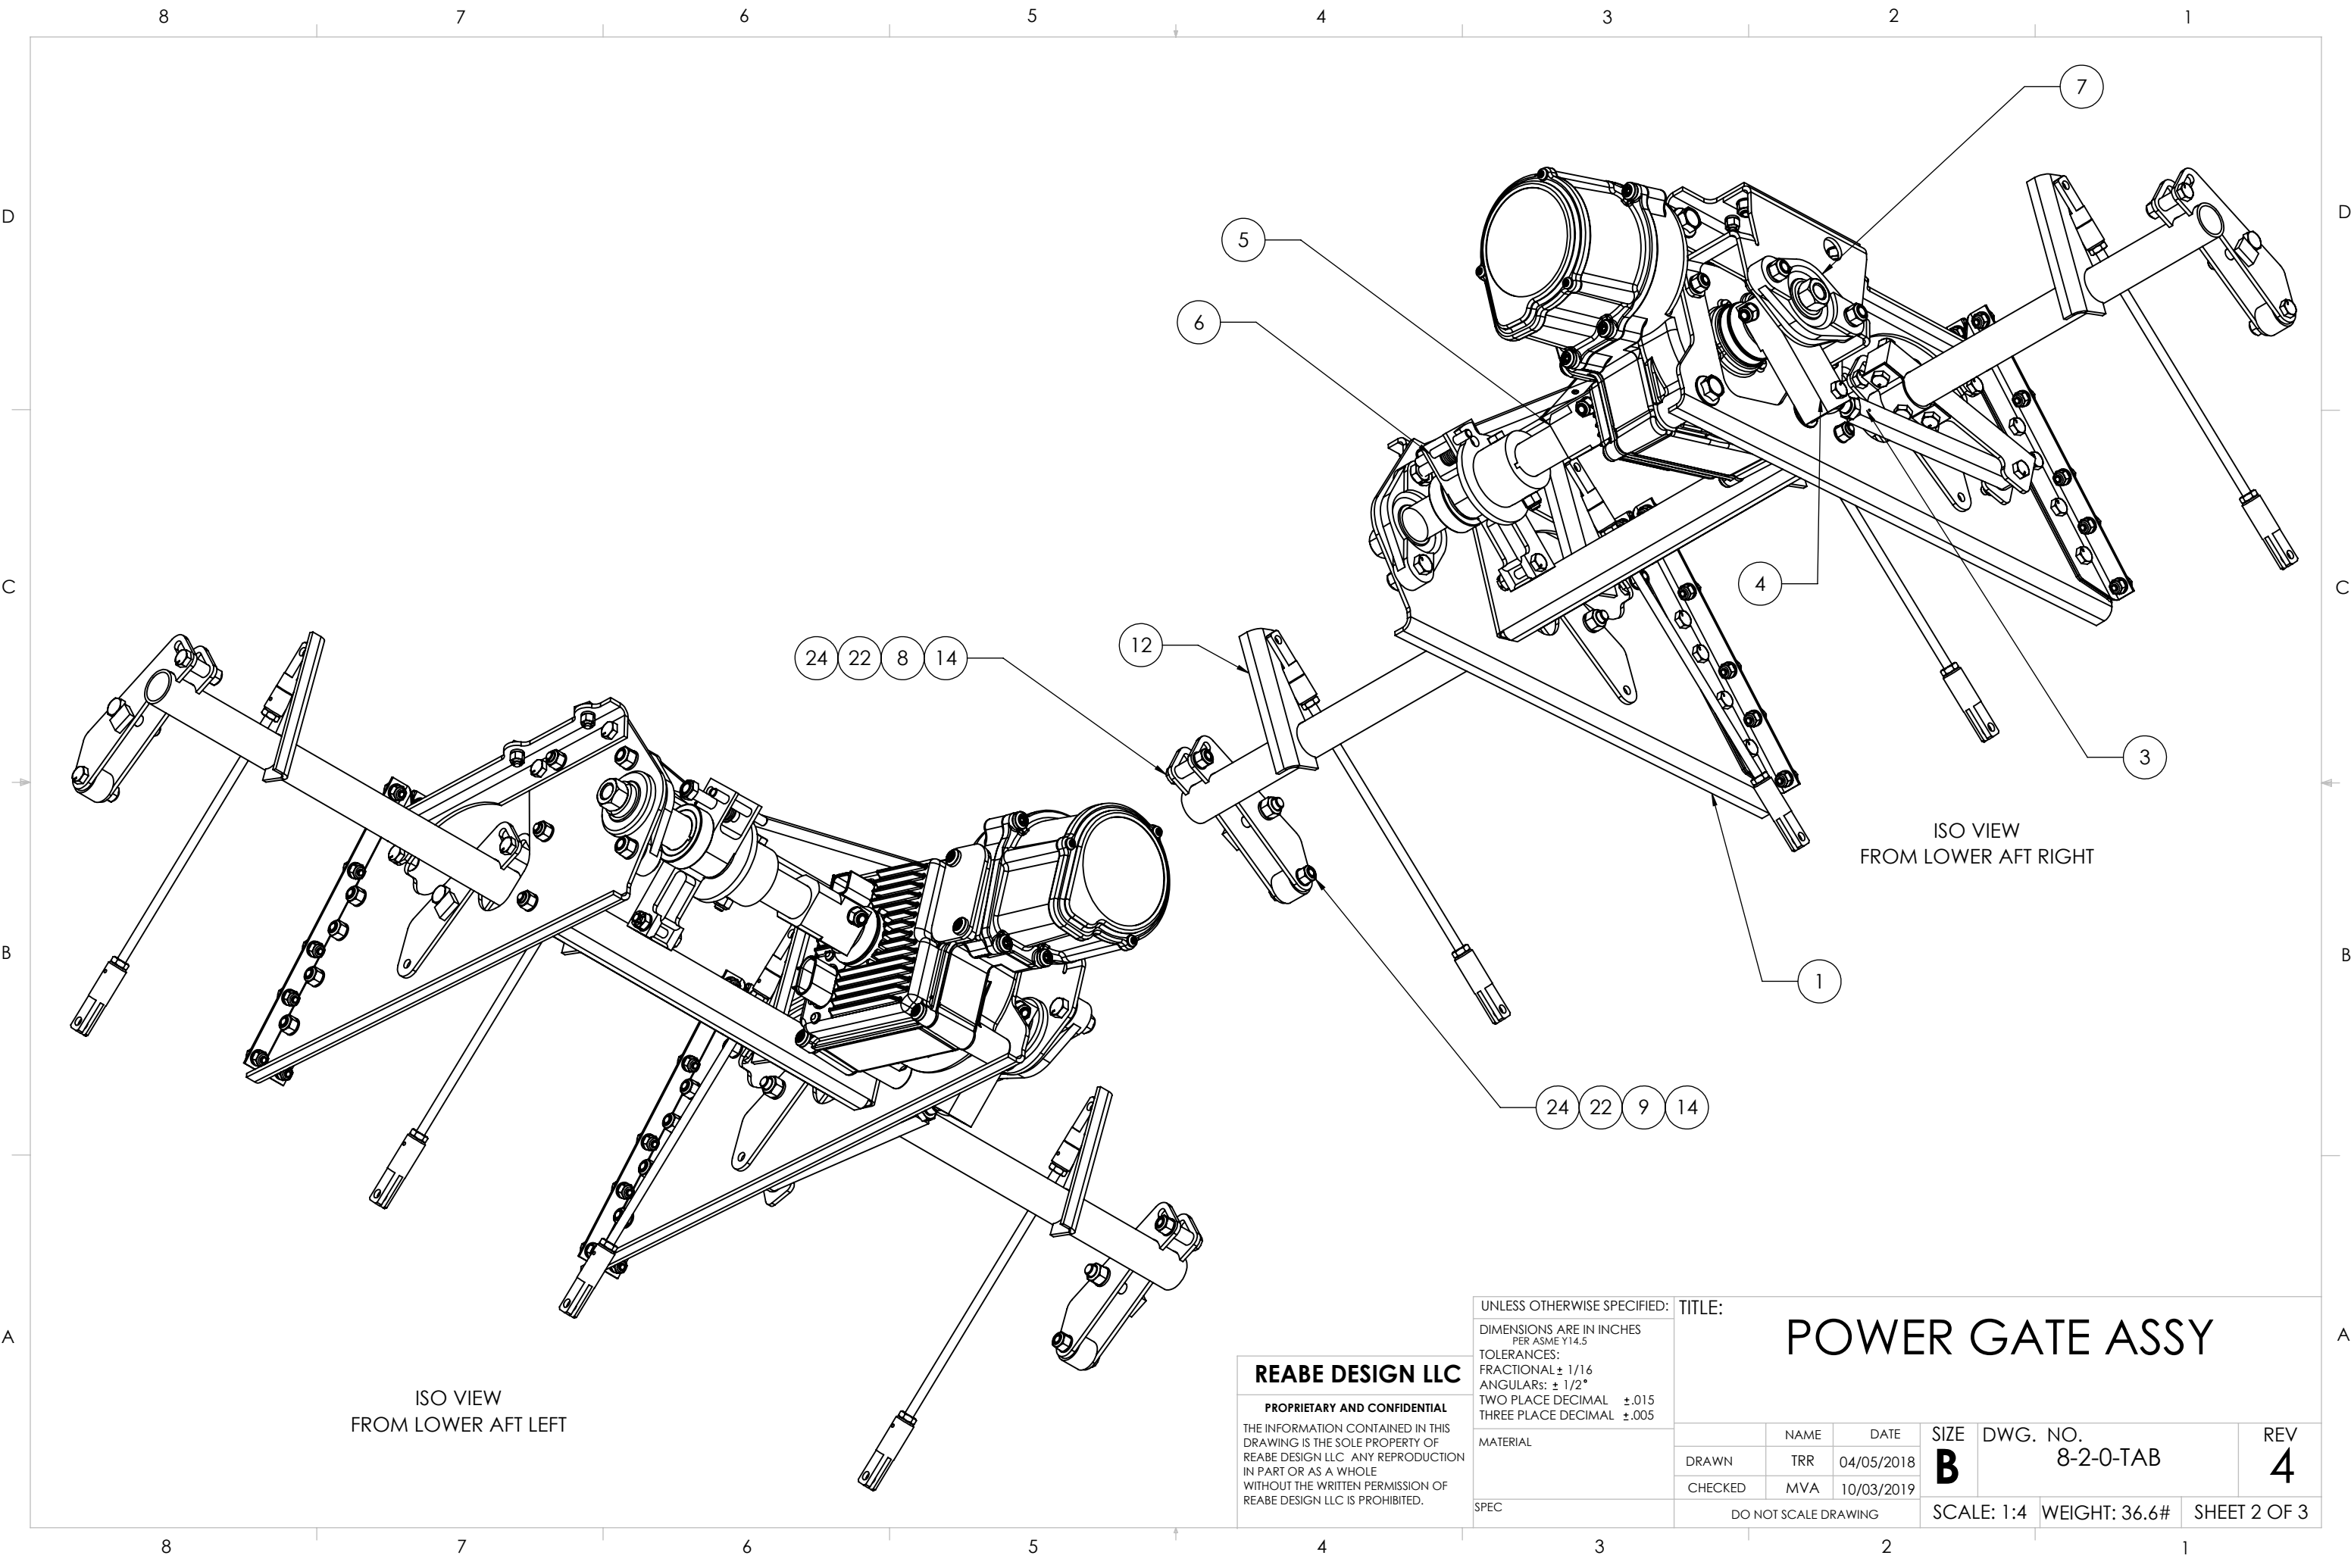


ISO VIEW
FROM LOWER AFT LEFT

ISO VIEW
FROM LOWER AFT RIGHT

REABE DESIGN LLC
PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:	
DIMENSIONS ARE IN INCHES PER ASME Y14.5	
TOLERANCES:	
FRACTIONAL $\pm 1/16$	
ANGULARS: $\pm 1/2^\circ$	
TWO PLACE DECIMAL $\pm .015$	
THREE PLACE DECIMAL $\pm .005$	
MATERIAL	
SPEC	


TITLE:				POWER GATE ASSY		
DRAWN	NAME	DATE	SIZE	DWG. NO. 8-2-0-TAB	REV 4	
	TRR	04/05/2018	B			
CHECKED	MVA	10/03/2019				
DO NOT SCALE DRAWING			SCALE: 1:4	WEIGHT: 36.6#	SHEET 2 OF 3	

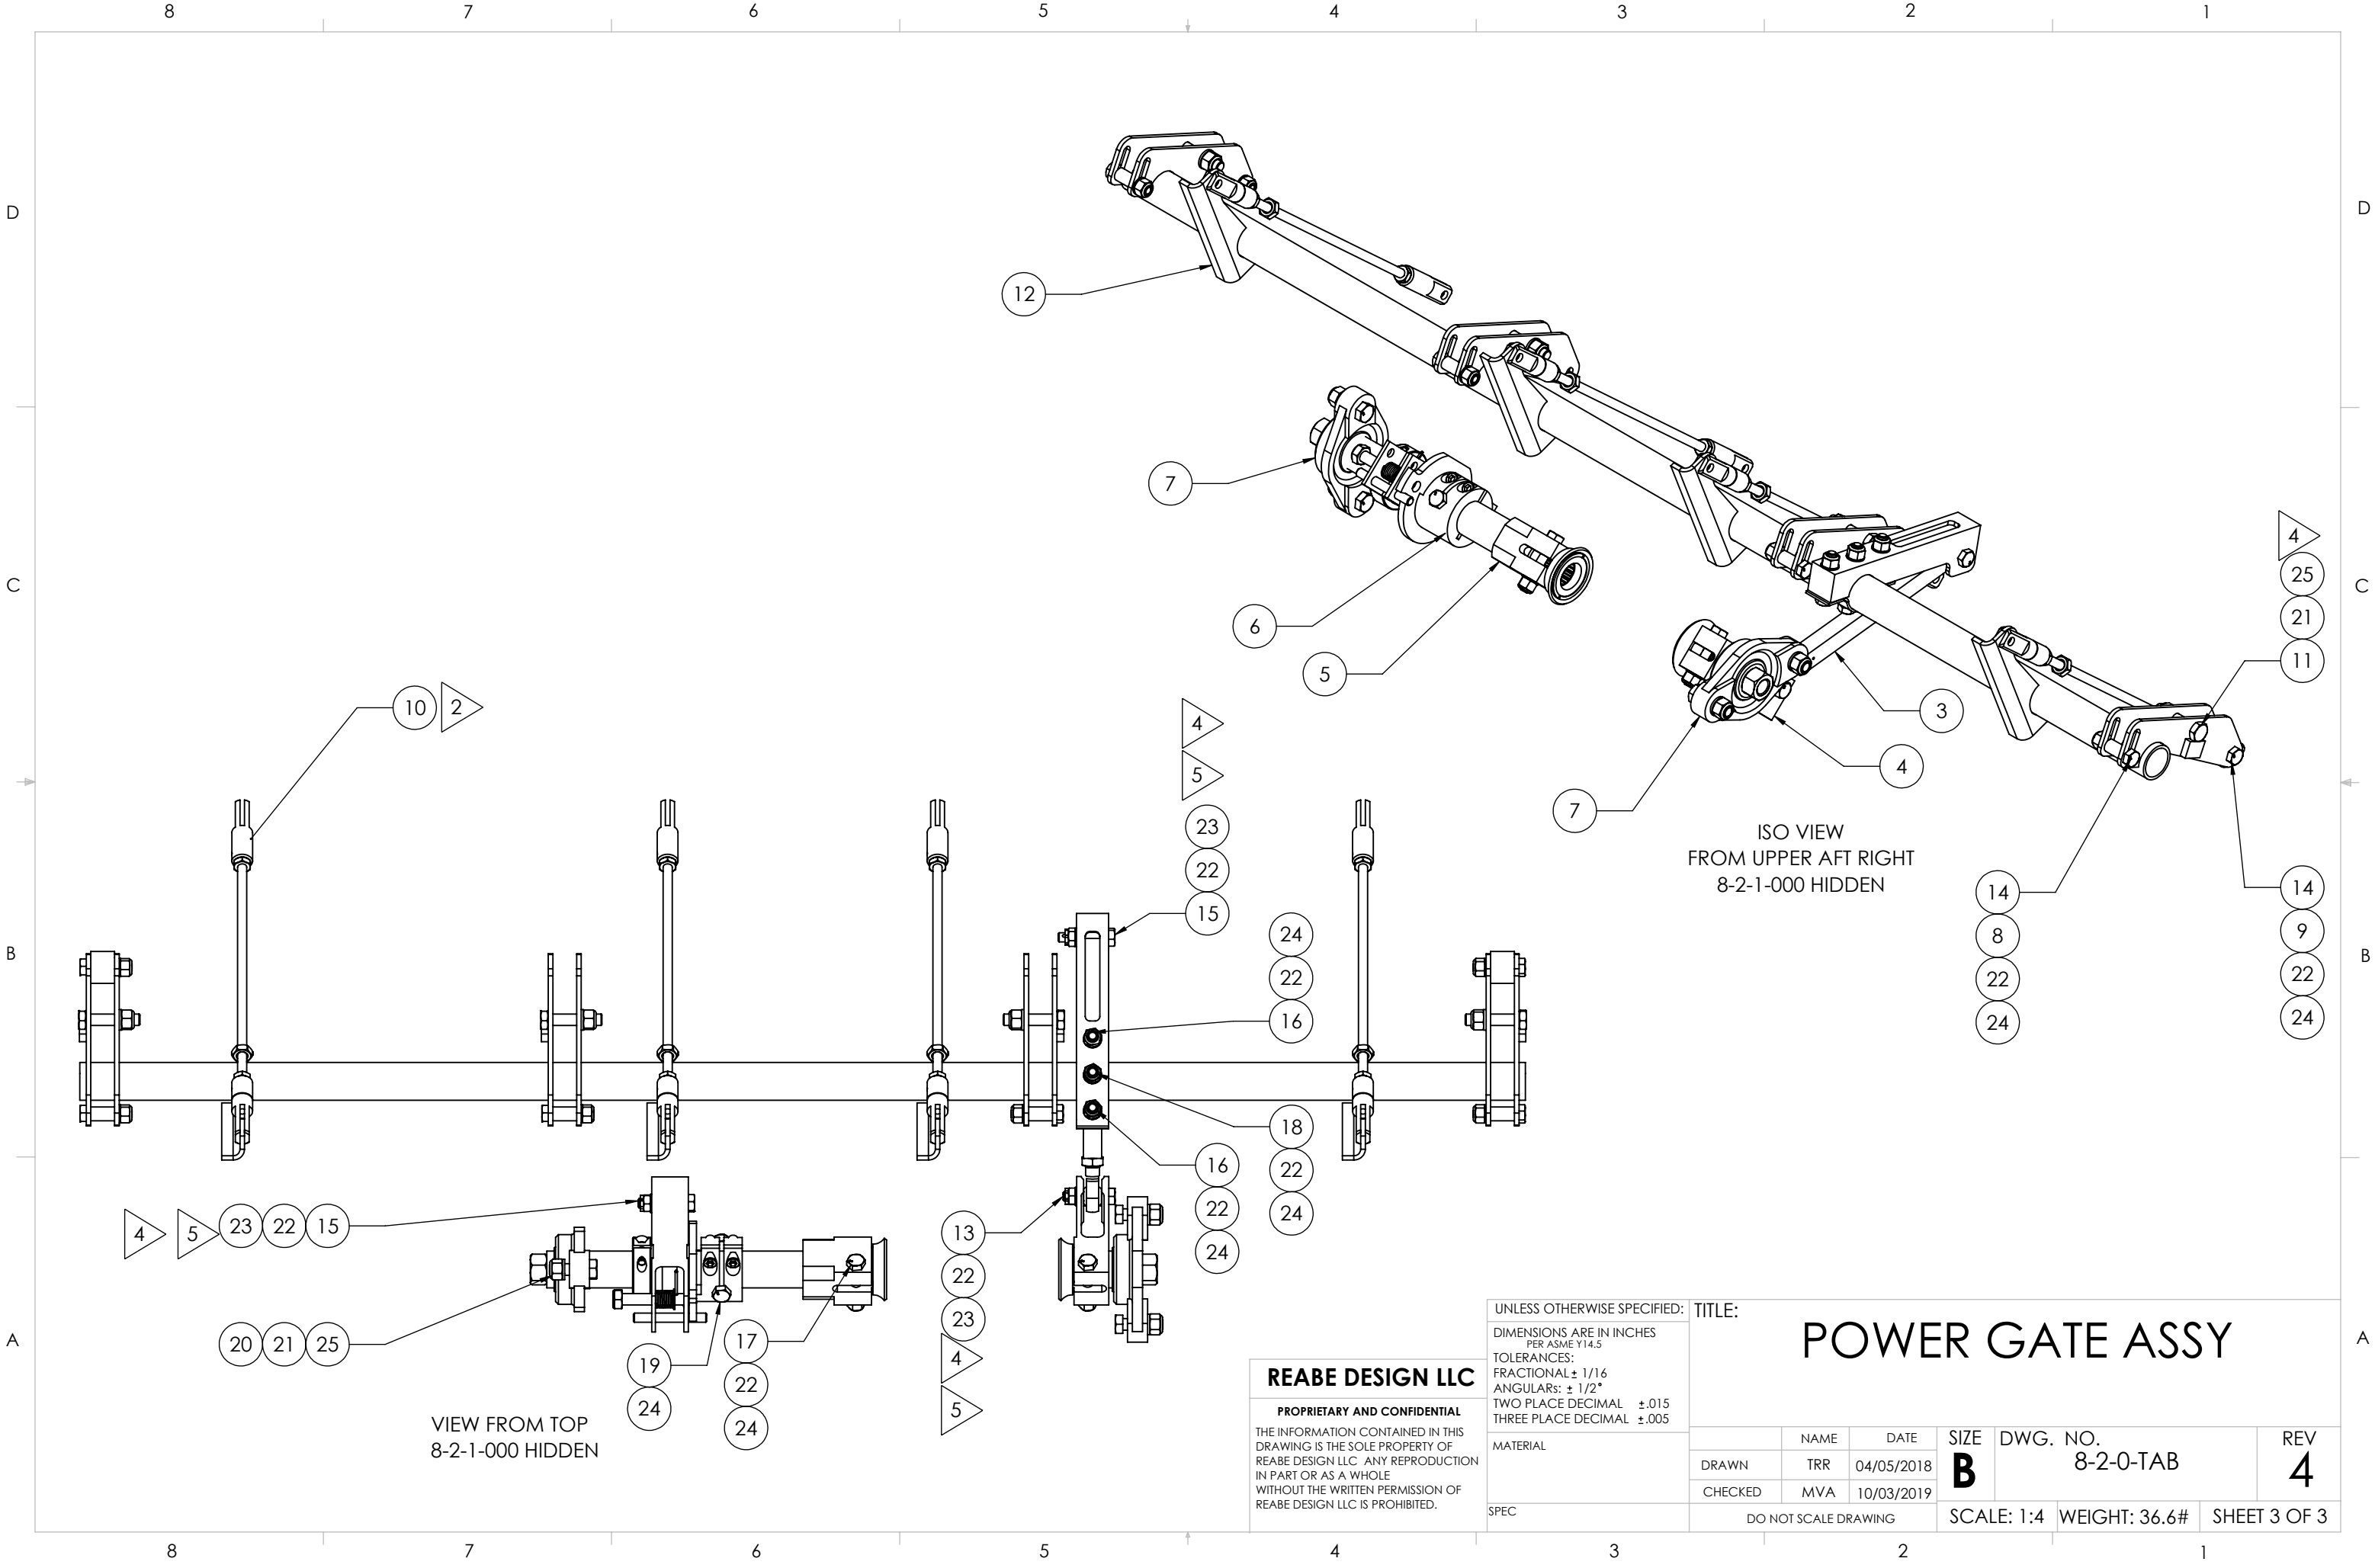

D	8		7		6		5	
	ITEM NO.	PART NUMBER	DESCRIPTION		QTY.			
	1	8-2-1-001	POWER UNIT		1			
	2	8-2-1-002	RIGHT MID AFT SUPPORT		1			
C	3	8-2-1-003	LEFT MID AFT SUPPORT		1			
	4	8-2-1-004	RIGHT MID AFT SUP BRACE		1			
	5	8-2-1-005	LEFT MID AFT SUP BRACE		1			
	6	8-2-1-006	CROSS BRACE		1			
B	7	8-2-1-007	ATTACH ANGLE DRILLED 1		2			
	8	8-2-1-008	ATTACH ANGLE DRILLED 2		2			
	9	8-2-1-009	TOP CROSS BRACE 1		1			
	10	8-2-1-010	TOP CROSS BRACE 2		1			
A	11	8-2-1-011	OUTPUT SUPPORT		1			
	12	AN365C428	1/4-28 SS NYLON LOCK NUT		27			
	13	MS27039C0809	8-32 MACHINE SCREW		4			
	14	AN960C8	#8 SS WASHER .032"		4			
	15	NAS1149C0336R	#10 SS WASHER .063"		20			
	16	AN960C416L	1/4 SS WASHER .032"		27			
	17	AN4C6A	1/4-28 SS BOLT		2			
	18	AN4C5A	1/4-28 SS BOLT		25			
	19	AN3C4	10-32 SS BOLT		20			
	20	AN365C832	8-32 SS LOCK NUT		4			
	21	AN365C1032	10-32 SS LOCK NUT		20			

NOTE:

1.
- ALL HARDWARE TORQUED PER FAA AC 43.13-1B, UNLESS OTHERWISE SPECIFIED
2.
- SEE PART DRAWING FOR MATERIAL DATA

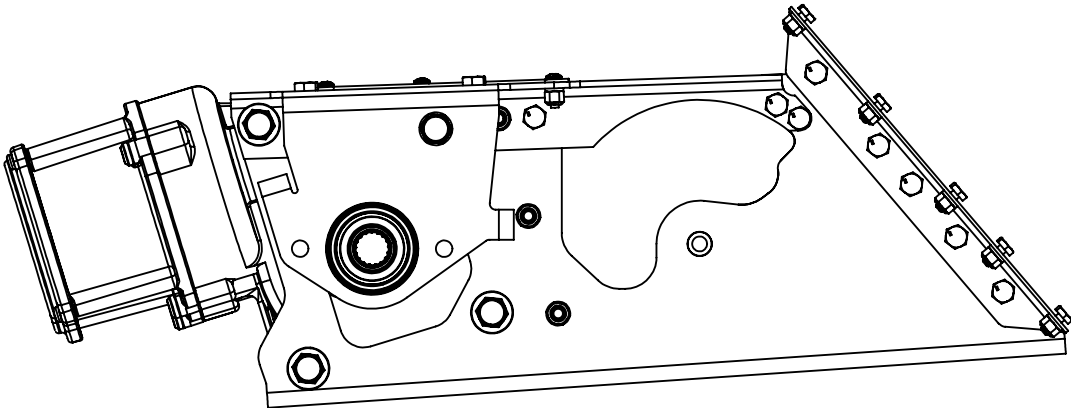

RIGHT SIDE VIEW



REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5

TOLERANCES:

FRACTIONAL ± 1/16

ANGULARs: ± 1/2°

TWO PLACE DECIMAL ±.015

THREE PLACE DECIMAL ±.005

TITLE:

POWER GATE FRAME

MATERIAL

SPEC

DO NOT SCALE DRAWING

NAME

TRR

DATE

05/04/2018

SIZE

B

DWG. NO.

8-2-1-000


REV

4


SCALE: 1:4

WEIGHT: 23.28#


SHEET 1 OF 4

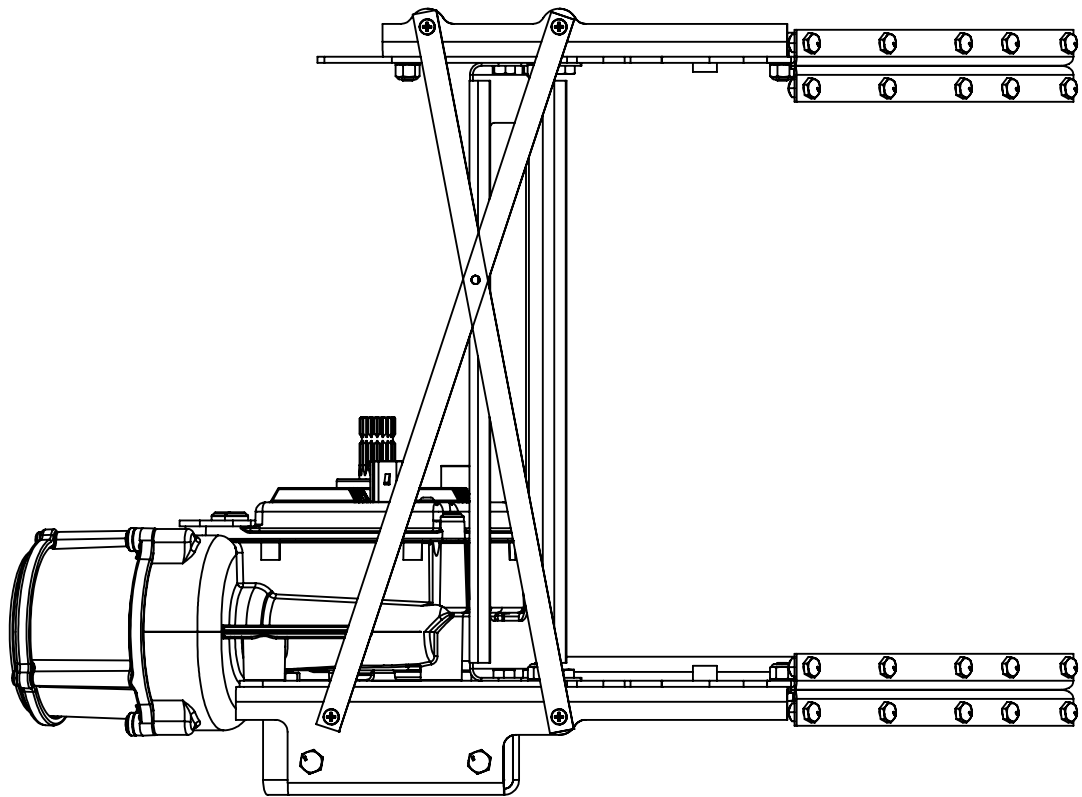

TOP VIEW

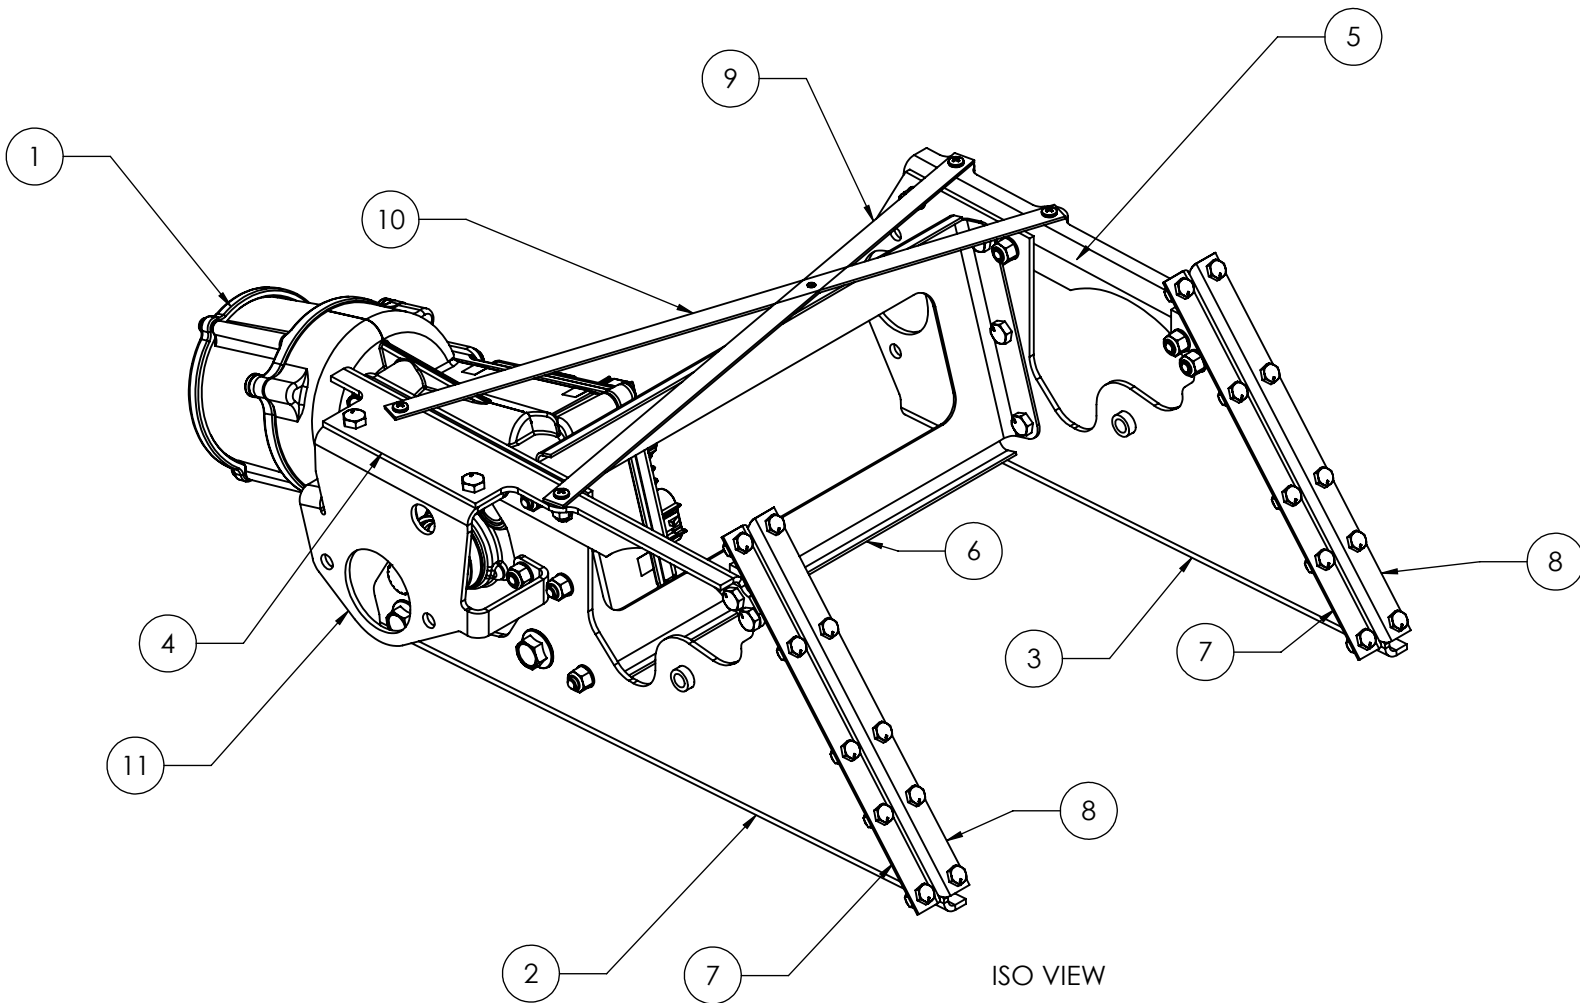

ISO VIEW

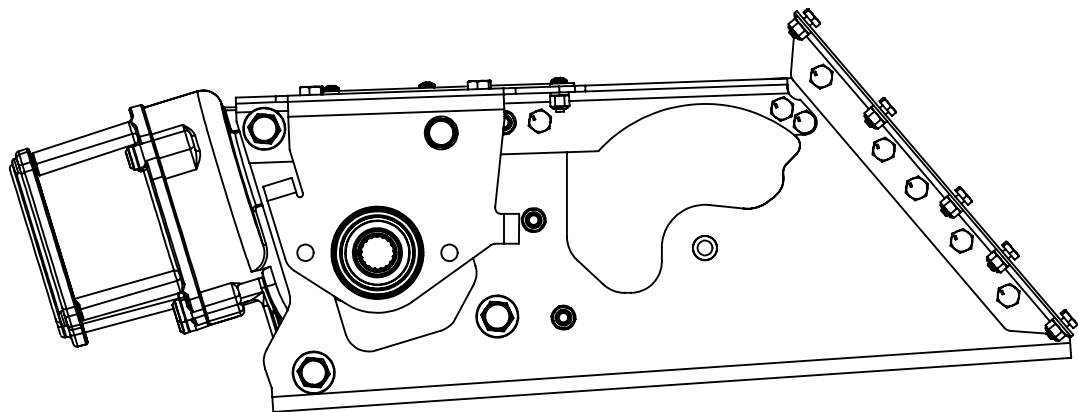

RIGHT SIDE VIEW

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$


MATERIAL

SPEC

TITLE:

POWER GATE FRAME

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	B	8-2-1-000	4
CHECKED	MVA	10/03/2019			
DO NOT SCALE DRAWING			SCALE: 1:4	WEIGHT: 23.28#	SHEET 2 OF 4

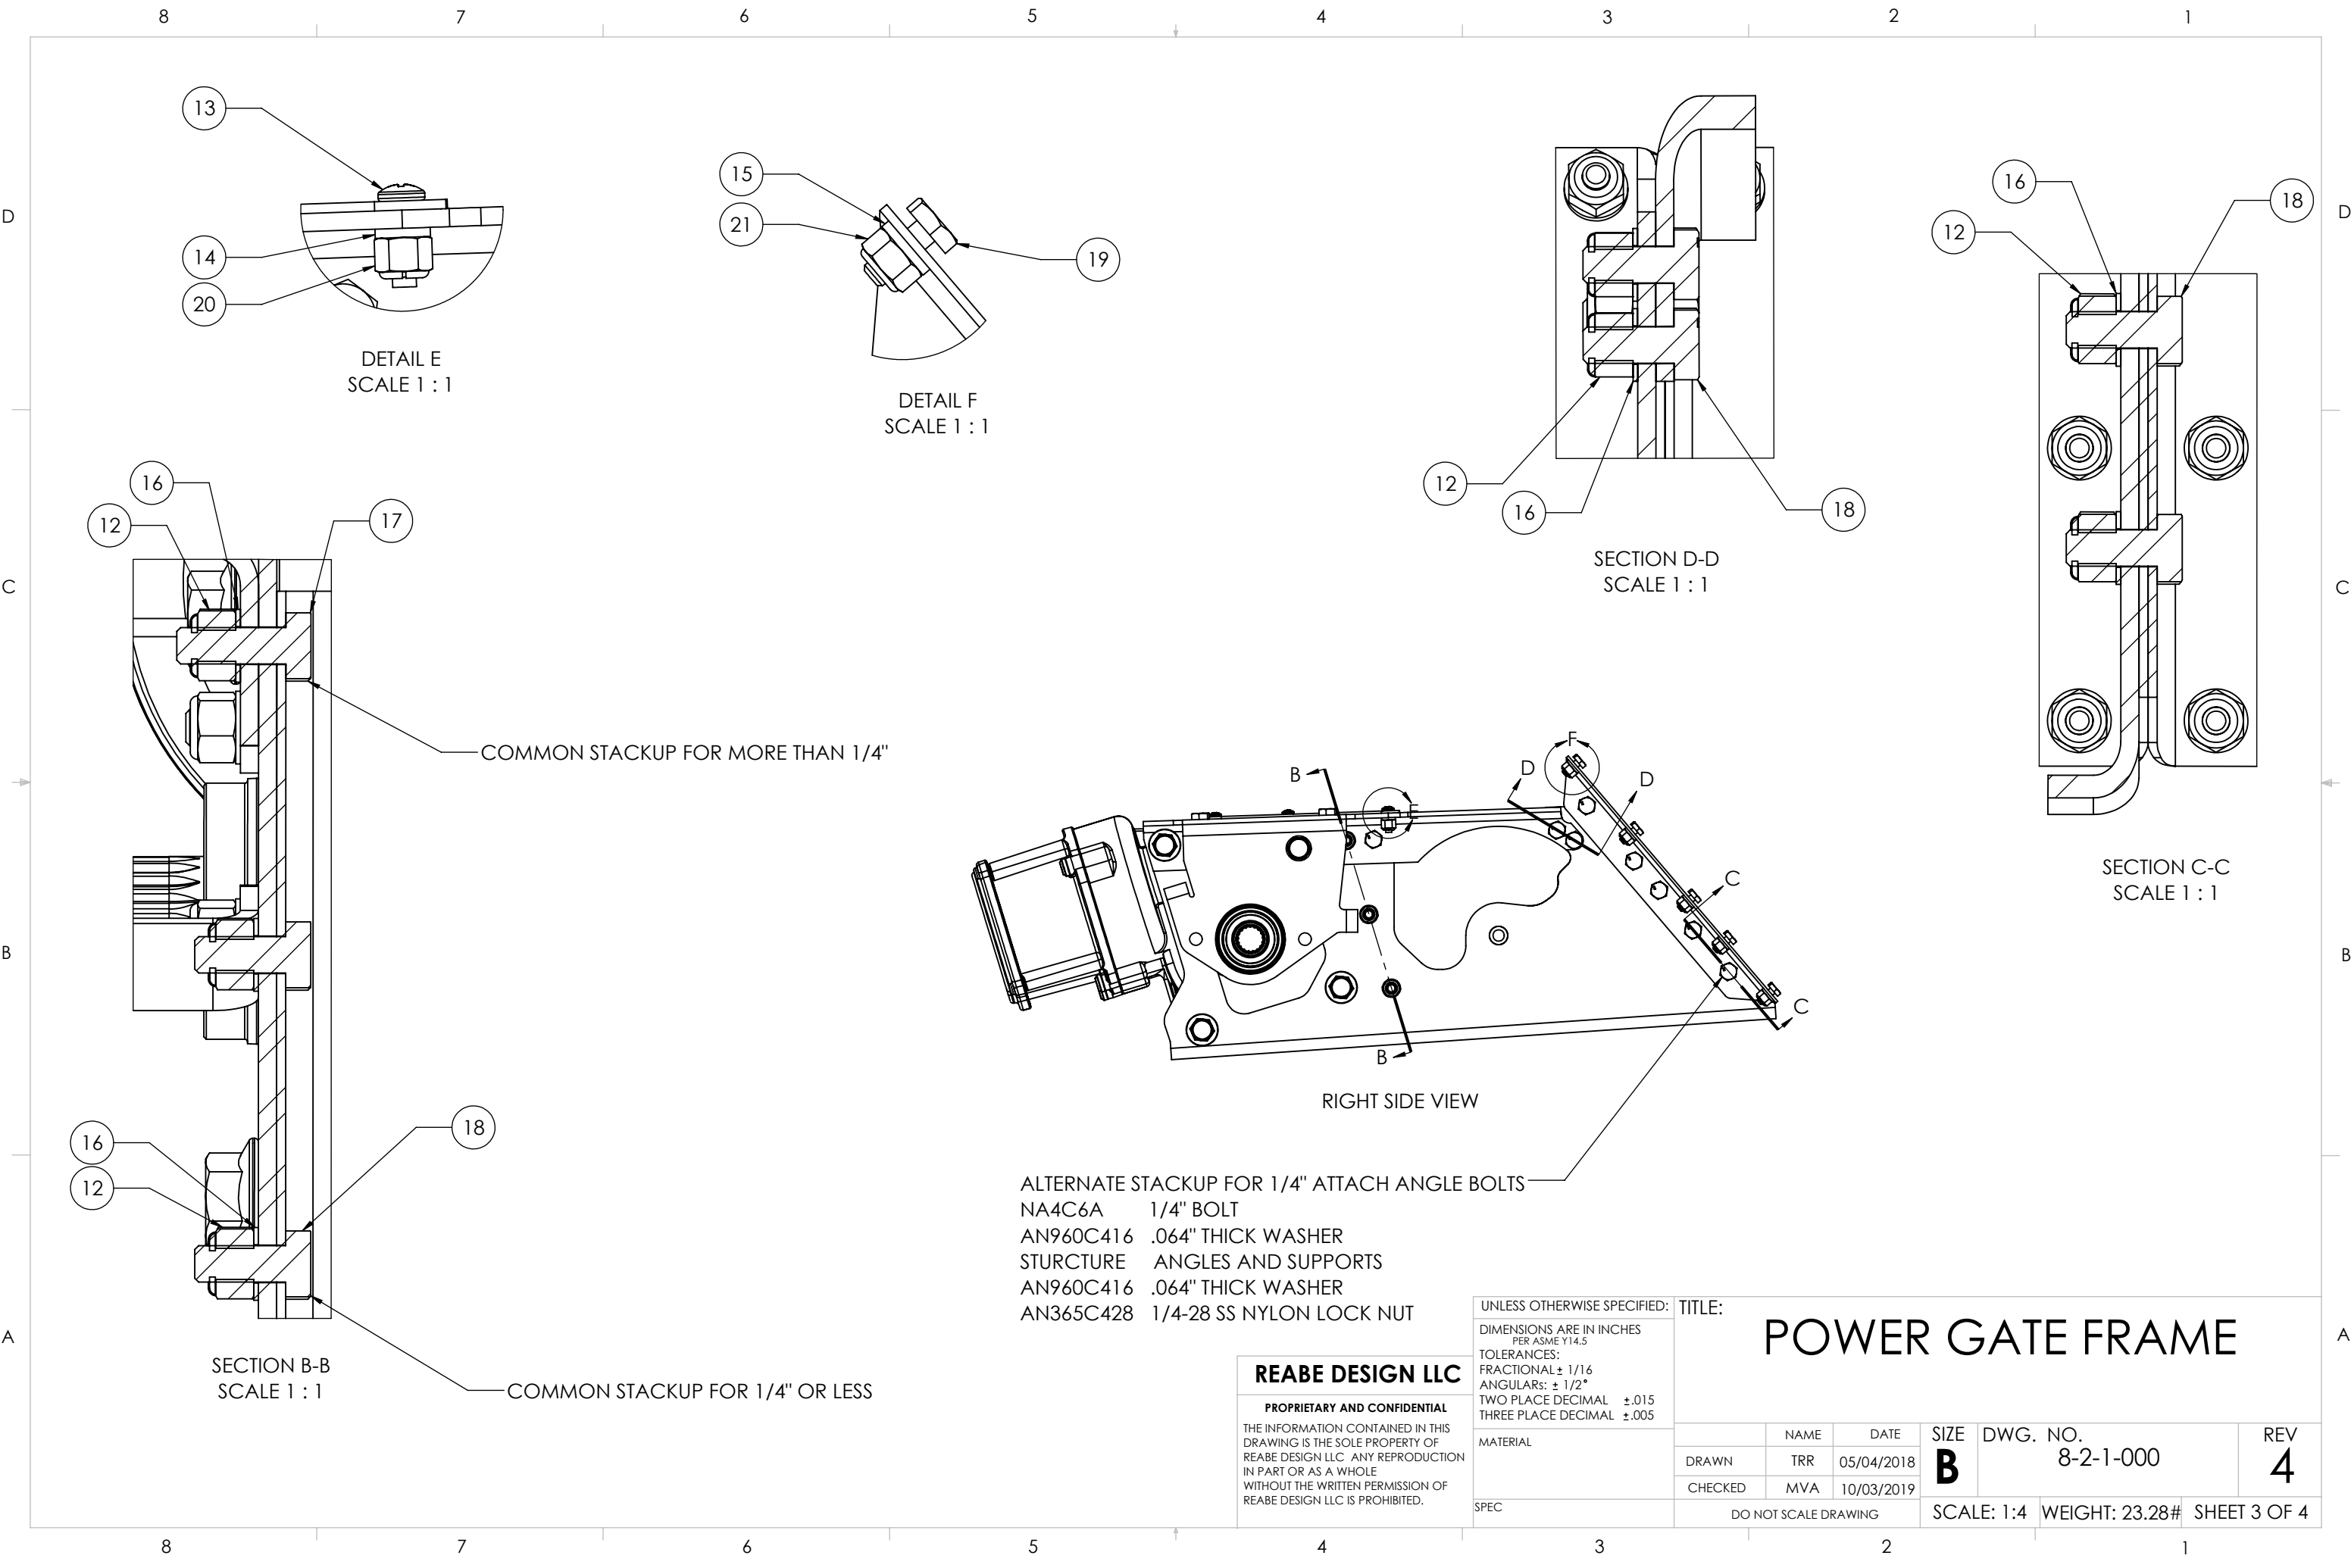

DETAIL E
SCALE 1 : 1

DETAIL F
SCALE 1 : 1

SECTION D-D
SCALE 1 : 1

SECTION C-C
SCALE 1 : 1

SECTION B-B
SCALE 1 : 1

RIGHT SIDE VIEW

COMMON STACKUP FOR MORE THAN 1/4"

COMMON STACKUP FOR 1/4" OR LESS


ALTERNATE STACKUP FOR 1/4" ATTACH ANGLE BOLTS
NA4C6A 1/4" BOLT
AN960C416 .064" THICK WASHER
STURCTURE ANGLES AND SUPPORTS
AN960C416 .064" THICK WASHER
AN365C428 1/4-28 SS NYLON LOCK NUT

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:	
DIMENSIONS ARE IN INCHES PER ASME Y14.5	
TOLERANCES:	
FRACTIONAL	± 1/16
ANGULARS	± 1/2°
TWO PLACE DECIMAL	± .015
THREE PLACE DECIMAL	± .005
MATERIAL	
SPEC	

TITLE:				
POWER GATE FRAME				
DRAWN	NAME	DATE	SIZE	DWG. NO.
CHECKED	TRR	05/04/2018	B	8-2-1-000
	MVA	10/03/2019		
DO NOT SCALE DRAWING			SCALE: 1:4	WEIGHT: 23.28#
			SHEET 3 OF 4	REV 4

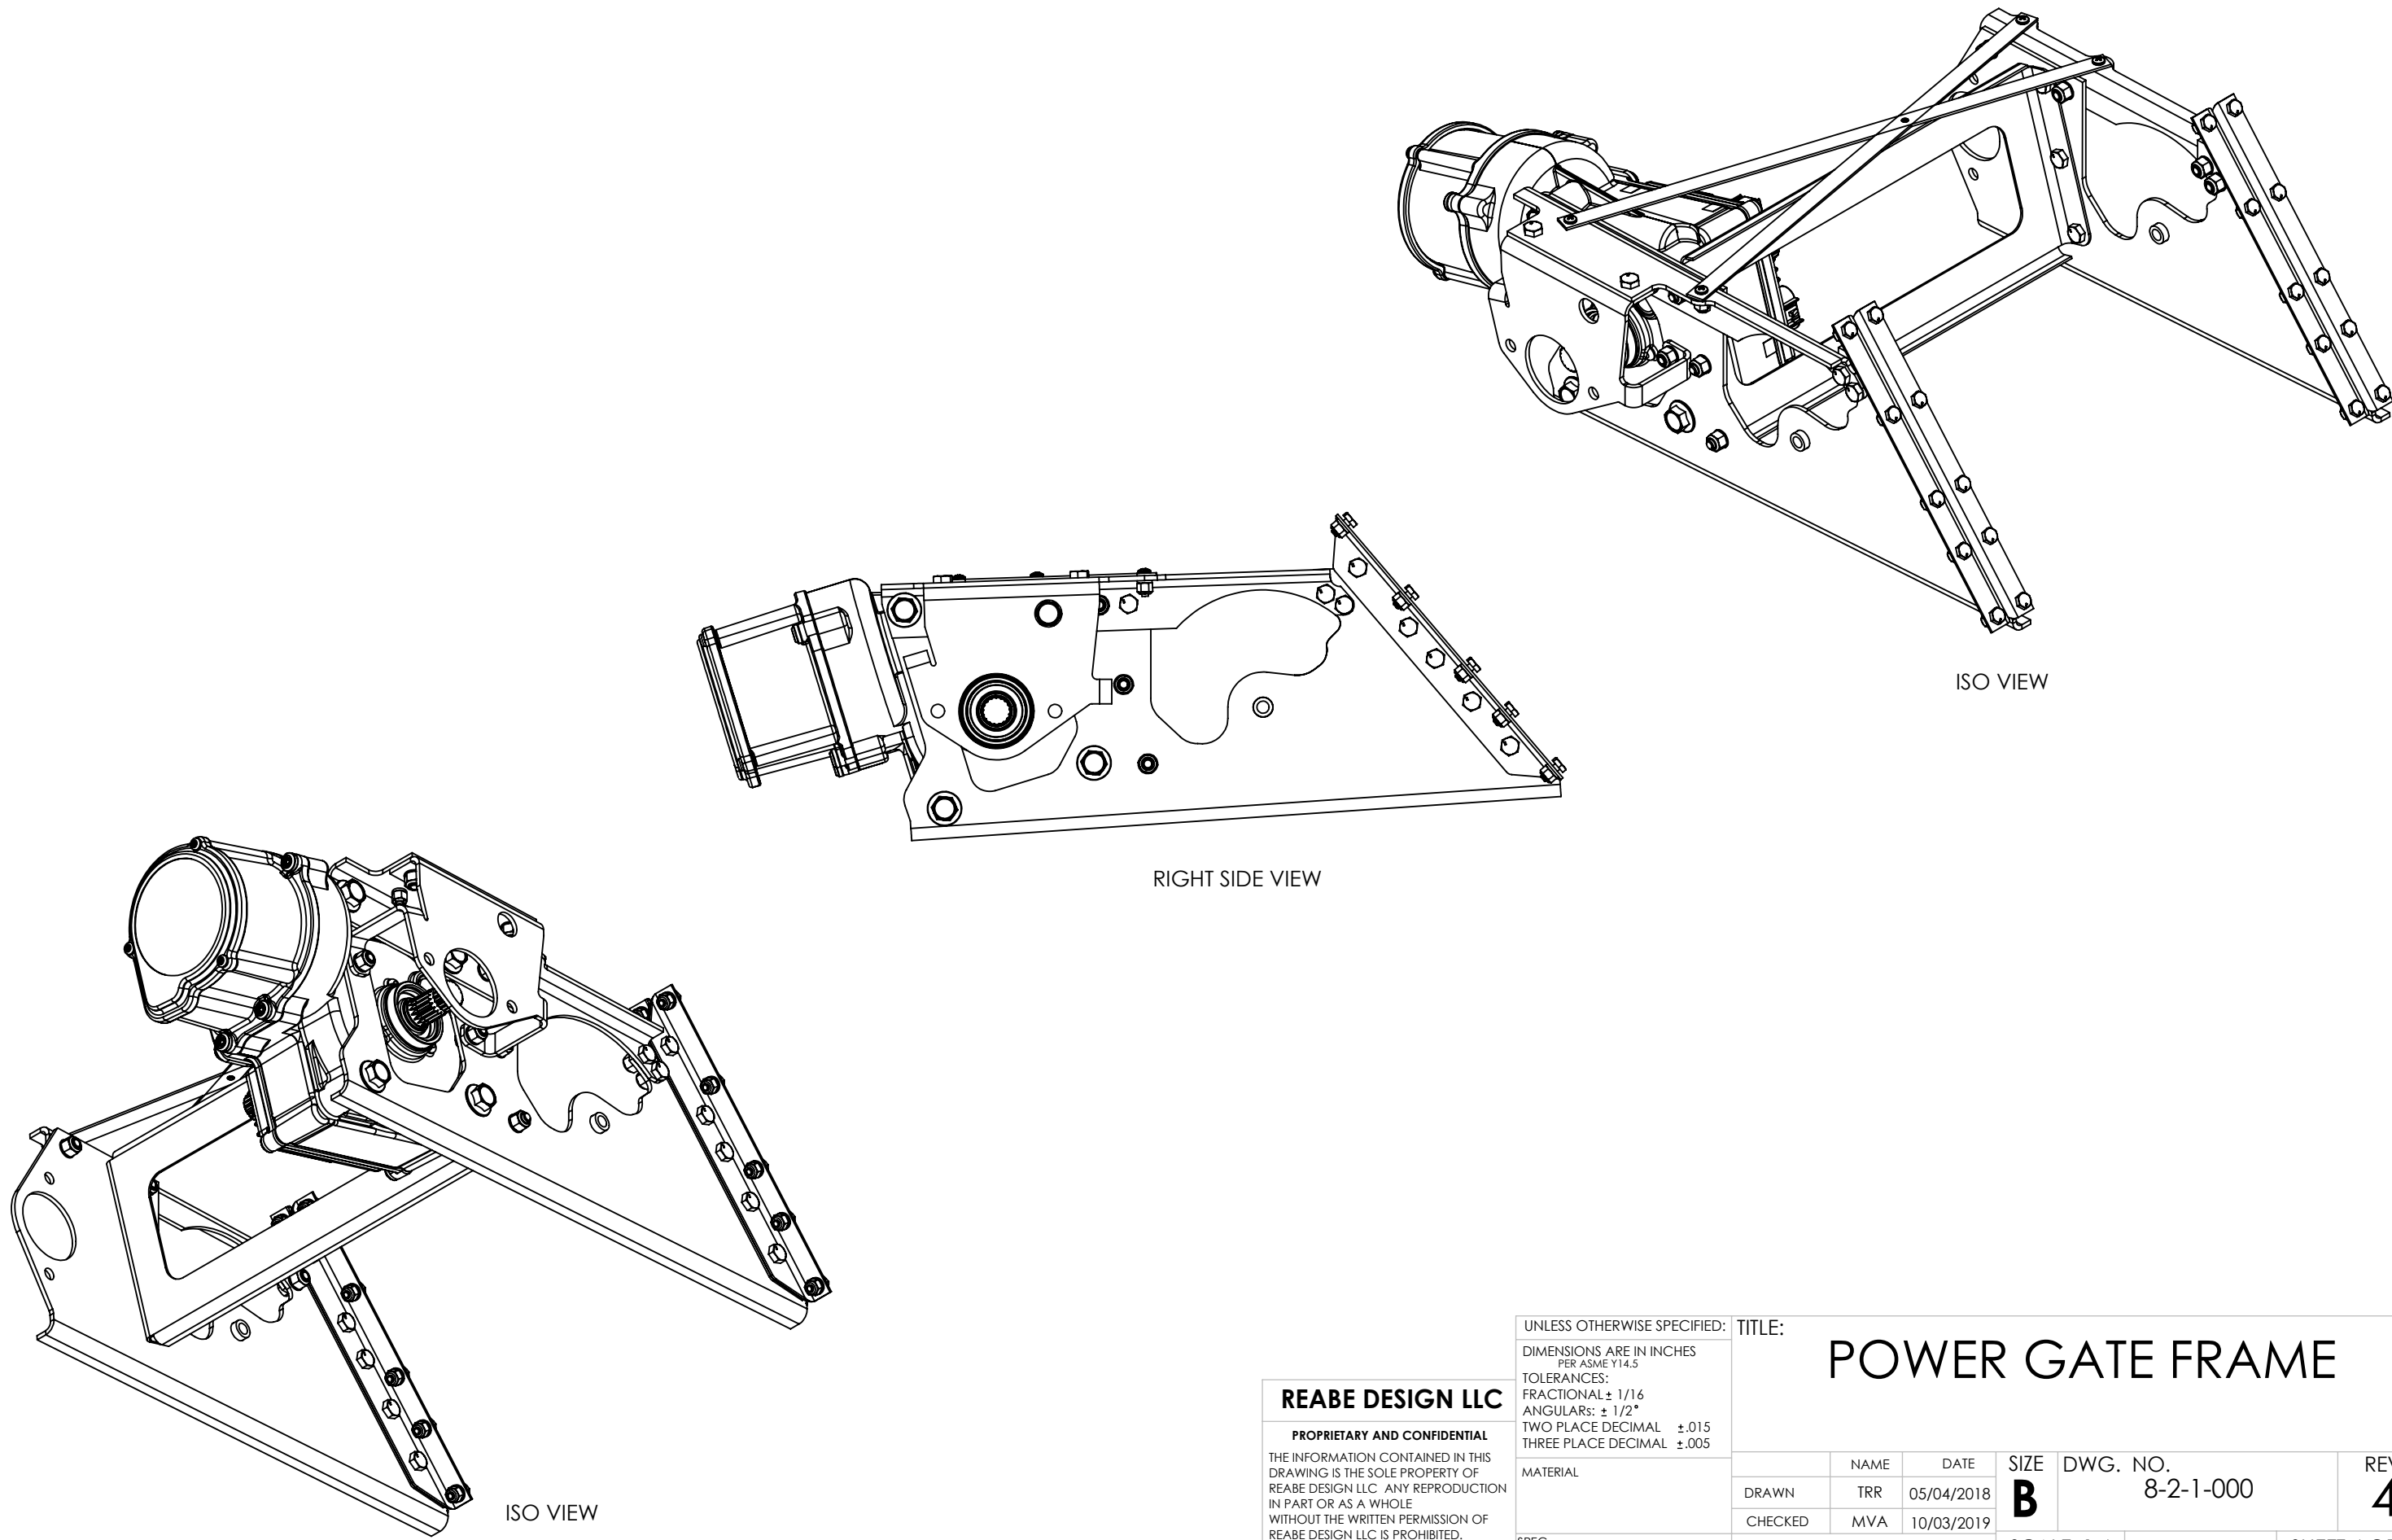

ISO VIEW

RIGHT SIDE VIEW

ISO VIEW

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5

TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARs: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL

SPEC

TITLE:

POWER GATE FRAME

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	B	8-2-1-000	4
CHECKED	MVA	10/03/2019			
DO NOT SCALE DRAWING			SCALE: 1:4	WEIGHT: 23.28#	SHEET 4 OF 4

MANUFACTURE: REABE DESIGN LLC
MFG PART NUMBER : 6002-02-07-01







ATTACH ANGLE 1

PLATE: 301 1/4 HARD SS

- NOTES:
- SEE REABE DESIGN LLC DRAWING NO. 6002-02-07-01 FOR MATERIALS AND SPECIFICATIONS
 - SEE REABE DESIGN LLC DRAWING NO. 6002-02-07-01 FOR COMPLETE DIMENSION OF PART

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	5/4/2018	TRR	TRR
B	ADJUSTED HOLE SPACEING TO ALIGN WITH STOCK	1/14/2019	TRR	TRR
C	SCALE WAS 1:2, TITLE BLOCK UPDATE, ADDED NOTES FOR DIM. AND MAT.	10/10/2019	TRR	KMT
4	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/04/2025	TRR	TRR

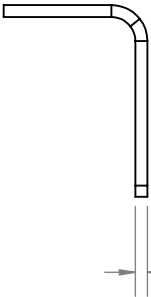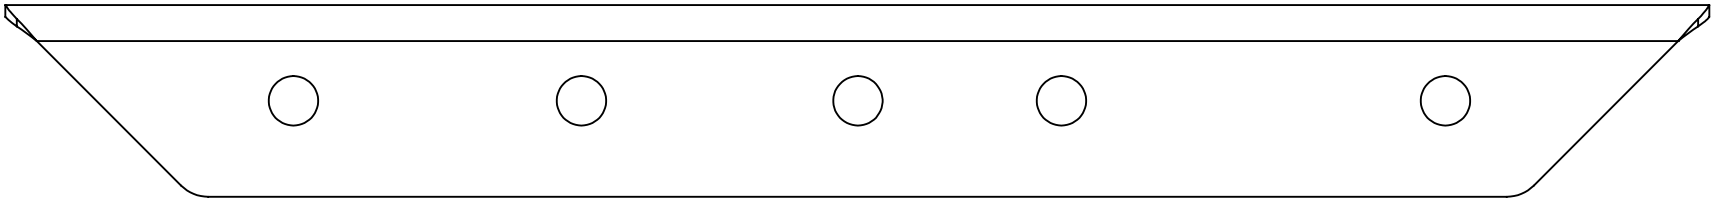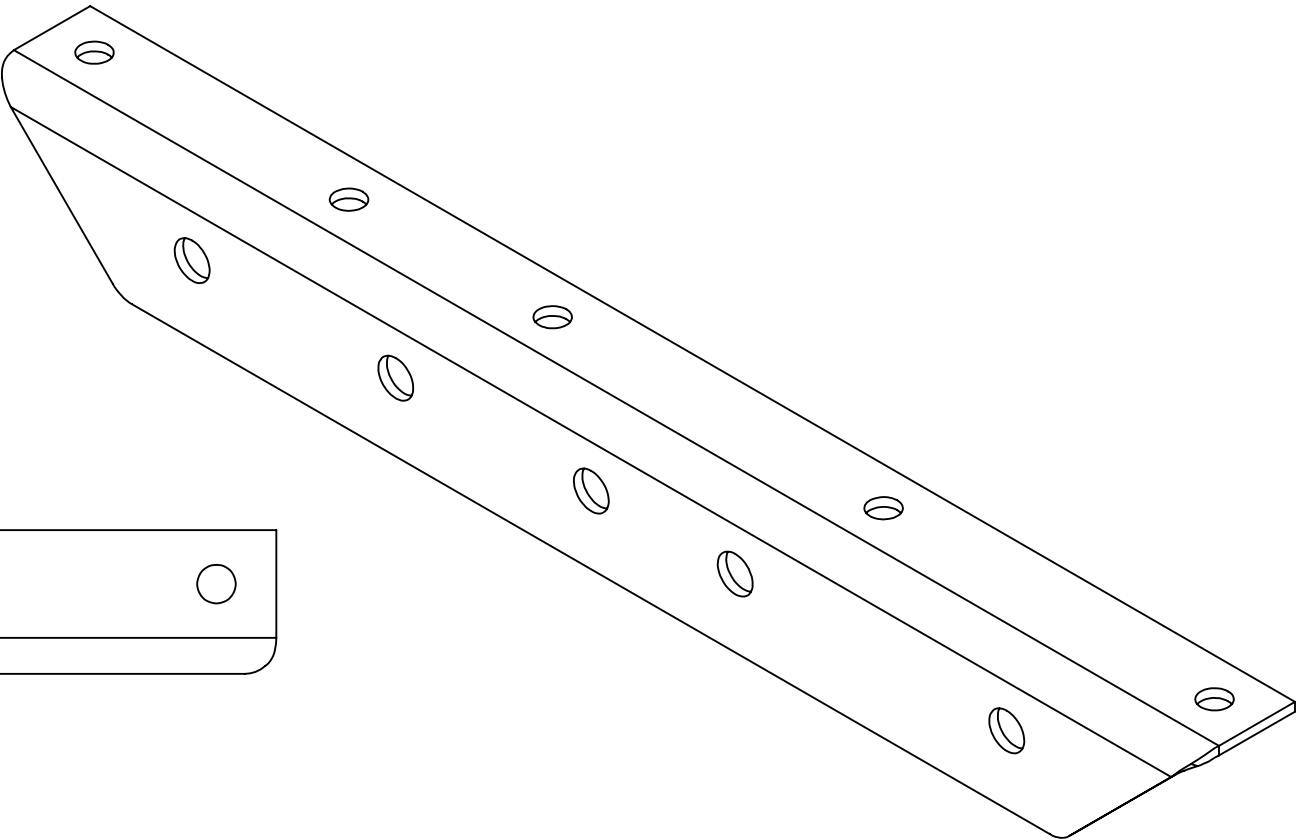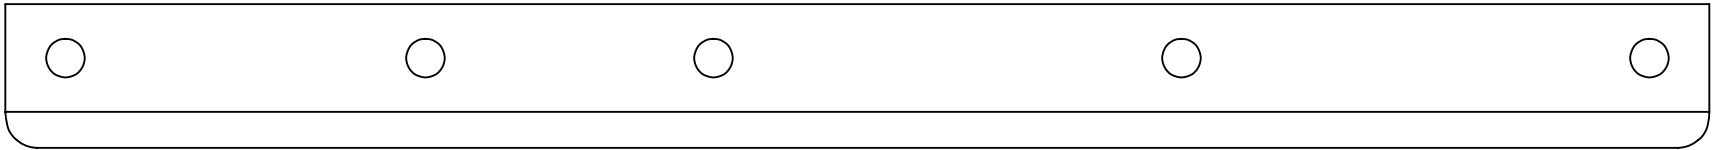

.063 STK



REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL

SPEC

TITLE:

ATTACH ANGLE DRILLED 1

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	B	8-2-1-007	4
CHECKED	MVA	10/07/2019			
DO NOT SCALE DRAWING			SCALE: 1:1	WEIGHT:	SHEET 1 OF 1

MANUFACTURE: REABE DESIGN LLC
MFG PART NUMBER : 6002-02-07-02




ATTACH ANGLE 2

NOTES:

- SEE REABE DESIGN LLC DRAWING NO. 6002-02-07-02 FOR MATERIALS AND SPECIFICATIONS
- SEE REABE DESIGN LLC DRAWING NO. 6002-02-07-02 FOR COMPLETE DIMENSION OF PART

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	5/4/2018	TRR	TRR
B	CHANGE HOLE LOCATION TO ALIGN WITH STOCK	1/14/2019	TRR	TRR
C	SCALE WAS 1:2, TITLE BLOCK UPDATE, ADDED NOTES FOR DIM. AND MAT.	10/10/2019	TRR	KMT
4	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/04/2025	TRR	TRR

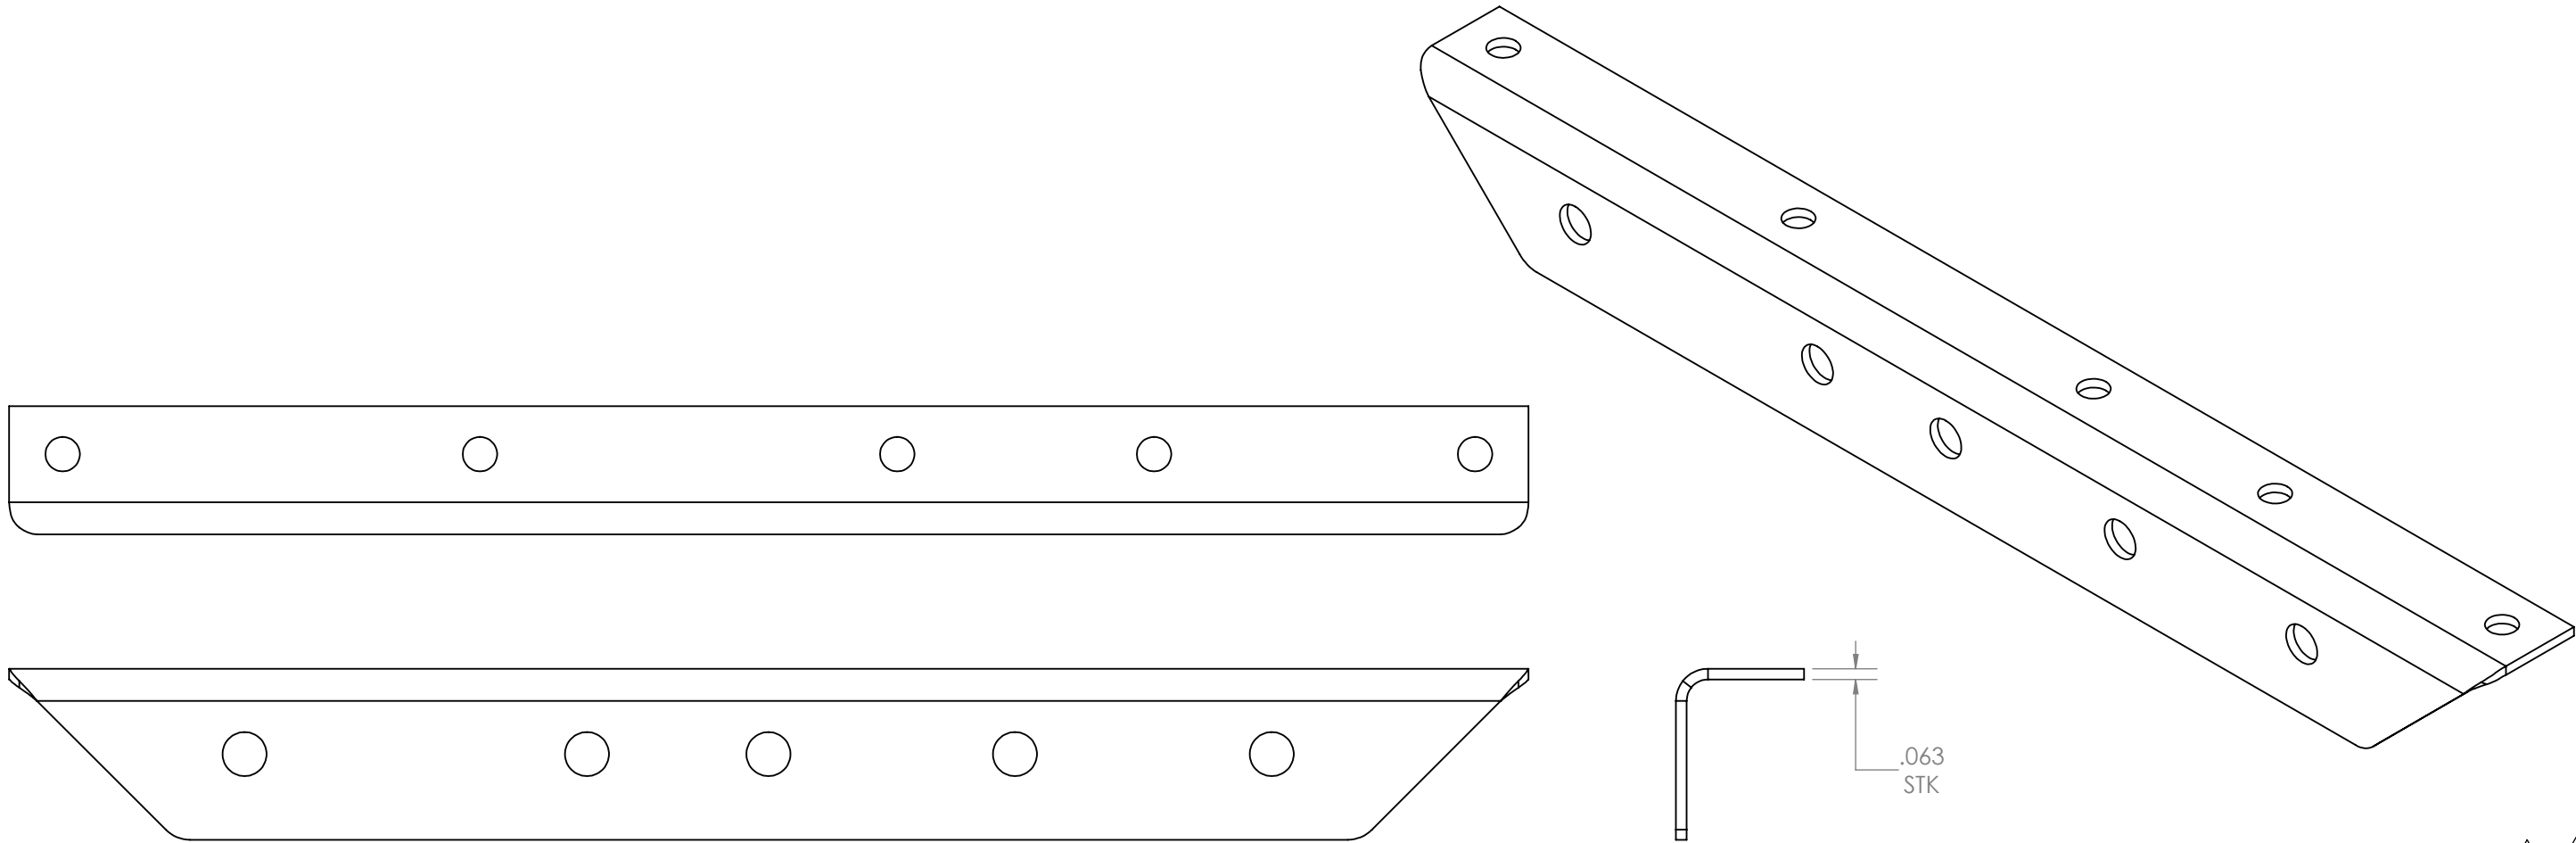

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL $\pm .015$
THREE PLACE DECIMAL $\pm .005$

MATERIAL


SPEC

TITLE:

ATTACH ANGLE DRILLED 2



	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	B	8-2-1-008	4
CHECKED	MVA	10/07/2019			

DO NOT SCALE DRAWING SCALE: 1:1 WEIGHT: SHEET 1 OF 1

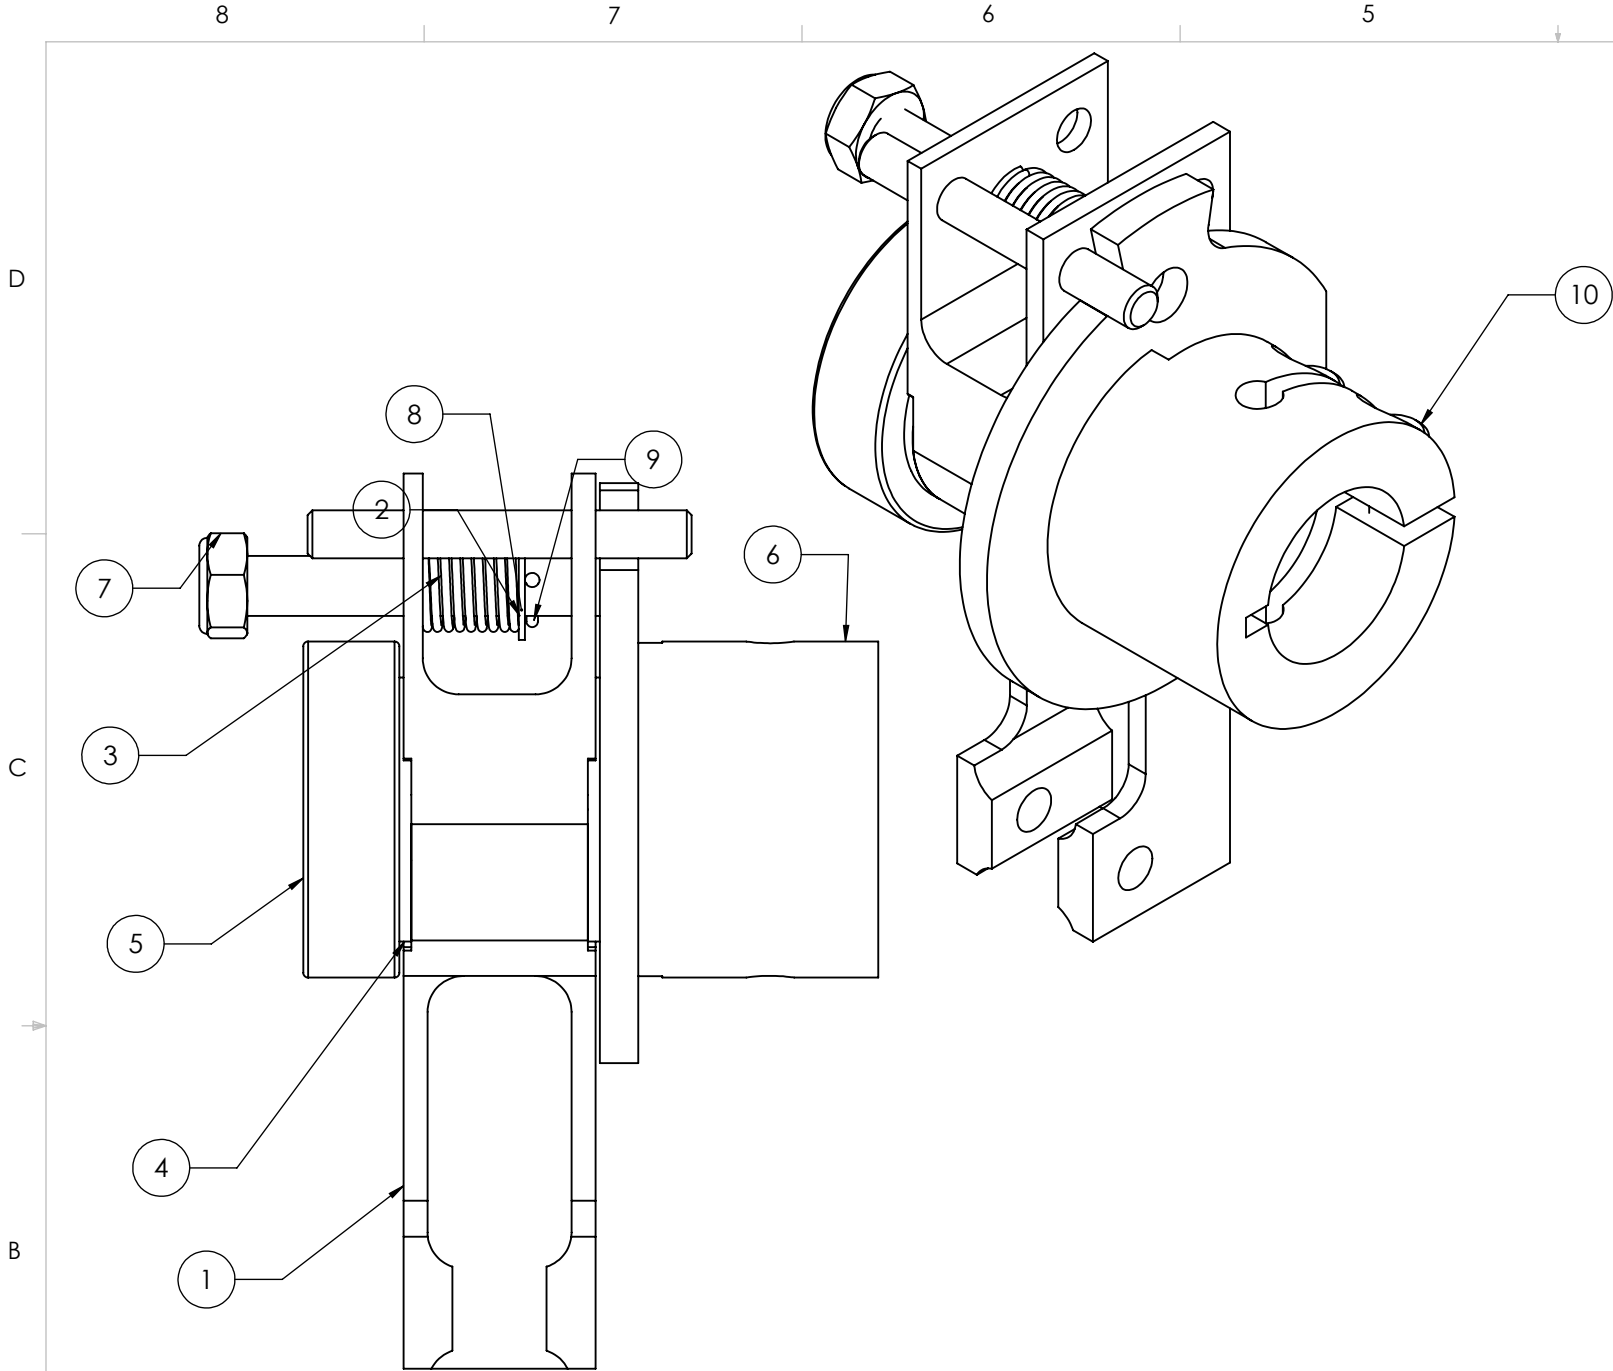

ITEM NO.	PART NUMBER	DESCRIPTION	
1	8-2-2-120	INPUT ARM 1 WELDMENT	1
2	8-2-2-121	ENGAGEMENT PIN	1
3	8-2-2-122	STAINLESS STEEL SPRING	1
4	8-2-2-123	1" ID BUSHING	2
5	8-2-2-124	1" CLAMP-ON COLLAR	1
6	8-2-2-125	INPUT ARM 1 CAM	1
7	MS21083C4	5/16 STAINLESS LOCKING JAM NUT	1
8	AN960C516L	5/16 SS WASHER .032"	1
9	MS24665-153	1/16" x 3/4" SS COTTER PIN	1
10	MS16996-23	1/4-28X3/4 SHCS SS	2

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	6/15/2018	TRR	TRR
B	ADDED REVERSED ASSEMBLY	6/15/2019	TRR	TRR
C	UPDATE TITLE BLOCK	11/1/2019	TRR	BJD
4	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/04/2025	TRR	TRR

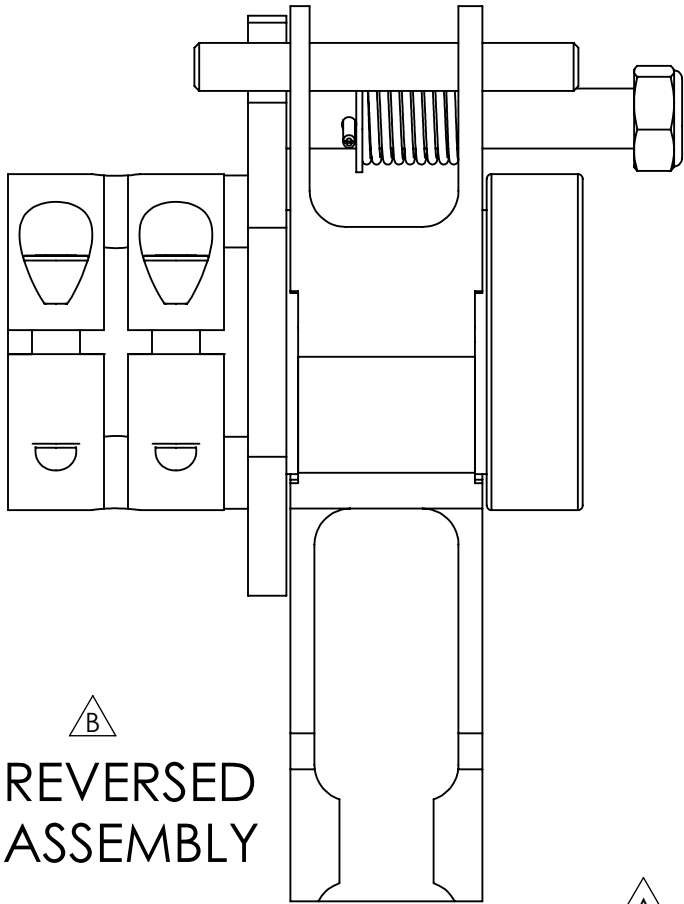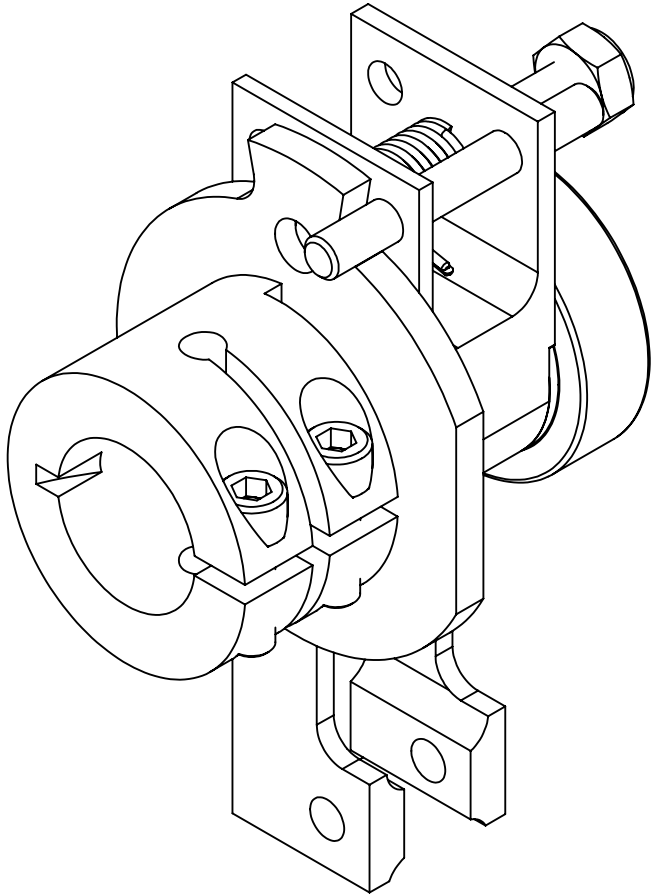

REVERSED
ASSEMBLY

REABE DESIGN LLC
PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:		TITLE:				
DIMENSIONS ARE IN INCHES PER ASME Y14.5		INPUT ARM 1				
TOLERANCES:						
FRACTIONAL ± 1/16						
ANGULARs: ± 1/2°						
TWO PLACE DECIMAL ±.015						
THREE PLACE DECIMAL ±.005						
MATERIAL		NAME	DATE	SIZE	DWG. NO.	REV
	DRAWN	TRR	06/15/2018	B	8-2-2-006	4
	CHECKED	TRR	06/15/2018			
SPEC	DO NOT SCALE DRAWING			SCALE: 1:1	WEIGHT: 1.576	SHEET 1 OF 1


MANUFACTURE: REABE DESIGN LLC
MFG PART NUMBER : 6002-02-18

GATE ROD ASSY

NOTES:

- SEE REABE DESIGN LLC DRAWING NO. 6002-02-18 FOR MATERIALS AND SPECIFICATIONS
- SEE REABE DESIGN LLC DRAWING NO. 6002-02-18 FOR COMPLETE DIMENSION OF PART

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	1/6/2018	TRR	TRR
B	TITLE BLOCK UPDATE, ADDED NOTES FOR DIM. AND MAT.	11/1/2019	TRR	BJD
3	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/04/2025	TRR	TRR

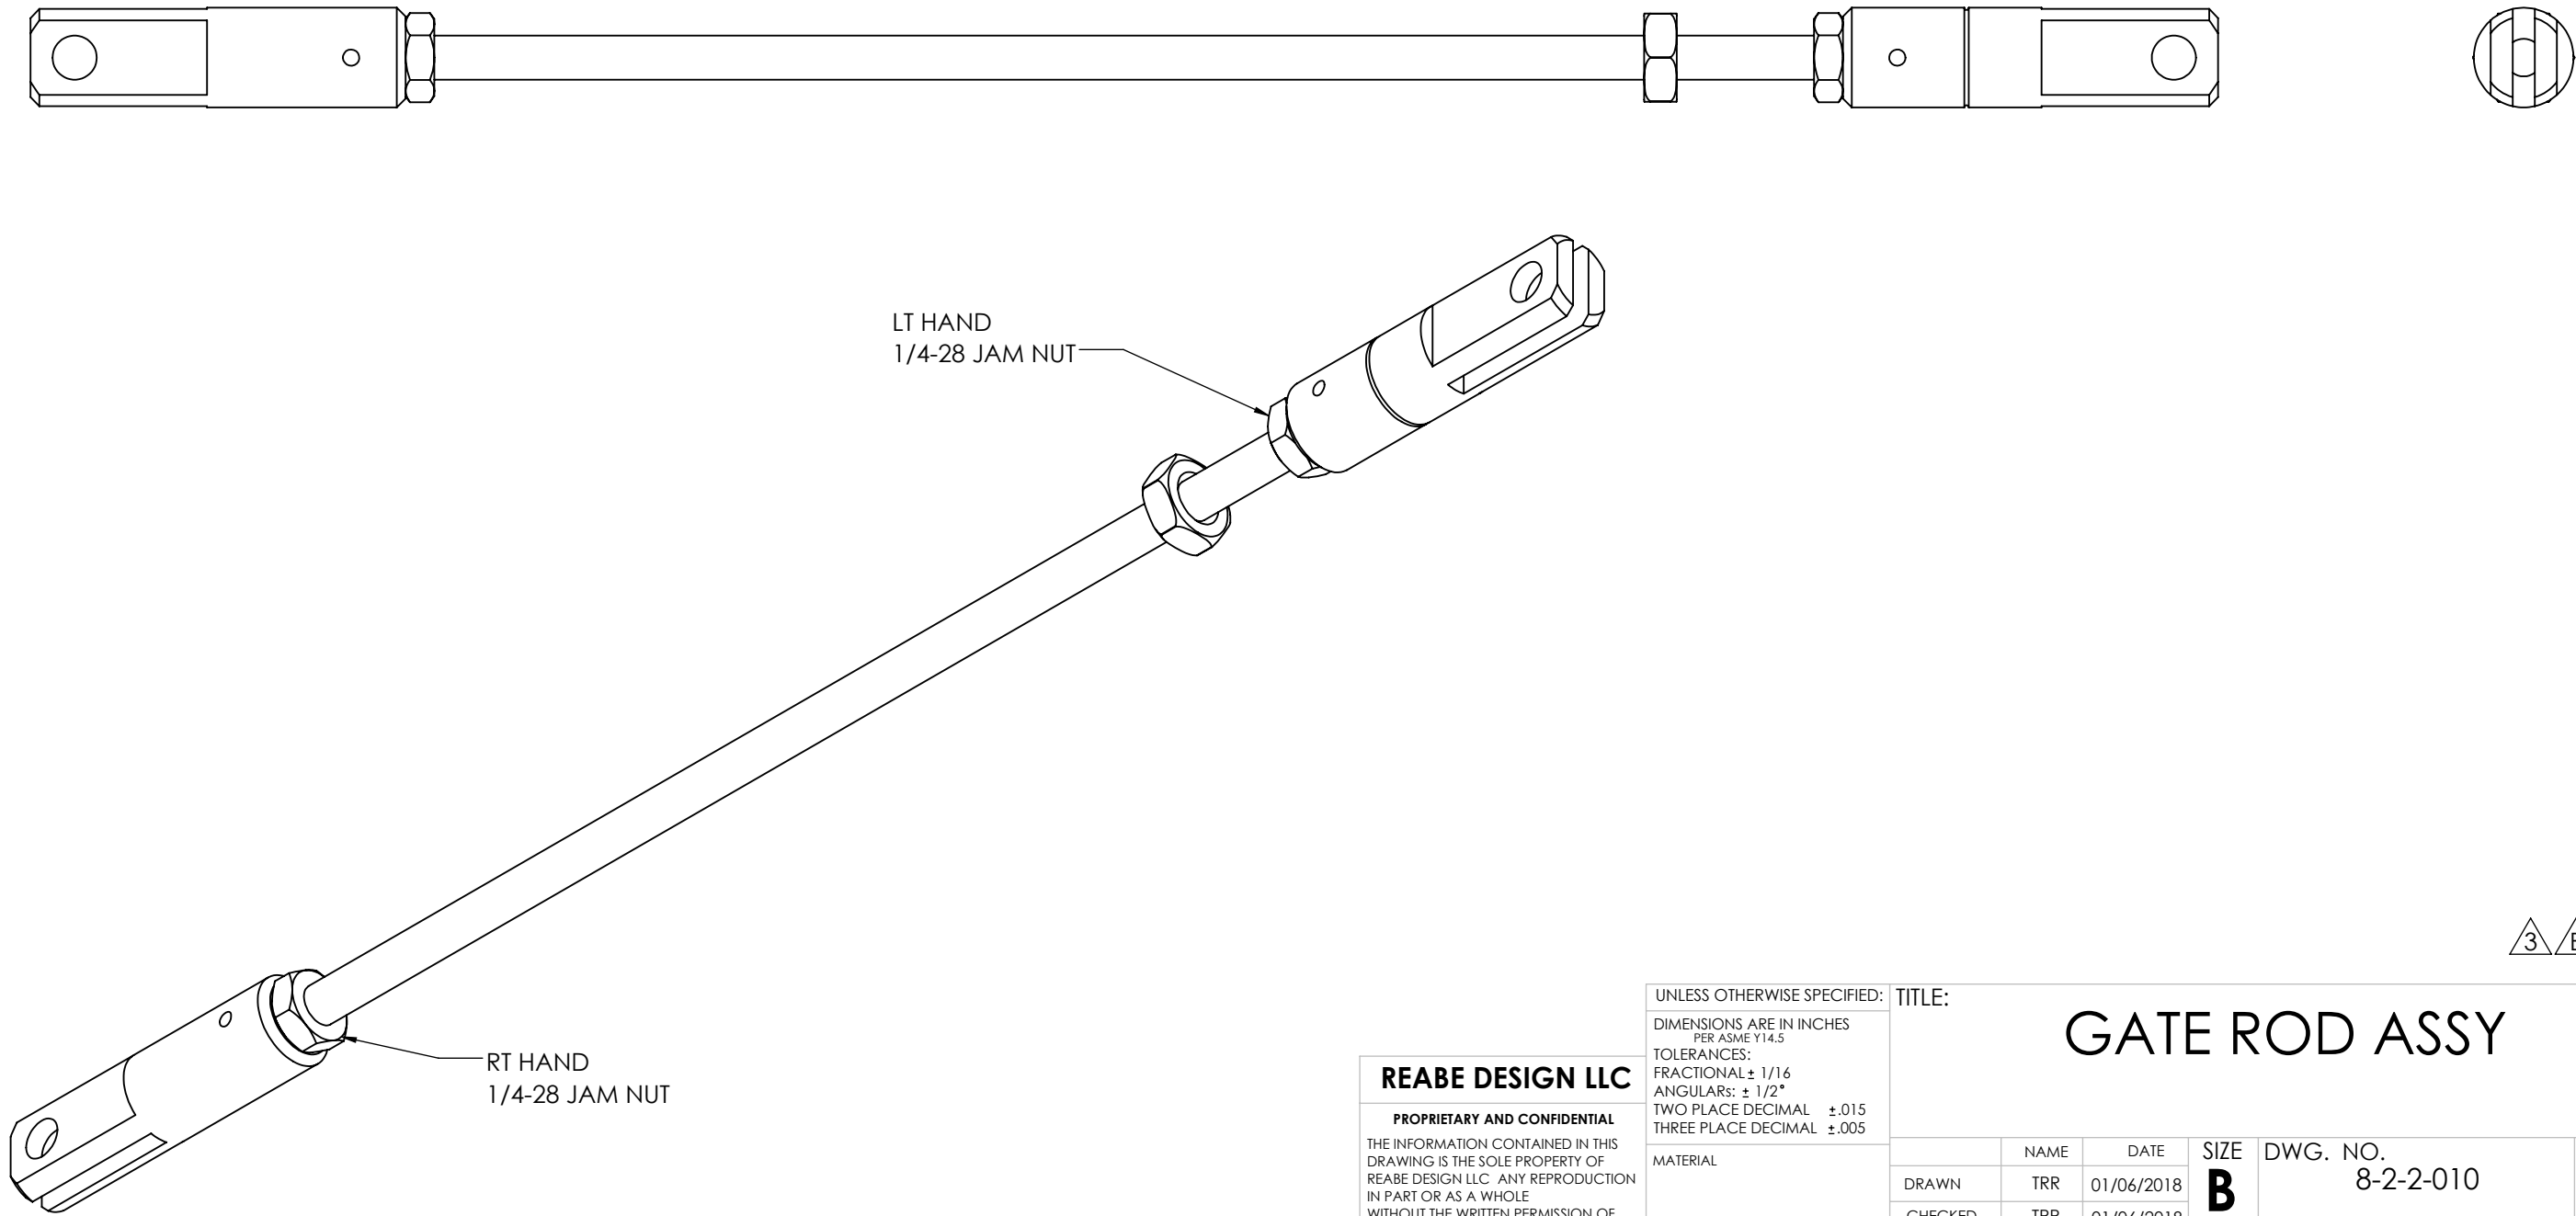

REABE DESIGN LLC


PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:			TITLE:					
DIMENSIONS ARE IN INCHES PER ASME Y14.5			GATE ROD ASSY					
TOLERANCES:								
FRACTIONAL $\pm 1/16$ ANGULARs: $\pm 1/2^\circ$ TWO PLACE DECIMAL $\pm .015$ THREE PLACE DECIMAL $\pm .005$								
MATERIAL			NAME	DATE	SIZE	DWG. NO.	REV	
		DRAWN	TRR	01/06/2018	B	8-2-2-010	3	
		CHECKED	TRR	01/06/2018				
SPEC		DO NOT SCALE DRAWING			SCALE: 1:1		WEIGHT:	SHEET 1 OF 1

- NOTES:
- REABE DESIGN LLC P#: 6002-02-08-38 USED IN 8-2-3-380
REABE DESIGN LLC P#: 6002-02-08-41 USED IN 8-3-3-410
 - SEE REABE DESIGN LLC DRAWING NO. 6002-02-08-TAB FOR MATERIALS AND SPECIFICATIONS
 - SEE REABE DESIGN LLC DRAWING NO. 6002-02-08-TAB FOR COMPLETE DIMENSION OF PART

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	5/4/2018	TRR	TRR
B	PIN HOLE MOVED	5/16/2019	TRR	TRR
C	TITLE BLOCK UPDATE, ADDED NOTES FOR DIM. AND MAT.	11/1/2019	TRR	BJD
4	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/04/2025	TRR	TRR

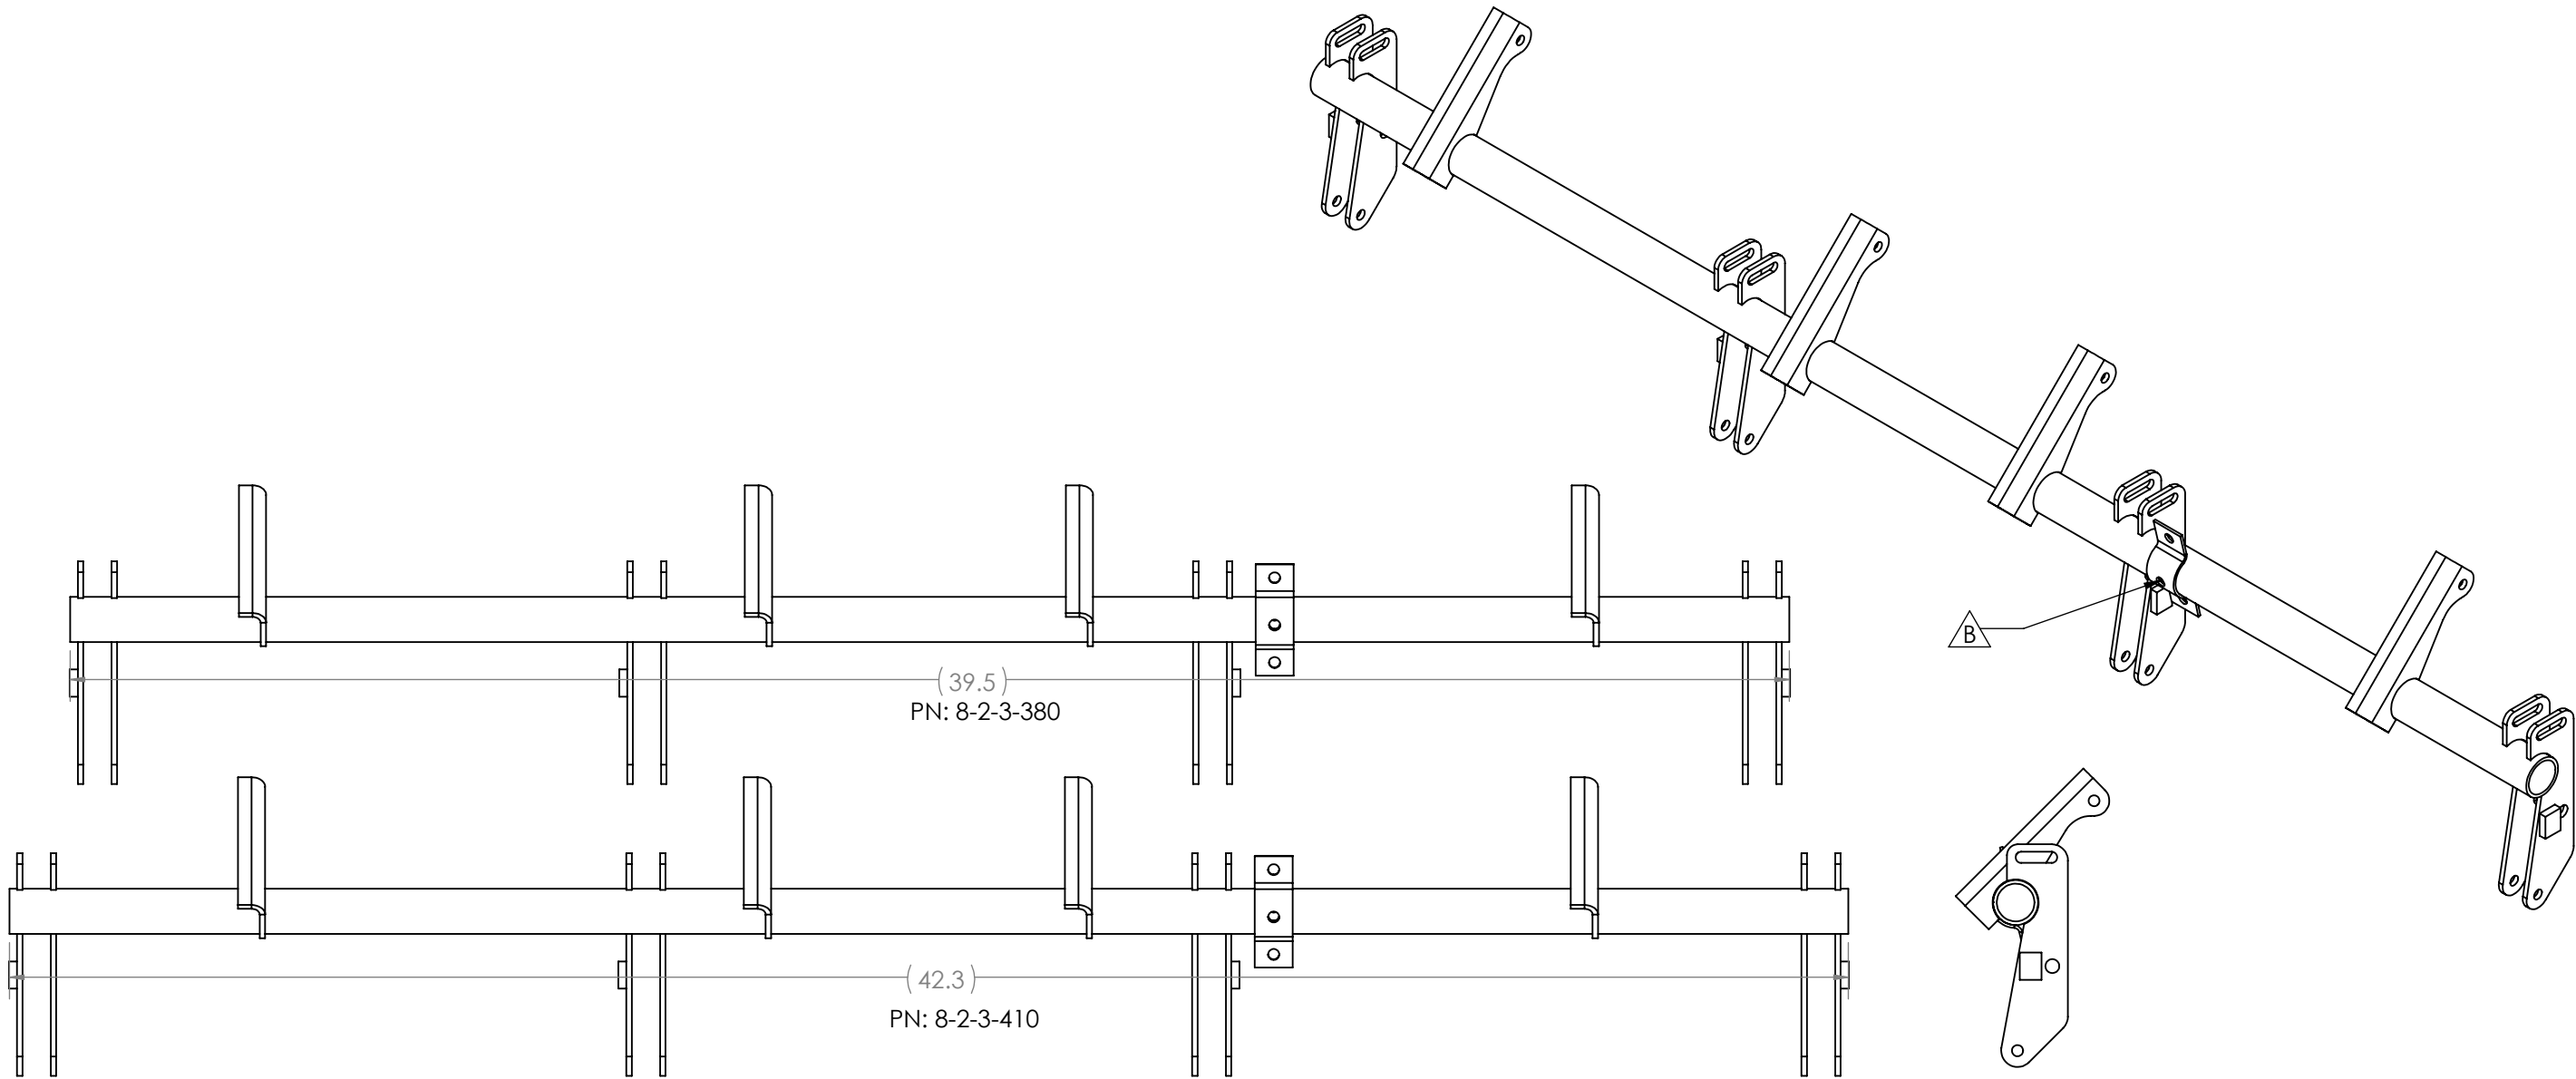

REABE DESIGN LLC


PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:	
DIMENSIONS ARE IN INCHES PER ASME Y14.5	
TOLERANCES:	
FRACTIONAL $\pm 1/16$	
ANGULARS: $\pm 1/2^\circ$	
TWO PLACE DECIMAL $\pm .015$	
THREE PLACE DECIMAL $\pm .005$	
MATERIAL	
SPEC	

TITLE:
BELL CRANK TORQUE TUBE

	NAME	DATE	SIZE	DWG. NO.	REV
DRAWN	TRR	05/04/2018	B	8-2-3-TAB	4
CHECKED	TRR	05/04/2018			
DO NOT SCALE DRAWING			SCALE: 1:4	WEIGHT:	SHEET 1 OF 1

D

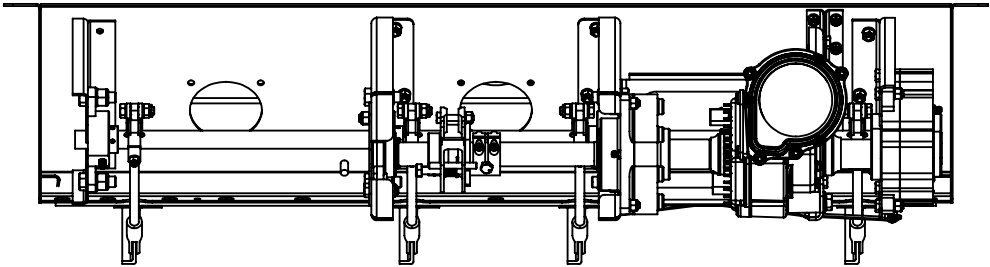

BACK SIDE VIEW
SHOWN ON 7.5" GATE

C

8-7-0-380 BOM


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-7-1-000	7.5" POWER GATE FRAME	1
2	8-7-2-001	INPUT SHAFT 7.5" GATE	1
3	8-7-2-002	MID SHAFT 7.5" GATE	1
4	8-7-2-003	OUTPUT SHAFT 7.5" GATE	1
5	8-7-2-004	PLANETARY GEARBOX	1
6	8-7-2-005	SPLINE GEARBOX	1
7	8-7-2-006	OVER CENTER ARM	4
8	8-7-3-380	MAIN SHAFT 7.5" 38" GATE	1
9	8-2-2-006	INPUT ARM 1	1
10	8-2-1-001	POWER UNIT	1
11	8-2-2-007	1" FLANGE BEARINGS	1
12	8-7-2-150	.75" FLANGE BEARING	3
13	8-7-2-151	3/16" KEY 1/2" LONG	4
14	8-7-2-152	1" STAINLESS EXTERNAL SNAP RING	1
15	8-7-2-153	.5" LG SS SPRING	1
16	8-7-2-154	1.5" LG SS SPRING	1
17	8-2-2-113	STRETCH FIT SEAL	2
18	8-7-2-155	7/16-20 HEX HEAD BOLT 1-1/4 LG	6
19	AN5C11A	5/16" SS BOLT	2
20	AN960C516	5/16 SS WASHER .063"	10
21	AN365C524	5/16-24 SS NYLON LOCK NUT	2
22	AN5C11	5/16 SS BOLT	4
23	AN310C5	5/16-24 SS CASTEL NUT	4
24	AN365C428	1/4-28 SS NYLON LOCK NUT	10
25	AN960C416L	1/4 SS WASHER .032"	10
26	AN4C7A	1/4 SS BOLT	4
27	AN4C10A	1/4 SS BOLT	4
28	NAS1149C0763R	7/16" SS WASHER .063" THK	6
29	MS21044C7	7/16-20 SS SELF LOCKING NUT	6
30	AN3C12A	3/16 SS BOLT	4
31	NAS1149C0336R	3/16" SS WASHER .032"	4
32	AN365C1032	10-32 SS LOCK NUT	4
33	AN4C13A	1/4-28 SS BOLT	1
34	AN4C21A	1/4-28 SS BOLT	1

B

A

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	1/10/2021	TRR	TRR
B	ADDED PART NUMBER NOTE 7, ADDED ASSEMBLY NUMBER TO TOP OB BOM	1/20/2021	TRR	TRR
3	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/05/2025	TRR	TRR

D

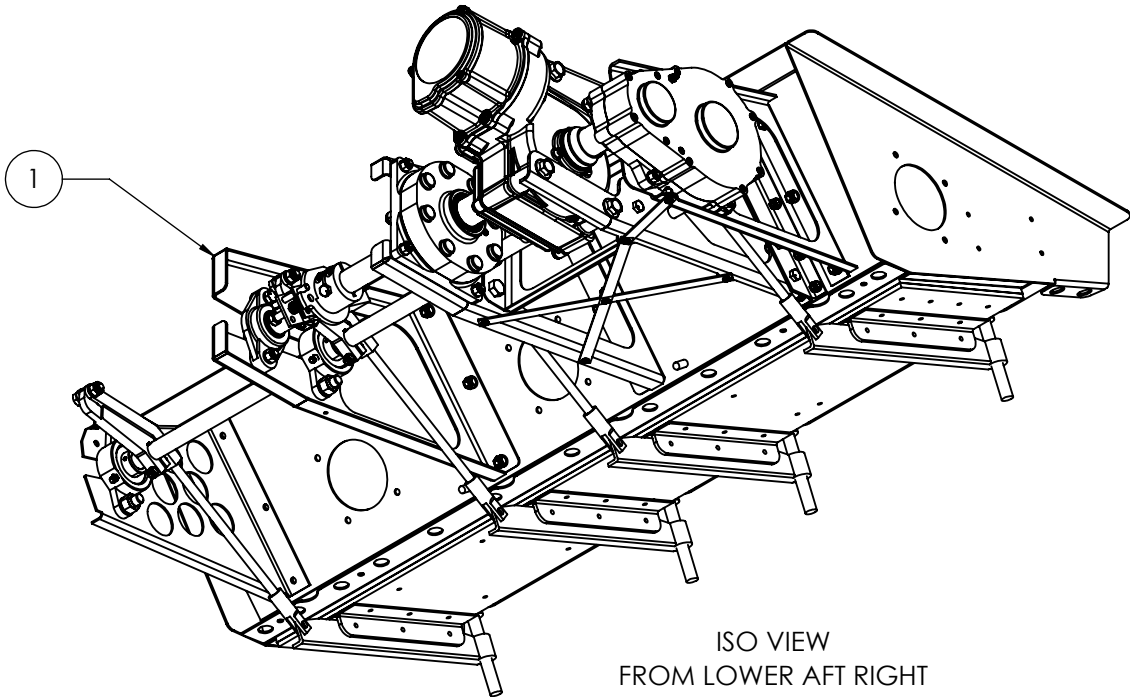

ISO VIEW
FROM LOWER AFT RIGHT
SHOWN ON 7.5" GATE

C

B

A

NOTES:

- ALL HARDWARE TORQUED PER FAA AC 43.13-1B, UNLESS OTHERWISE SPECIFIED
- PIVOT POINT BOLTS DO NOT PINCH JOINT
- SECURE NUT WITH COTTER PIN MS24665-227 OR EQUIVALENT
- SEE PART DRAWING FOR MATERIAL DATA
- SEE DOCUMENT "WEIGHT-8" FOR WEIGHT AND BALANCE DATA
- 8-2-2-006 REVERSED ASSEMBLY IS USED ON ALL AIR TRACTORS 8-7-0-380 UNITS
8-2-2-006 STANDARD ASSEMBLY IS USED ON ALL THRUSH 8-7-0-380 UNITS
- APPLY PART NUMBER PER RD PS-202 CLASS 2, 3, 6, 9, OR 12

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL ± 1/16
ANGULARS: ± 1/2°
TWO PLACE DECIMAL ±.015
THREE PLACE DECIMAL ±.005

MATERIAL

SPEC

TITLE:

7.5" POWER GATE ASSY

DRAWN

NAME

DATE

SIZE

DWG. NO.

REV

CHECKED

TRR

12/16/2020

B

8-7-0-TAB


3


DO NOT SCALE DRAWING


SCALE: 1:8

WEIGHT:

SHEET 1 OF 4

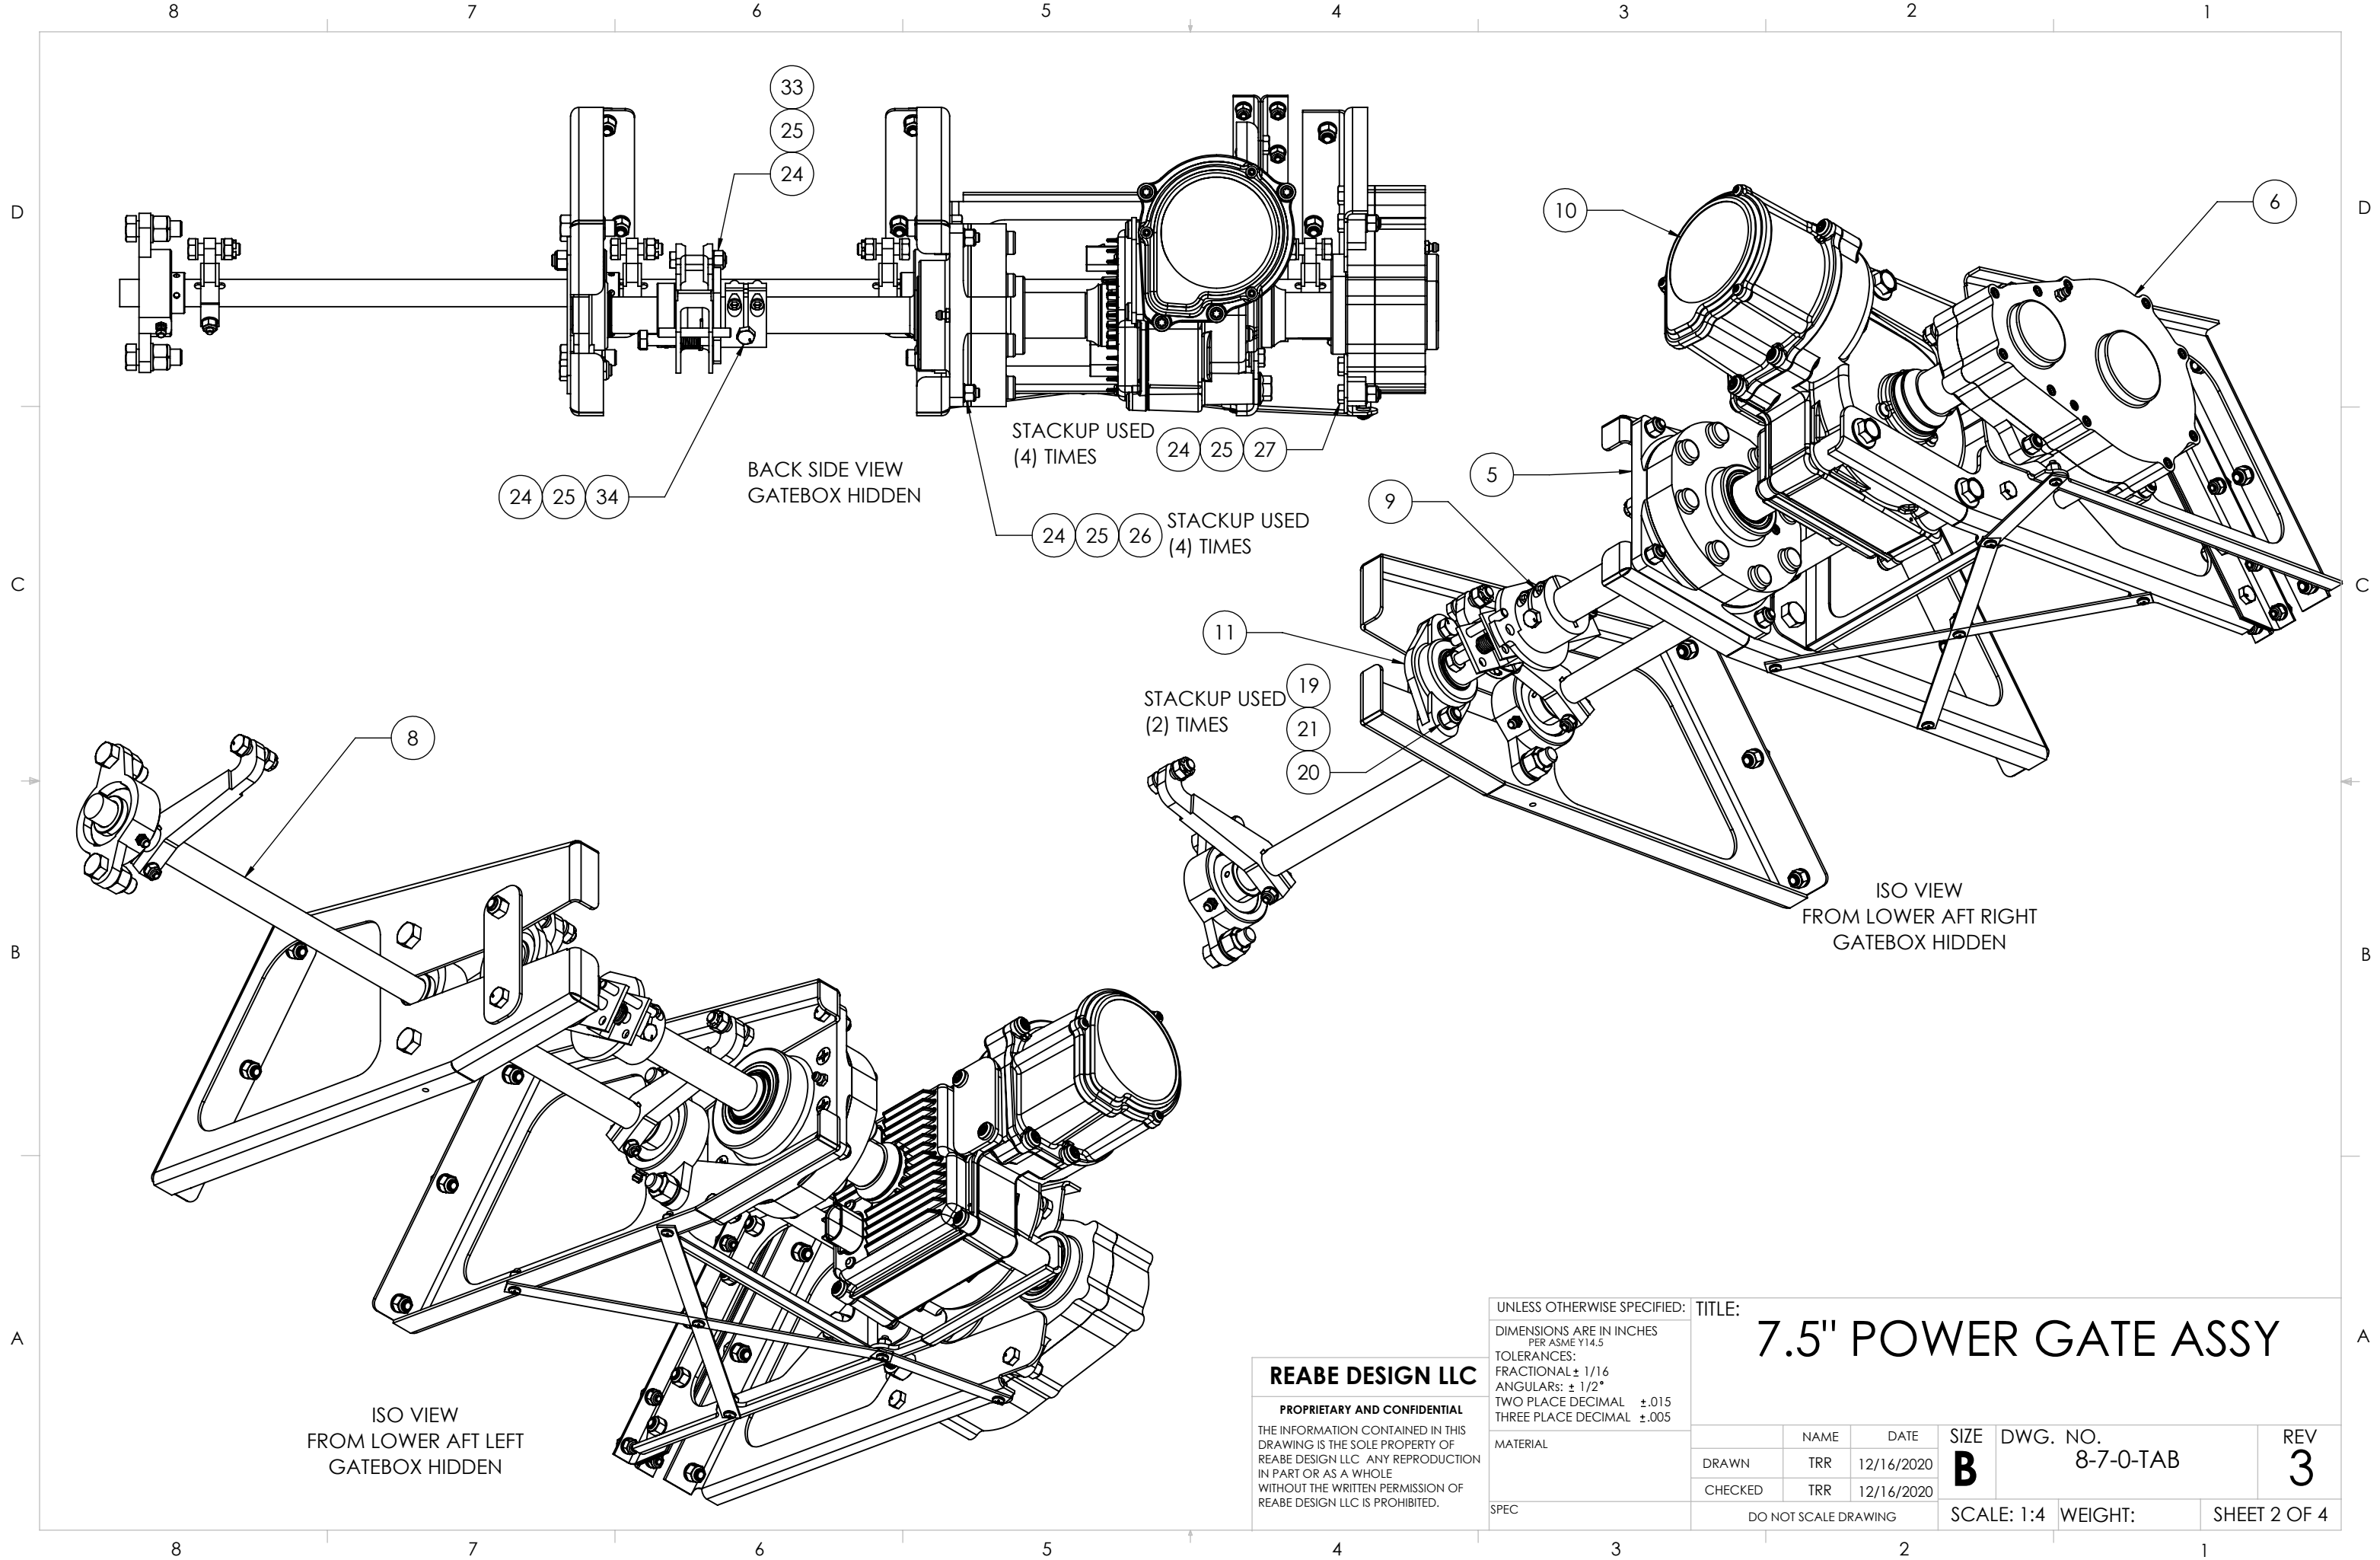

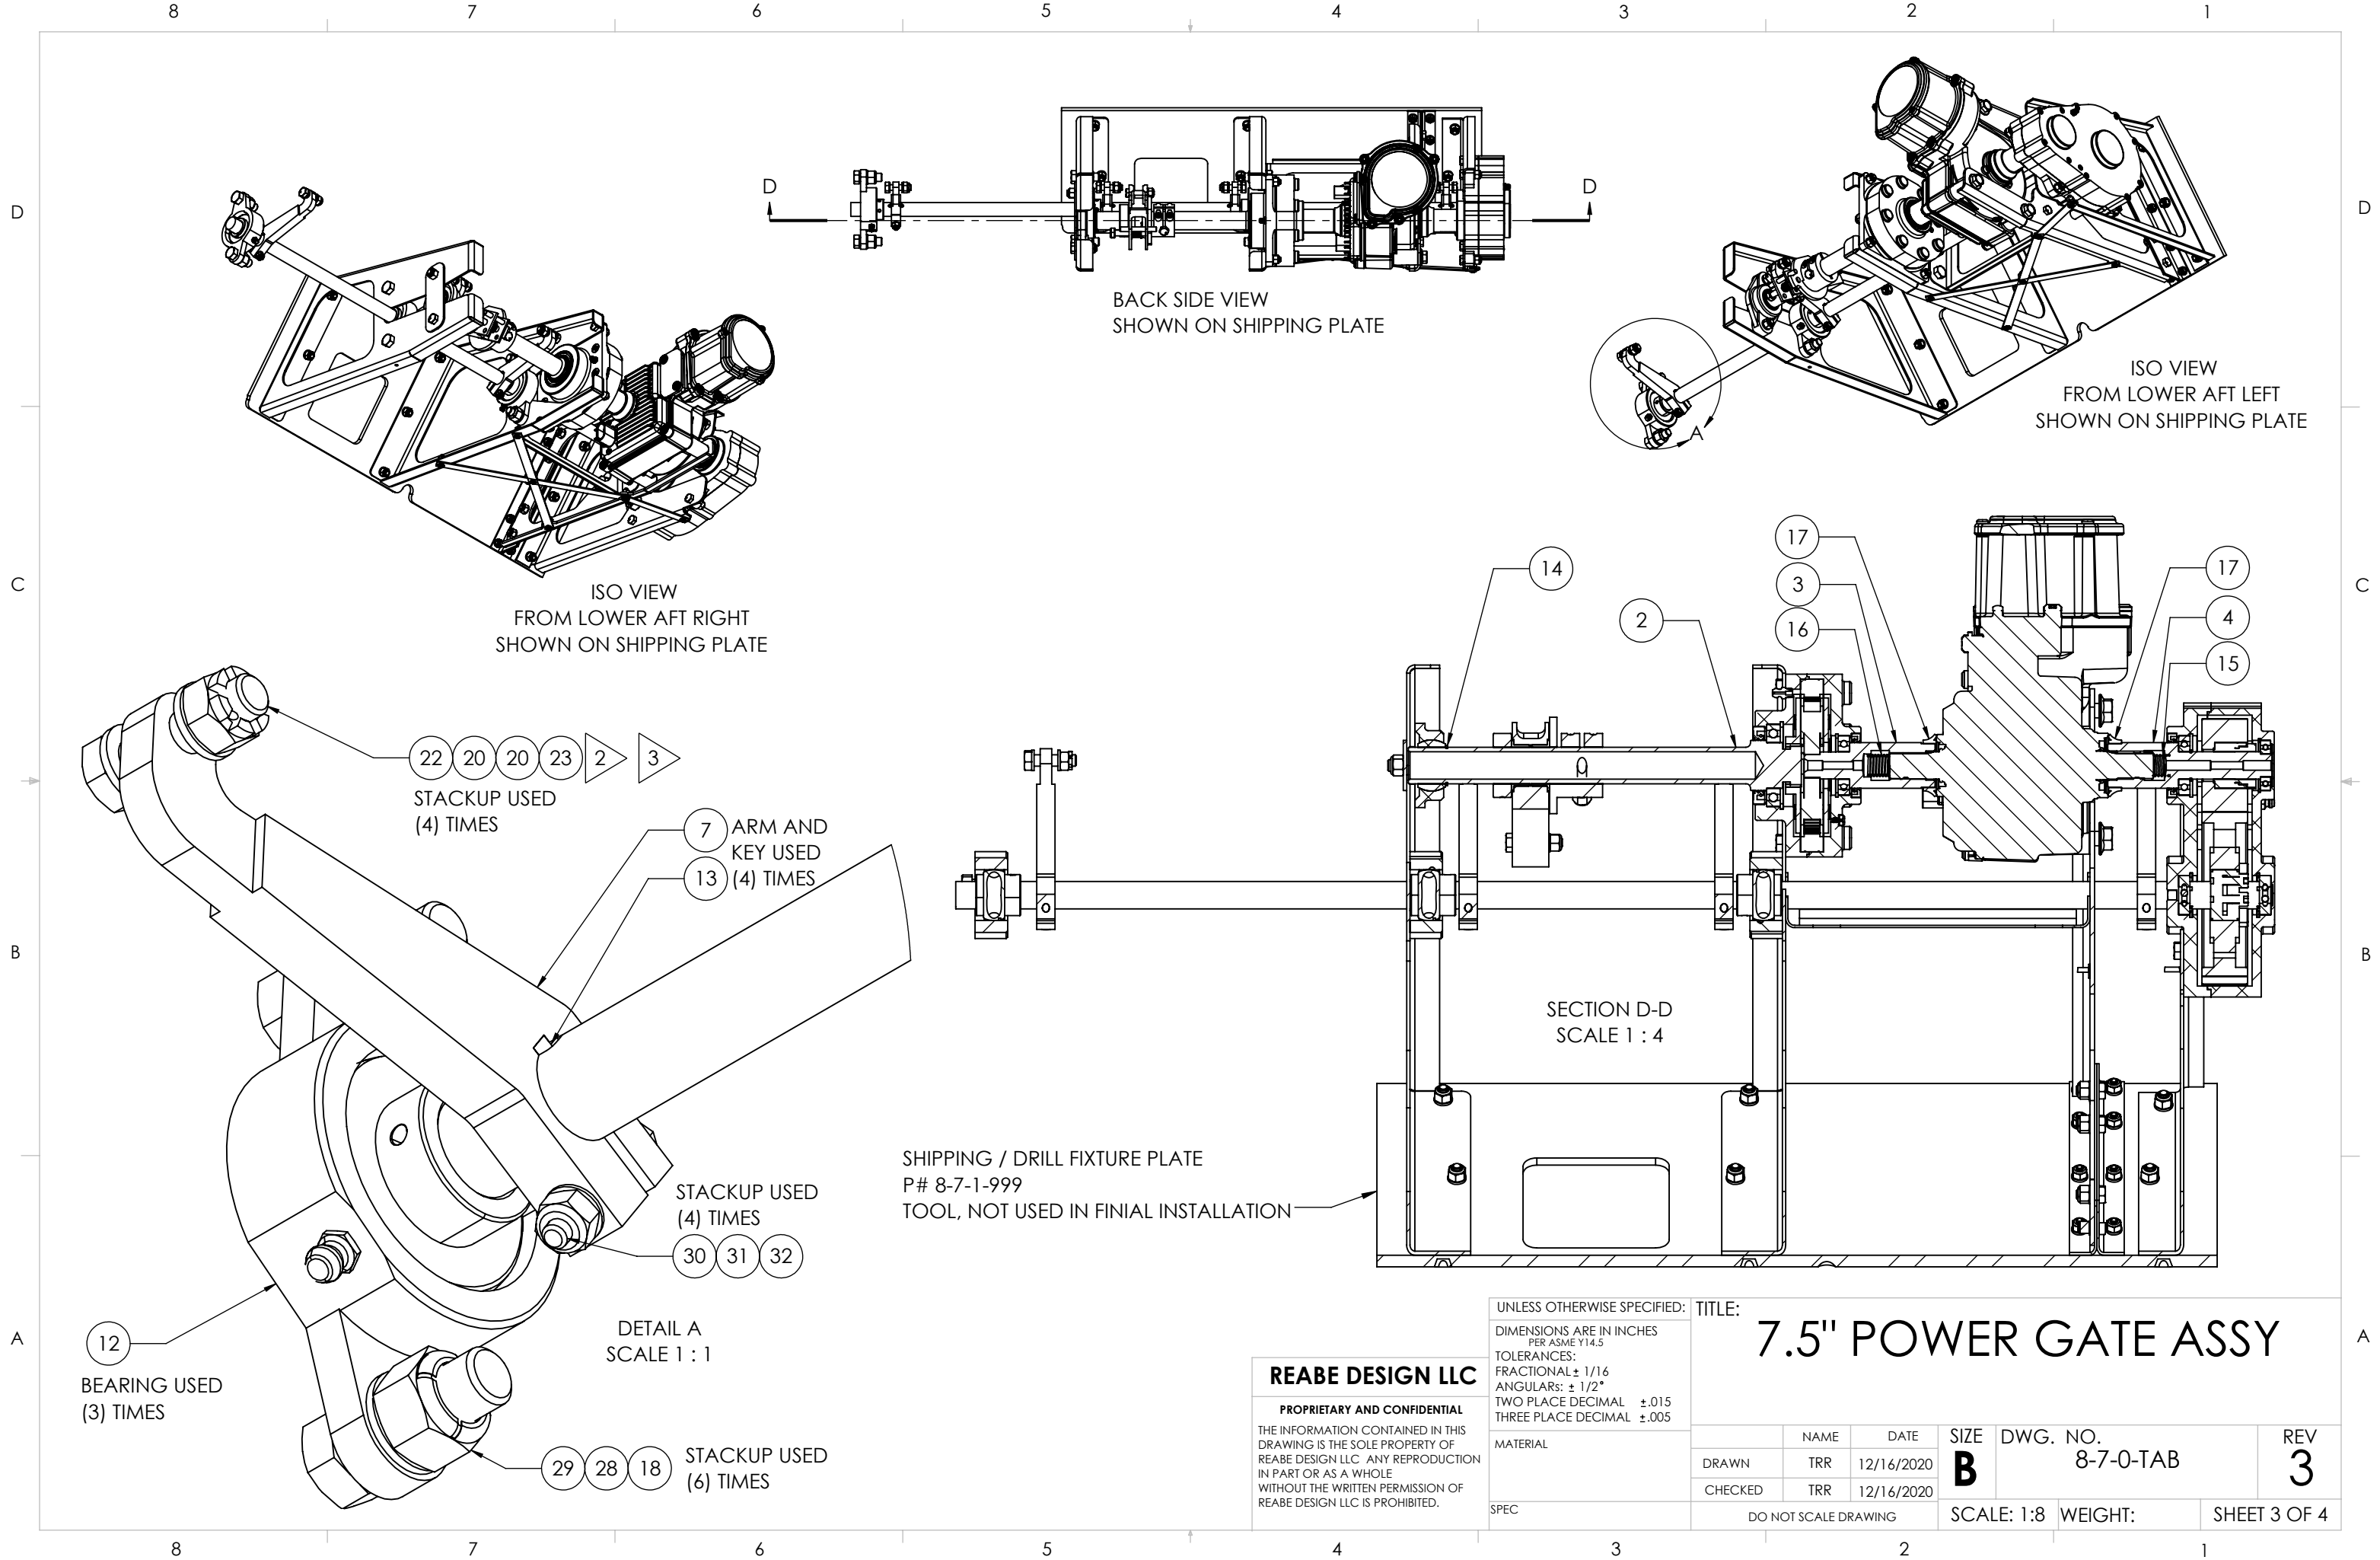


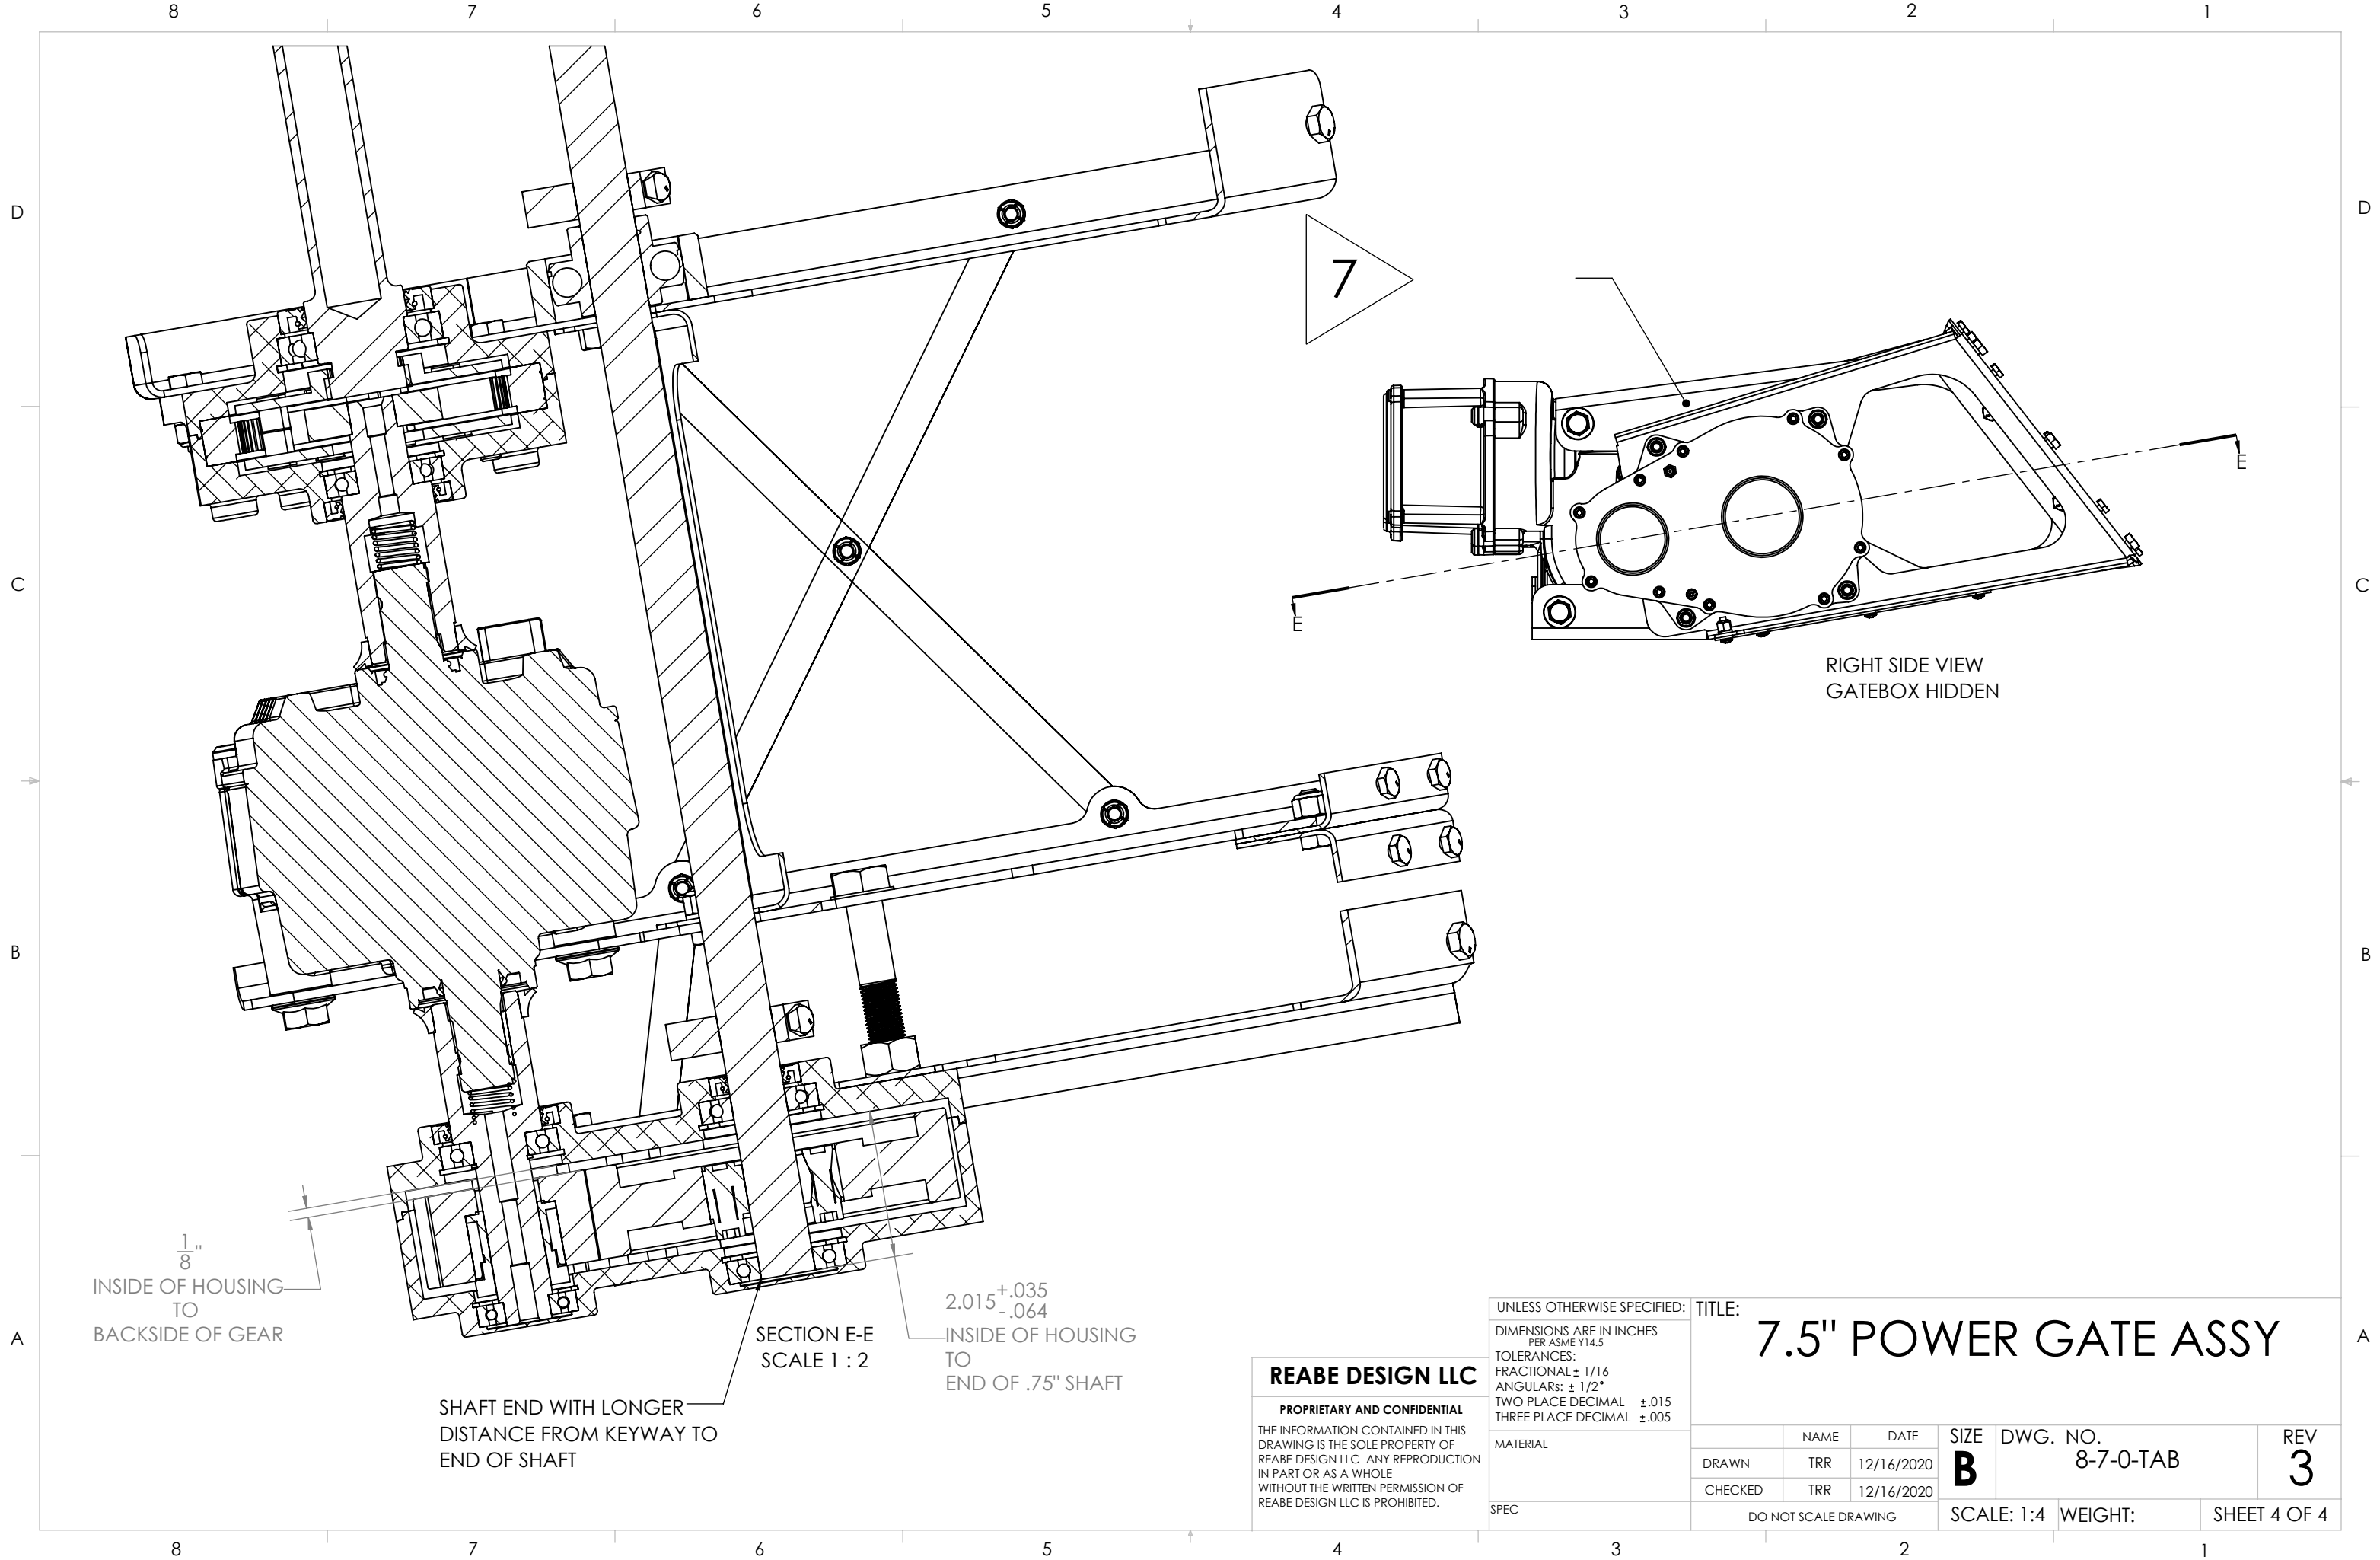

1. ALL HARDWARE TORQUED PER FAA AC43.13-1B, UNLESS OTHERWISE SPECIFIED
2. SEE PART DRAWING FOR MATERIAL DATA
3. APPLY PART NUMBER PER RD PS-202 CLASS 6 OR 7 


ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	8-7-1-001	LEFT INBOARD.SUP 7.5" GATE	1
2	8-7-1-002	RIGHT INBOARD SUP 7.5" GATE	1
3	8-7-1-003	MOTOR SUP 7.5" GATE	1
4	8-7-1-004	RIGHT OUTBOARD SUP 7.5" GATE	1
5	8-7-1-005	CROSS BRACE 7.5" GATE	1
6	8-7-1-006	MOUNT BRACKET 7.5" GATE	2
7	8-7-1-007	INPUT SHAFT END PLATE 7.5" GATE	1
8	8-7-1-008	SMALL TIE BRACE	1
9	8-7-1-009	CROSS TIE BRACE	2
10	8-7-1-150	1/2"-20 X 2.5" HEX HEAD SS BOLT	1
11	NAS1149-C0832R	1/2" 1/32" WASHER	1
12	AN4C5A	1/4-28 SS BOLT	15
13	AN960C416	1/4 SS WASHER .063"	11
14	AN365C428	1/4-28 SS NYLON LOCK NUT	15
15	NAS1149C0416R	1/4" SS WASHER .016" THK	4
16	AN365C832	8-32 SS LOCK NUT	6
17	AN960C8	#8 SS WASHER .032"	6
18	MS27039C0809	8-32 MACHINE SCREW	6
19	AN3C4	10-32 SS BOLT	10
20	NAS1149C0336R	#10 SS WASHER .063"	10
21	AN365C1032	10-32 SS LOCK NUT	10


REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	1/10/2021	TRR	TRR
B	ADDED PART NUMBER NOTE 3, FIXED BOM BALLON ISSUE	1/20/2021	TRR	TRR
3	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/05/2025	TRR	TRR

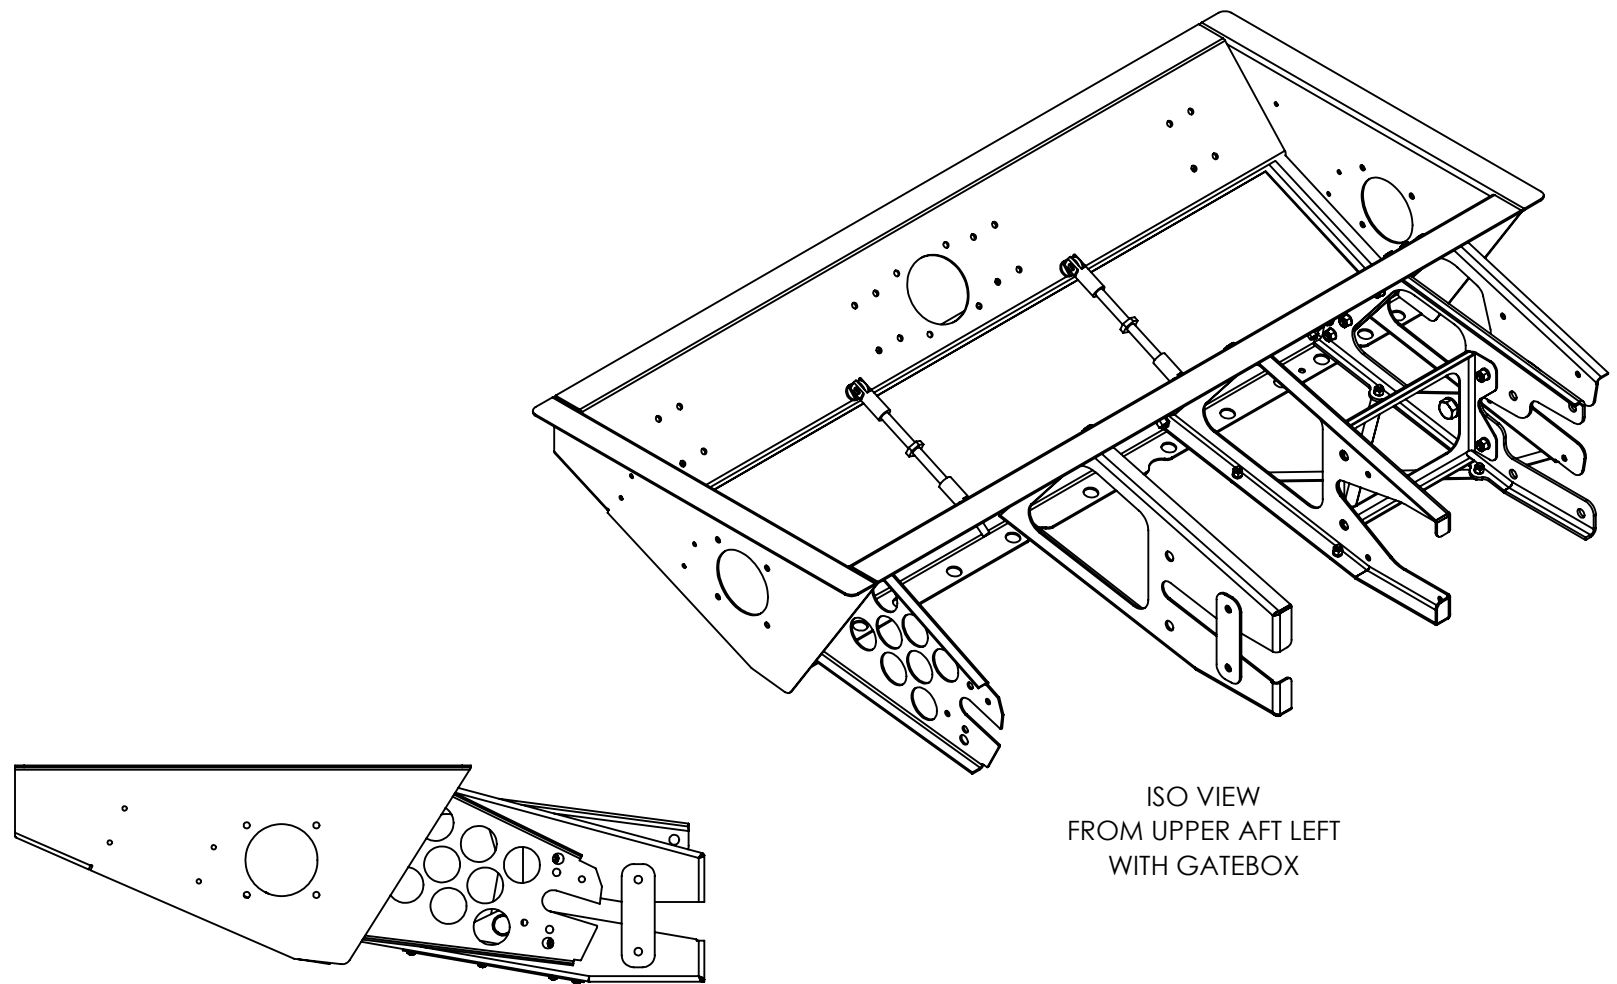LEFT SIDE VIEW
WITH GATEBOX


ISO VIEW
FROM UPPER AFT LEFT
WITH GATEBOX

REABE DESIGN LLC PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.	UNLESS OTHERWISE SPECIFIED:		TITLE: 7.5" POWER GATE FRAME					
	DIMENSIONS ARE IN INCHES PER ASME Y14.5							
	TOLERANCES:							
	FRACTIONAL ± 1/16							
	ANGULARS: ± 1/2°							
	TWO PLACE DECIMAL ±.015							
	THREE PLACE DECIMAL ±.005							
	MATERIAL							
				NAME	DATE	SIZE	DWG. NO.	REV
			DRAWN	TRR	12/16/2020	B	8-7-1-000	3
			CHECKED	TRR	12/16/2020			
SPEC		DO NOT SCALE DRAWING				SCALE: 1:8	WEIGHT: 10.766	SHEET 1 OF 3

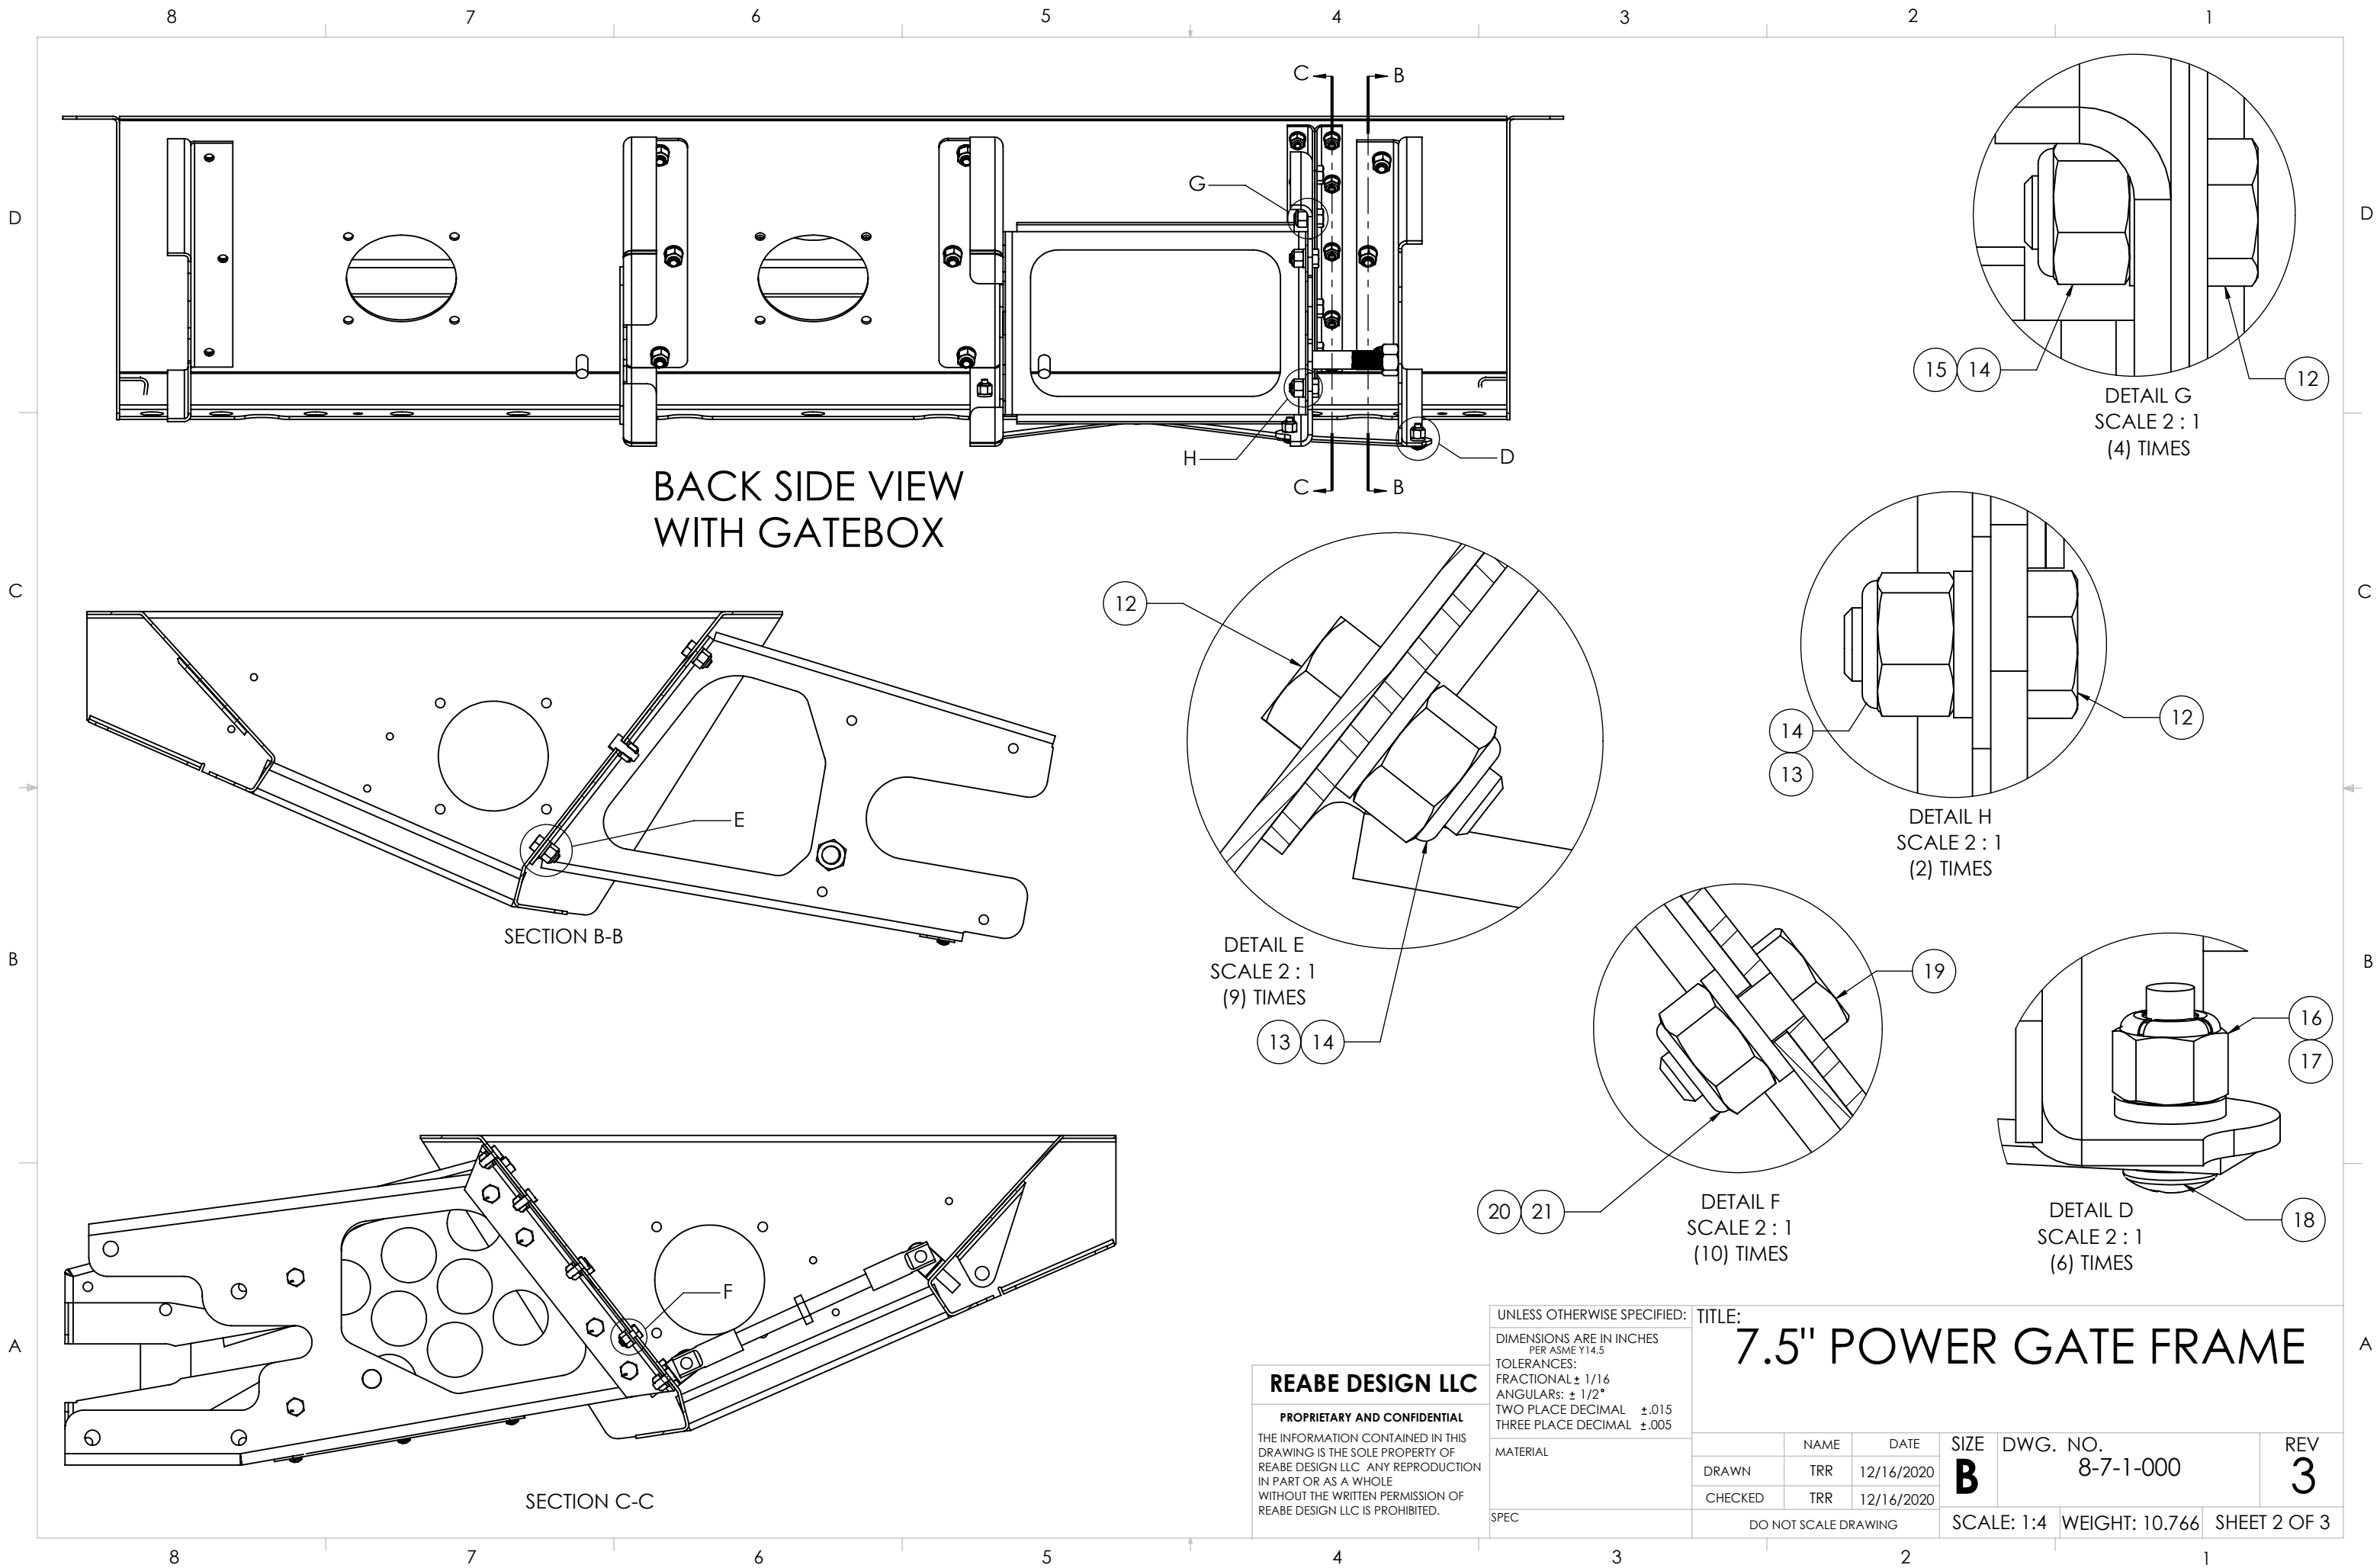


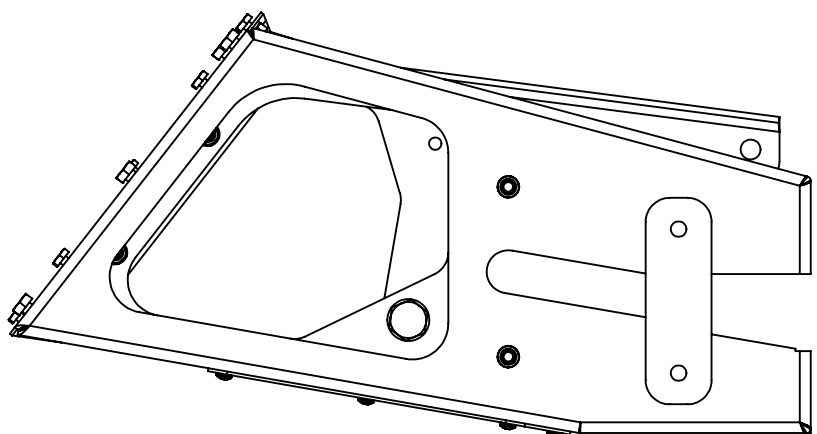

LEFT SIDE VIEW
WITHOUT GATEBOX

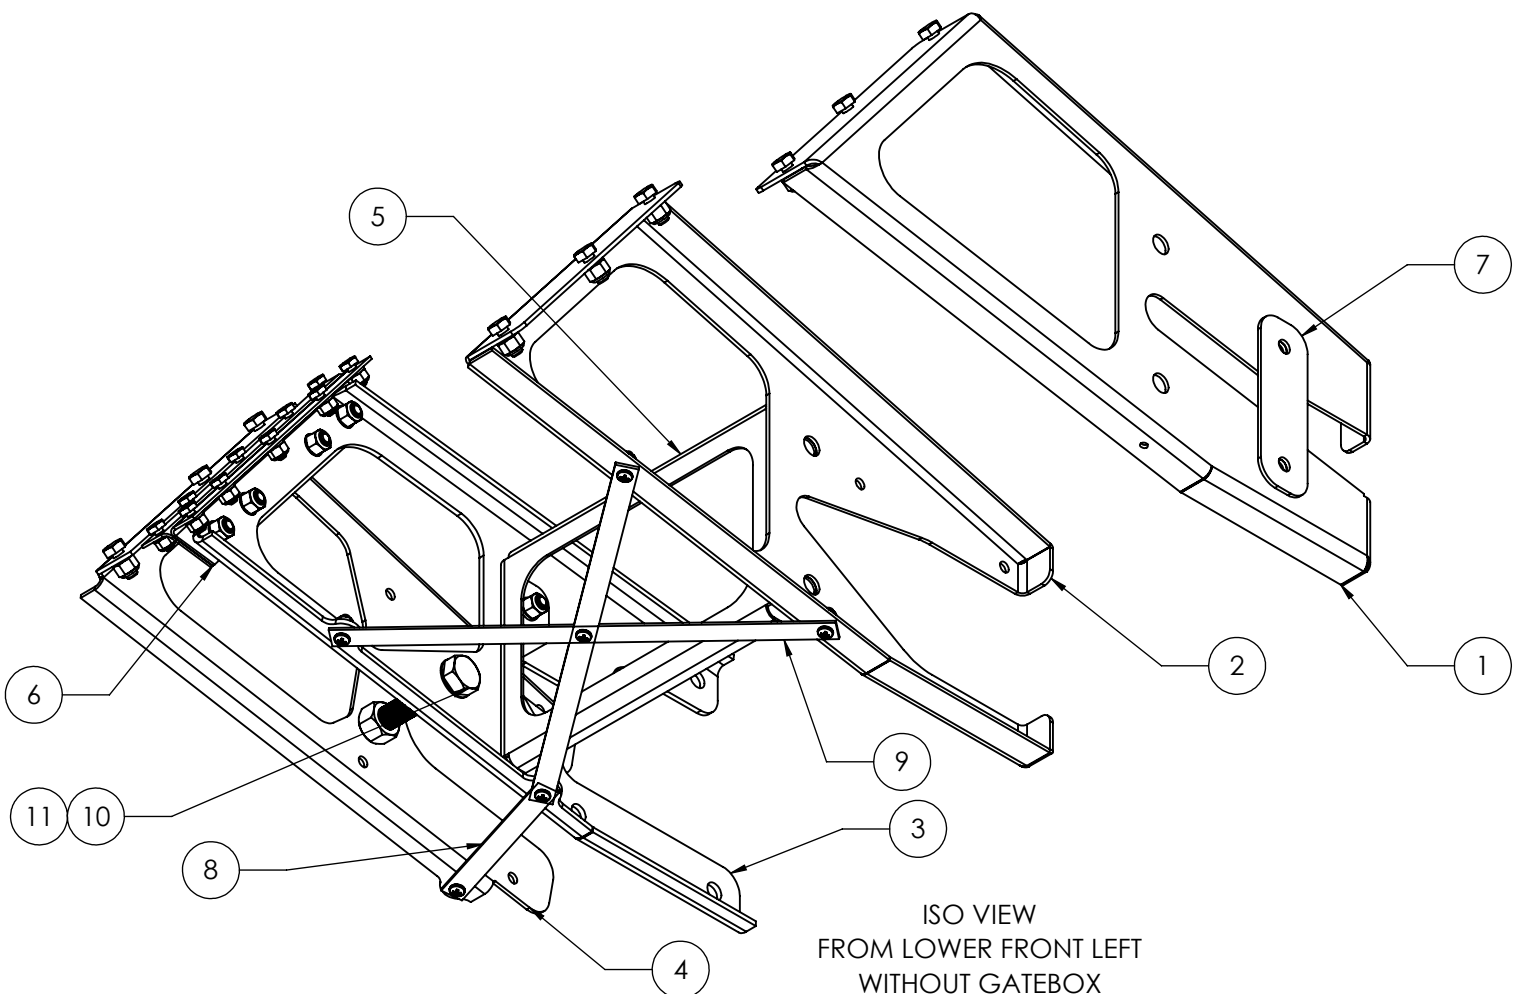

ISO VIEW
FROM LOWER FRONT LEFT
WITHOUT GATEBOX

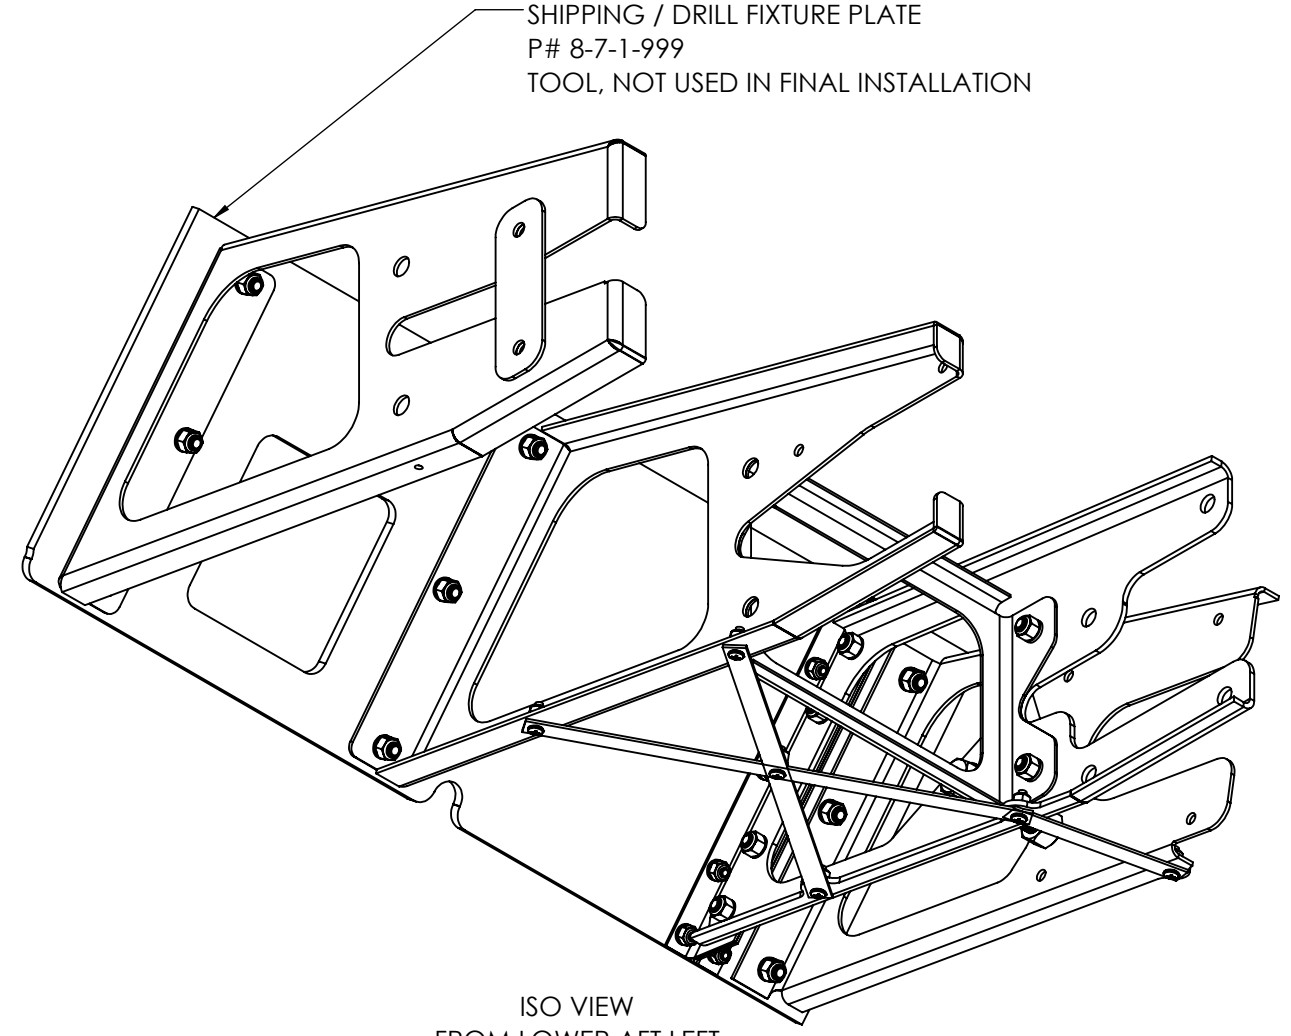

SHIPPING / DRILL FIXTURE PLATE
P# 8-7-1-999
TOOL, NOT USED IN FINAL INSTALLATION


ISO VIEW
FROM LOWER AFT LEFT
WITH SHIPPING PLATE

REABE DESIGN LLC
PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
REABE DESIGN LLC. ANY REPRODUCTION
IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:		TITLE:					
DIMENSIONS ARE IN INCHES PER ASME Y14.5		7.5" POWER GATE FRAME					
TOLERANCES:							
FRACTIONAL ± 1/16							
ANGULARS: ± 1/2°							
TWO PLACE DECIMAL ±.015							
THREE PLACE DECIMAL ±.005							
MATERIAL			NAME	DATE	SIZE	DWG. NO.	REV
		DRAWN	TRR	12/16/2020	B	8-7-1-000	3
		CHECKED	TRR	12/16/2020			
SPEC	DO NOT SCALE DRAWING				SCALE: 1:4	WEIGHT: 10.766	SHEET 3 OF 3

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	8-7-2-101	PLANETARY GEARBOX HOUSING	1
2	8-7-2-102	PLANETARY GEARBOX COVER	1
3	MS24693-C302	1/4-28 SCREW SS 1-1/2" LG	8
4	8-7-2-103	3:1 GEAR REDUCTION	1
5	8-7-2-104	R20 OPEN BALL BEARING	1
6	8-7-2-105	R12 BALL BEARING	1
7	8-7-2-106	1.25" ROTARY SHAFT SEAL W/ WIPER	1
8	8-7-2-107	1.375" ROTARY SHAFT SEAL W/ WIPER	1
9	8-7-2-108	1-5/8" INTERNAL SNAP RING	1
10	8-7-2-109	2-1/4" INTERNAL SNAP RING	1
11	8-7-2-110	WASHDOWN BREATHER VENT	1
12	8-7-2-121	SS GREASE FITTING	1

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	1/10/2021	TRR	TRR
B	ADDED PART NUMBER NOTE 5	1/20/2021	TRR	TRR
3	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/05/2025	TRR	TRR

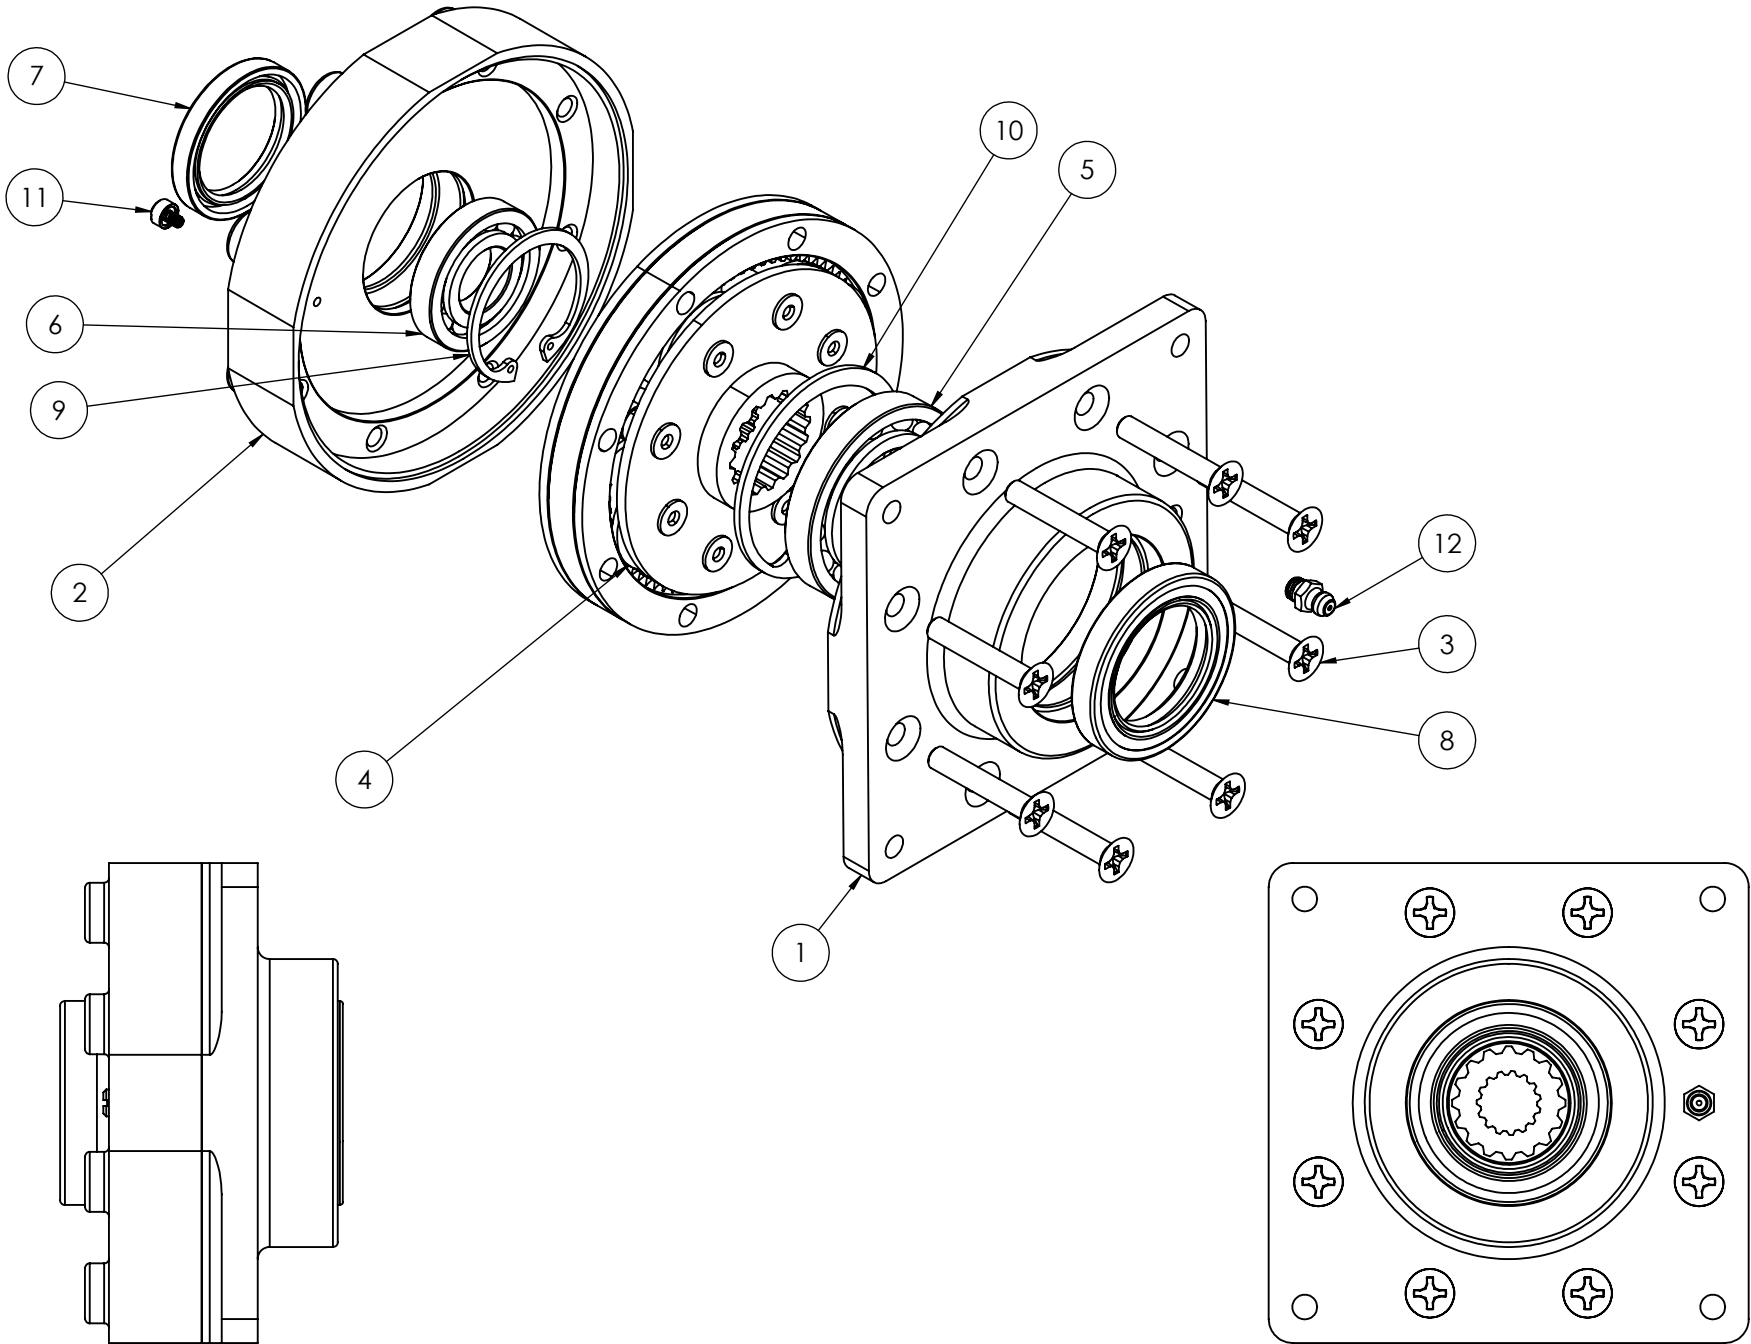

- NOTE:
- ALL HARDWARE TORQUED PER FAA AC43.13-1B, UNLESS OTHERWISE SPECIFIED
 - SEE PART DRAWING FOR MATERIAL DATA
 - SEAL UNDER SCREWHEADS AND HOUSING SPLIT LINE WITH RTV SILICONE
 - GREASE GEARS AND PACK BERINGS WITH GREASE PRIOR TO ASSEMBLY
 - APPLY PART NUMBER PER RD PS-202 CLASS 6 OR 8



REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:		TITLE:					
DIMENSIONS ARE IN INCHES PER ASME Y14.5		PLANETARY GEARBOX					
TOLERANCES:							
FRACTIONAL ± 1/16							
ANGULARs: ± 1/2°							
TWO PLACE DECIMAL ±.015							
THREE PLACE DECIMAL ±.005							
MATERIAL							
			NAME	DATE	SIZE	DWG. NO.	REV
		DRAWN	TRR	12/16/2020	B	8-7-2-004	3
		CHECKED	TRR	12/16/2020			
SPEC		DO NOT SCALE DRAWING			SCALE: 1:2	WEIGHT: 5.122	SHEET 1 OF 1

ITEM NO.	PART NUMBER	DESCRIPTION	
1	8-7-2-111	SPLINE GEARBOX HOUSING	1
2	8-7-2-112	SPLINE GEARBOX COVER	1
3	8-7-2-113	24 TOOTH BORED OUT GEAR	1
4	8-7-2-114	48 TOOTH BORED OUT GEAR	1
5	8-7-2-105	R12 BALL BEARING	3
6	8-7-2-106	1.25" ROTARY SHAFT SEAL W/ WIPER	1
7	8-7-2-108	1-5/8" INTERNAL SNAP RING	2
8	8-7-2-110	WASHDOWN BREATHER VENT	1
9	8-7-2-115	R10 BALL BEARING	1
10	8-7-2-116	1-3/8" INTERNAL SNAP RING	1
11	8-7-2-117	3/4" EXTERNAL SNAP RING	1
12	8-7-2-118	.75" ROTARY SHAFT SEAL W/ WIPER	1
13	8-7-2-119	.75" OE KEYLESS BUSHING	1
14	8-7-2-120	3/4" B400 B-LOC	1
15	8-7-2-121	SS GREASE FITTING	1
16	8-7-2-122	SHCS 8-32 1-1/2" LONG	10

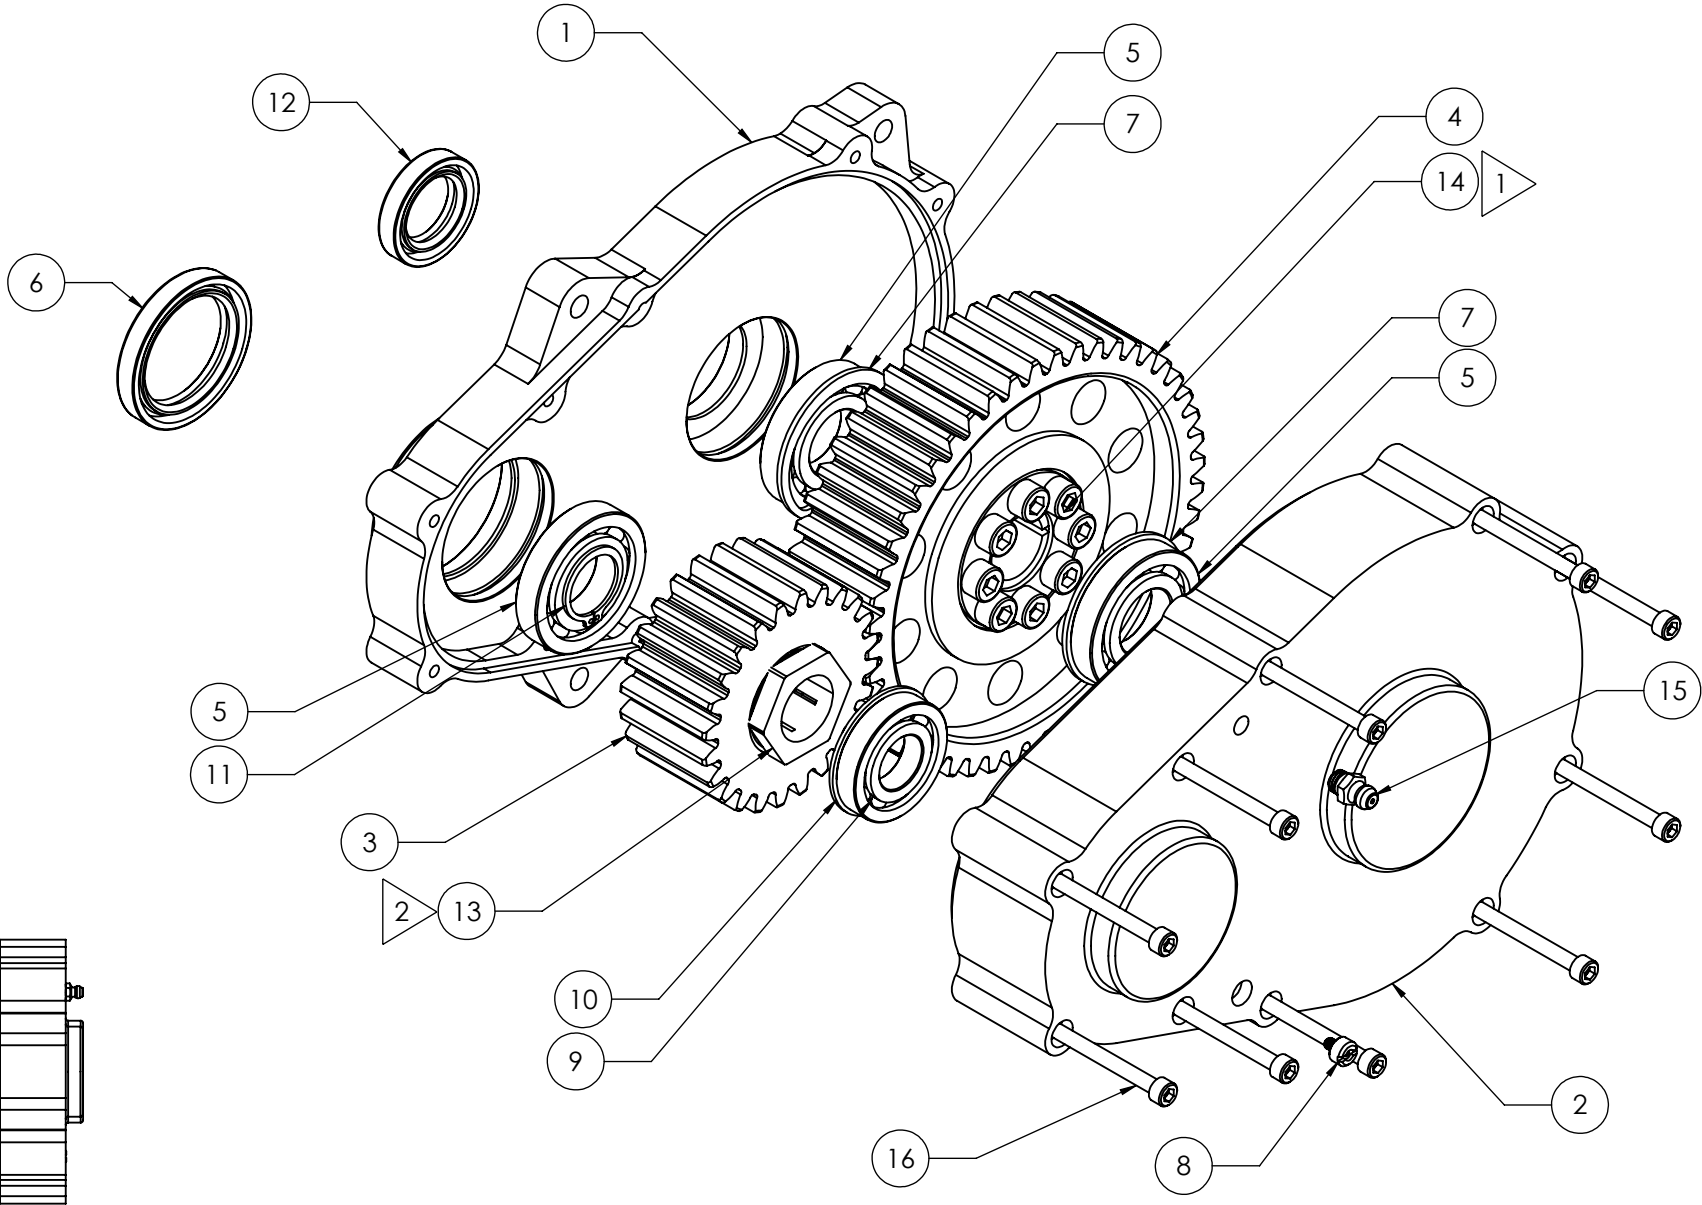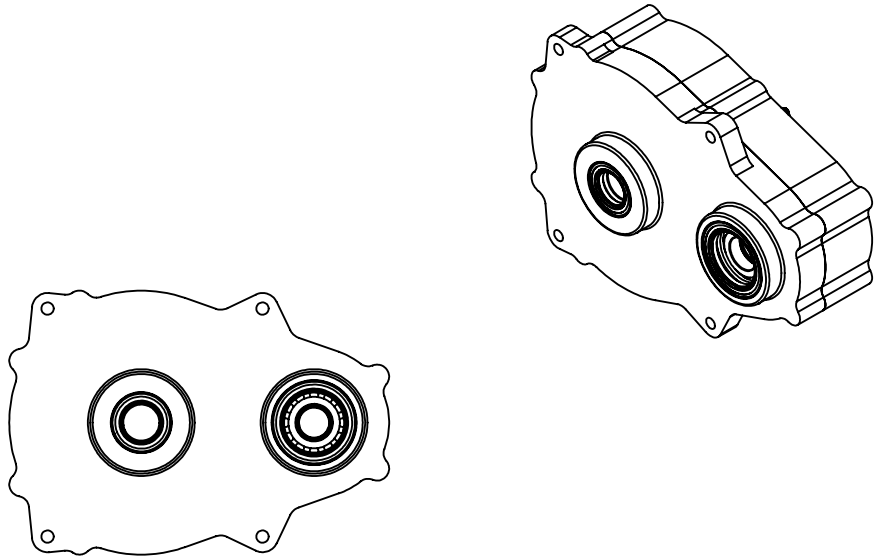

REVISIONS				
REV.	DESCRIPTION	DATE	DFT	APP
A	ORIGINAL RELEASE	1/10/2021	TRR	TRR
B	CHANGED INSTALL TORQUE FROM 82 TO 62 FT LBS ADDED PART NUMBER NOTE 7	1/20/2021	TRR	TRR
3	UPDATED TITLE BLOCK AND CHANGED REF FROM LETTERS TO NUMBERS FOR REABE DESIGN DRAWING STANDARDS	02/05/2025	TRR	TRR

NOTE:

- FOR INSTALLATION SEE B-LOC B400 DOCUMENT
- TORQUE TO **62 FT LBS** FOR INSTALLATION, SEE TRANTORQUE OE DOCUMENT FOR ADITONAL INFOMATION BUT ONLY TORQUE TO 62 FT LBS
- ALL HARDWARE TORQUED PER FAA AC43.13-1B, UNLESS OTHERWISE SPECIFIED
- SEE PART DRAWING FOR MATERIAL DATA
- SEAL UNDER SCREWHEADS AND HOUSING SPLIT LINE WITH RTV SILICONE
- GREASE GEARS AND PACK BERINGS WITH GREASE PRIOR TO ASSEMBLY
- APPLY PART NUMBER PER RD PS-202 CLASS 6 OR 8

REABE DESIGN LLC		UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES PER ASME Y14.5 TOLERANCES: FRACTIONAL ± 1/16 ANGULARS: ± 1/2° TWO PLACE DECIMAL ±.015 THREE PLACE DECIMAL ±.005		TITLE: SPLINE GEARBOX	
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.		MATERIAL		DRAWN	TRR
		SPEC		CHECKED	TRR
				NAME	DATE
				SIZE	DATE
				DWG. NO.	REV
				8-7-2-005	3
				SCALE: 1:4	WEIGHT: 8.526
				SHEET 1 OF 2	

INSTALLATION

(Refer to Figure 1)

B-LOC® Keyless Bushings are supplied lightly oiled and ready for installation. The frictional torque capacity of these devices is based on a coefficient of friction of 0.12 for lightly oiled screw, taper, shaft and bore contact areas.

Therefore, it is important **not** to use Molybdenum Disulfide (e.g., Molykote, Never-Seeze or similar lubricants) in any Keyless Bushing installation.

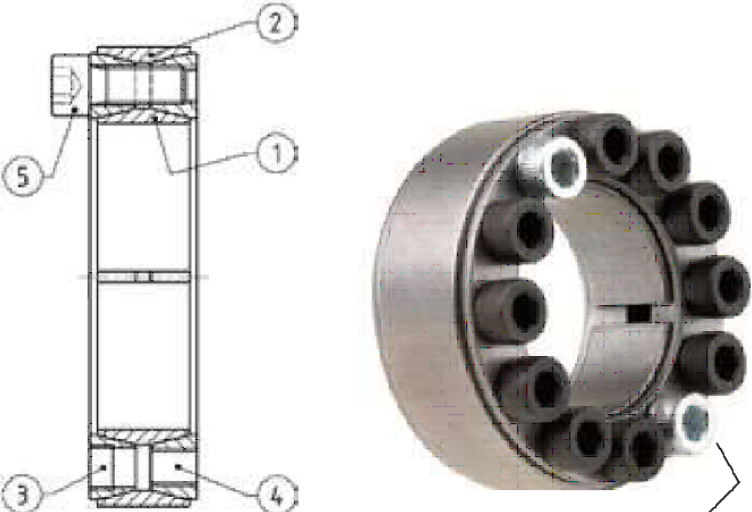


Figure 1

Cadmium plated screws

1. Make sure that locking screw, taper, shaft and bore contact areas are clean and lightly oiled with a light machine oil.
2. Insert Keyless Bushing into hub counterbore prior to shaft installation.
3. After confirming correct hub position, hand-tighten three (3) or four (4) equally spaced locking screws until initial contact with shaft and hub bore is established.
4. Use torque wrench and set it approximately 5% higher than specified tightening torque (M_A). Tighten locking screws in either a clockwise or counterclockwise sequence (it is not necessary to tighten in a diametrically opposite pattern), using only 1/4 (i.e., 90°) turns for several passes until 1/4 turns can no longer be achieved.
5. Continue to apply overtorque for 1 to 2 more passes. This is required to compensate for a system-related relaxation of locking screws since tightening of a given screw will always relax adjacent screws. Without overtorquing, an infinite number of passes would be needed to reach specified tightening torque.
6. Reset torque wrench to specified torque (M_A) and check all locking screws. No screw should turn at this point, otherwise repeat Steps 5 and 6.
NOTE: 1. It is not necessary to re-check tightening torque after equipment has been in operation.
2. In applications subject to extreme corrosion, the slits in all collars can be sealed with a suitable caulking compound or equivalent.

COPY OF INSTALLATION B-LOC B400 DOCUMENT

REMOVAL
(Refer to Figure 2)

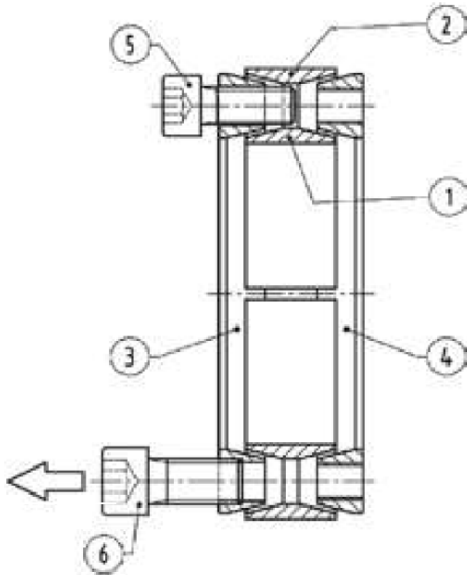



Figure 2

Prior to initiating the following removal procedure, check to ensure that no torque or thrust loads are acting on the Keyless Bushing, shaft or any mounted components.

1. Loosen locking screws in several stages by using approx. 1/4 turns, following either a clockwise or counterclockwise sequence.
NOTE: B-LOC® Series B400 Keyless Bushings feature self-releasing tapers, meaning collars should release during Step 1. However, if for some reason the thrust collars jam, a light tap on three (3) equally spaced heads of loosened locking screws will positively release the connection.
2. Hub and Keyless Bushing are normally removed together. Removal of Keyless Bushing only from deep counterbores is accomplished by inserting pull-off screws (not provided) into threads located under plated locking screws. These threads are NOT to be used for high pulling forces, as thrust collar is only partially threaded.

LOCKING SCREW SIZES AND SPECIFIED TIGHTENING TORQUE M_A B400 KEYLESS BUSHINGS						
Metric Series	Inch Series	Tightening Torque M_A (ft lb)	Screw Size	Hex Key Size (mm)	Pull-off Thread dB	
20 x 47 to 40 x 65	3/4 to 1-1/2	11	M6	5	M8	

COPY OF INSTALLATION B-LOC B400 DOCUMENT

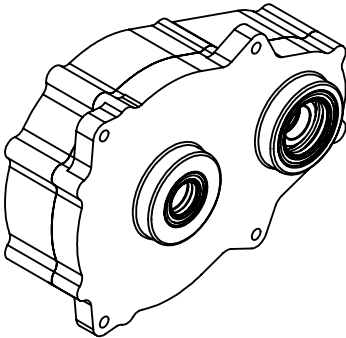

To ensure your Trantorque OE unit performs as specified, be sure to follow these instructions precisely.

CAUTION: TO PREVENT PREMATURE FAILURE OF THE TRANTORQUE UNIT, SHAFT AND/OR MOUNTED COMPONENT:

- Install the product as received. Do not apply lubricants. If supplied lubricated, do not alter. The shaft and mounted component bore must be bare metal (lubricant free).
- Do not use impact of any kind to move the Trantorque OE assembly along the shaft.
- Torque wrench required.

1. The shaft diameter must be within ± 0.003 " (0.08mm) of the Trantorque bore, "d" and the mounted component bore must be within ± 0.003 " (0.08mm) of the Trantorque outside diameter, "D" (Fig. 1). See www.fennerdrives.com for "d" and "D" values.
2. Additionally, both the shaft and mounted component bore must:
 - a. have a surface finish of 32-125 micro-inch (0.8-3.2 micro-meter) RMS. Note: If the surface finish is outside of the specified range, it can be roughened using longitudinal abrasion with a bastard file, emery paper or similar to bring surface finish to within specified range.
 - b. be completely free of paint, grease, oil and debris of any kind. Return the surfaces to bare metal and clean using a non-petroleum based solvent (isopropyl alcohol).
3. Insert the Trantorque OE unit into the mounted component (Fig. 2a). To achieve peak performance it is best practice to completely cover the hub gripping area defined by the scribe line (Fig. 2b).

Recommended position for:

- **Short Hubs** (where the length of the mounted component is equal to the hub gripping area or less)
It is important that the mounted component be positioned in the hub gripping area.
NOTE: The scribe line can be used to ensure the mounted component is positioned perpendicular to the axis.
 - **Long Hubs** (where the length of the mounted component exceeds the hub gripping area)
It is recommended that the mounted component:
 - First, covers the hub gripping area;
 - Second, extends beyond the scribe line;
 - Third, any remaining length extends beyond the tail of the Trantorque OE.
4. Place the mounted component/Trantorque OE assembly onto the shaft. Position it to the desired location making sure the shaft fully engages the Trantorque OE's shaft gripping area (Fig. 3a) defined by the stepped bore.

Warning: THE SHAFT MUST FULLY ENGAGE THE SHAFT GRIPPING AREA OF THE TRANTORQUE OE (Fig. 3).

5. Firmly hand tighten the nut (clockwise). Then, using a torque wrench, tighten the nut to the specified installation torque, M_A (Table 1).





Note: At full installation torque, the assembly will travel approximately 0.075" (0.19mm) axially along the shaft as shown in Fig. 4. If axial position is critical to your application, it may be necessary to loosen the nut and reposition the assembly.

Warning: OVER-TIGHTENING THE NUT COULD RESULT IN DAMAGE TO THE TRANTORQUE OE UNIT AND/OR THE MOUNTED COMPONENT.

Installation Torque			
Inch Shaft Size	M_A (ft lb)	Metric Shaft Size	M_A (Nm)
1 1/16 to 3/4	82	17 to 19	110

COPY OF INSTALLATION TRANTORQUE OE DOCUMENT

ONLY TORQUE TO 62 FT LBS

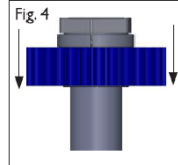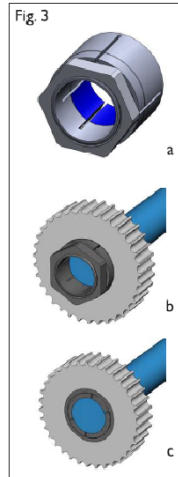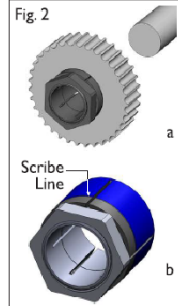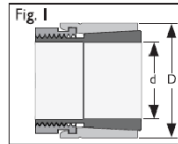

REABE DESIGN LLC

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF REABE DESIGN LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF REABE DESIGN LLC IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
PER ASME Y14.5
TOLERANCES:
FRACTIONAL $\pm 1/16$
ANGULARS: $\pm 1/2^\circ$
TWO PLACE DECIMAL ± 0.015
THREE PLACE DECIMAL ± 0.005

MATERIAL

SPEC

TITLE:

SPLINE GEARBOX

	NAME	DATE
DRAWN	TRR	12/16/2020
CHECKED	TRR	12/16/2020

SIZE	DWG. NO.	REV
B	8-7-2-005	3

SCALE: 1:4 WEIGHT: 8.526 SHEET 2 OF 2

DO NOT SCALE DRAWING

WEIGHT & BALANCE ANALYSIS				Document Number WEIGHT-8	REVISION LEVEL Rev 6
ORIGINATOR JRR		ISSUE DATE 04 May 2018		APPROVED BY JRR	
REVISION HISTORY	REVISION DATE	REVISED BY	APPROVED BY	DESCRIPTION OF REVISION	
A		JRR	TRR	DOCUMENT CREATED	
B	1/30/19	JRR	JRR	CHANGE CONTROL BOX TO CONTROLLER	
C	10/11/19	TRR	JRR	ADD HOPPER VALVE	
D	11/27/19	JRR	JRR	ADD 550 THRUSH	
E	1/8/21	JRR	JRR	ADD 7 ½ INCH GATE	
6	1/31/25	TRR	TRR	UPDATE COMPANY INFO	

WEIGHT & BALANCE ANALYSIS

Weight and balance computation is required after installation. Follow the guidelines as established in AC 43.13-1B, Chapter 10, Section 2. Make appropriate entries in the equipment list indicating items added, removed, or relocated along with the date accomplished. Include your name and certificate number in the aircraft records. The table below identifies the weight of the items included in this system.

	5 INCH GATE	7 ½ INCH GATE
Items Added	Weight Lbs.	Weight Lbs.
Power Gate Assembly	36.6	52.3
Controller	1.1	1.1
Power Converter	2.5	2.5
Wire Harness & Hopper Valve	2.9	2.9
Push Pull Tube:		
AT402,502,504	3.1	3.1
AT602	2.5	2.5
AT802	2.8	2.8
510, 550 Thrush	2.9	2.9
710 Thrush	3.1	3.1
System Total	45.9 (approximate)	61.6 (approximate)

Items Removed	Weight Lbs.	Weight Lbs.
Transland Bracketry (includes Gate Rods)	7.9	20.5
Push Pull Tube	6.1	6.1
System Total	14.0 (approximate)	26.6 (approximate)
Net Weight Change	+ 31.9	+35

ELECTRICAL LOAD ANALYSIS				Document Number	REVISION LEVEL
ORIGINATOR				ELECTRICAL-8	Rev 3
JRR				ISSUE DATE	APPROVED BY
				04 May 2018	JRR
REVISION HISTORY	REVISION DATE	REVISED BY	APPROVED BY	DESCRIPTION OF REVISION	
A		JRR	TRR	DOCUMENT CREATED	
B	12/4/19	JRR	TRR	Re-write	
3	1/31/25	TRR	TRR	COMPANY NAME UPDATE	

ELECTRICAL LOAD ANALYSIS

An electrical load analysis should be completed on each aircraft prior to installation in accordance with AC 43.13-1B, Chapter 11. Use the following values for computation.

24VDC SMART GATE

Average Continuous Load 1 Amp
Average Momentary Load 5 Amps
Maximum Momentary Load 10 Amps

TYPICAL AIRCRAFT AS MANUFACTURED:

250 Amp Starter/Generator
150 Amp Main Buss on AT-402, 502, 504,602
120 Amp Main Buss on AT-802, 510 and 710 Thrush
100 Amp Air Conditioner Buss on 510 and 710 Thrush

IN-FLIGHT POWER CONSUMPTION:

9 Amp Generator Control Unit (field current)	13.4 Amp Flaps
1.1 Amp Instruments	4 Amp Smoker
18 Amp Landing lights	18.3 Amp Rinse Pump
7 Amp Nav/Strobe lights	6.5 Amp Windshield Washer/Wiper
2 Amp Instrument lights	
3.5 Amp Spray pump brake	
22 Amp Air Conditioning Blowers	
1 Amp Smart Gate	10 Amp Smart Gate
63.6 Amp Continuous	52.2 Amp Momentary

INSTRUCTIONS FOR CONTINUED AIRWORTHINESS				Document Number ICA-8	REVISION LEVEL Rev 11
ORIGINATOR JRR		ISSUE DATE 04 May 2018		APPROVED BY JRR	
REVISION HISTORY	REVISION DATE	REVISED BY	APPROVED BY	DESCRIPTION OF REVISION	
A		JRR	TRR	DOCUMENT CREATED	
B	3/3/19	JRR	JRR	CHANGE CONTROL BOX TO CONTROLLER	
C	7/1/19	JRR	JRR	ADD HOPPER VALVE	
D	9/27/19	JRR	JRR	REWRITE	
E	11/11/19	TRR	TRR	UPDATE DRAWINGS	
F	12/4/19	JRR	JRR	UPDATE DRAWINGS	
G	3/14/20	JRR	JRR	REWRITE PAGES 1, 2, 3, 4, 8, 10	
H	1/10/21	JRR	TRR	ADD 7 ½" GATE	
I	1/27/21	TRR	TRR	7 ½ GATE DRILLED SHAFTS AND DRAWING UPDATES UPDATED FORMAT TO AIRWORTHINESS LIMITATIONS	
J	4/12/21	TRR	TRR	ADDED LABEL INFORMATION BY PLACARDS	
11	1/31/25	TRR	TRR	UPDATED COMPMAY INFORMATION, DRAWINGS REMOVED AND REFFERANCE TO DRAWING LIST ADDED IN DATA SECTION	

INSTRUCTIONS FOR CONTINUED AIRWORTHINESS

1) INTRODUCTION

The Reabe Design LLC "Smart Gate":

- A. Provides power assistance to the manual agricultural gate lever.
- B. Provides toggle switch control of the Gate, thus the pilot does not need to move the large Gate Lever.
- C. Adjusts Gate opening to correct for ground speed changes.
- D. Accepts agricultural GPS data commands to change Gate opening.
- E. Provides payload weight onboard in real time.
- F. Can revert back to original manual operation (pre-modified) with forward movement of the Gate lever.

Modification of an aircraft obligates the aircraft operator to include the maintenance information provided by this document in the Operator's Maintenance Manual and the Operator's aircraft scheduled maintenance program.

Proprietary Drawings included in the Instructions for Continued Airworthiness may be shared with the maintenance provider for the purpose of maintaining this aircraft.

2) DESCRIPTION

The Transland manual hopper gate, which is installed on most agricultural aircraft, requires physical exertion to operate. The Reabe Smart Gate is a modification of the Transland gate to incorporate an electric power assist to the pilot. The Smart Gate also takes ground speed information from the agricultural GPS and adjusts the opening to correct the application rate for ground speed changes (constant rate application). The Smart Gate can also accept varying application rate commands from the agricultural GPS and adjust the opening to apply varying amounts of product on different areas of the same field (variable rate application).

The Reabe Smart Gate consists of: an electric Power assist Unit, a 24 volt to 12 volt Converter, electronic Controller, warning lights, Dry Gate/Liquid Gate selector switch, Cleanout button, Gate Open/Gate Close actuating switch, proximity switch, hopper valve, cabling and bracketry.

3) CONTROL

For the Reabe Smart Gate to operate properly, the manual Gate must be adjusted and working properly. Power is provided through a 2 amp "Gate Control" and 20 amp "Gate Power" breaker. If master power is off or either breaker is off, the Gate will be controlled manually by the Gate Lever.

Dry mode is selected by the pilot using the "Dry/Liquid" Gate switch. In Dry Mode, the pilot enters into the Controller the pounds of payload loaded into the aircraft prior to flight. If "Variable" rate application is selected on the Controller, the Controller accepts application rate commands from the agricultural GPS and signals the Power Unit to adjust the Gate opening size accordingly. If "Constant" rate is selected on the Controller, the Controller modifies the pilot-selected Gate opening to correct for changes in ground speed as provided by the GPS. If "Basic" is selected on the Controller, no GPS Data is used. The Controller does not modify the pilot-selected opening on the Controller. At flying speeds, the pilot commands the Gate to open and close by use of the "Gate Open/Gate Close" switch. At slower than flying speed, the "Gate Open/Gate Close" switch is disabled to prevent accidental opening on the ground. Whether flying or not, the "Cleanout" button will command a full open Gate when pressed and close, to the position selected by the "Gate Open/Gate Close" switch, when released. The Gate Lever must be in "Stow" position for the "Cleanout" button to function.

In liquid mode as selected by the "Dry Gate/Liquid Gate" switch, the "Gate Open/Gate Close" switch is disabled and no commands are accepted from the GPS. Also the "Cleanout" button will command a full open Gate when pressed and close when released. The Gate Lever must be in stow position for the "Cleanout" button to function.

In all normal operations, the original Gate Lever is disconnected and stowed in the full aft "stow" position. The Manual Disconnect is a spring-loaded brass pin located on the Power Unit input shaft. To disconnect, pull the pin against spring and move Gate Lever to the stow position. At any time, the pilot can move the Gate Lever forward from the stow position and the Gate Lever will reconnect itself and become the primary control overriding all GPS and Controller commands, just like a car with auto park. The manual control overrides electronic control. While being operated manually the Power Unit will provide power assist to the pilot.

Emergency jettison of the payload is unchanged. The pilot moves the same Gate Lever forward as he had done for years. The Gate can also be closed after jettison of whatever amount the pilot wished to jettison.

Warning light "Gate Rock" illuminates if an object obstructed the Gate and may be cleared with the "Cleanout" button. Warning light "Gate Fail" illuminates if the Controller or Power Unit malfunctions. The Gate can be controlled with the Gate Lever by moving the lever forward to re-engage. The Power Unit may or may not provide power assist, depending on the nature of the failure, but the Power Unit will not impede the pilot's movement of the lever.

Auto Close will reclose the Gate if the Gate opens for whatever reason, and was not commanded to open.

Simultaneously pressing the "Alt" and left knob operates the airspeed switch to allow testing of flight features while on the ground. To exit this test, cycle power.

See Flight Manual Supplement for additional information.

4) SERVICING

None

5) MAINTENANCE

----- CAUTION-----

Do not allow body parts (fingers) to enter the Gate opening or other pinch points when power is on. We recommend blocking the Gate open with wood anytime body parts will be entering a pinch point.

Wash external parts after dispensing fertilizer.

It is the owner/operator's responsibility to ensure that the maintenance performed on the system does not adversely affect its intended function. External parts may be pressure washed except electrical connections

Purge bearings and add 2 pumps in gearboxes with Mobil grease XHP221 or equivalent after washing

AT ANNUAL INSPECTION:

- A. Re-grease electrical connectors on Power Unit with dielectric grease, inspect for corrosion on Power Unit
- B. With input and output rods disconnected from input and output belcranks, rotate input belcrank through range of motion feeling for roughness and play in excess of 1° of rotation. Contact Reabe Design if detected.
- C. If aircraft is not equipped with mechanical stow stop, replace breakaway strap.
- D. Inspect all bolts subject to rotation for wear. If wear causing a reduction of diameter is found, replace bolt.
- E. Inspect rod ends and bushings for wear. Radial play exceeding .010 inch is reason for replacement.
- F. Inspect Gate seal for wear, tear or cuts and replace if necessary per Airframe manual.
- G. Inspect placard by Main Quantity Display "when Dry Gate is selected: the upper line displays inches of Gate opening, the lower line displays pounds in hopper".

Inspect labels as follows: system 20 amp breaker "Gate Power", system 2 amp breaker "Gate Control", Fault lights "Gate Fault" and "Gate Rock", modes switch "Dry Gate" and "Liquid Gate", open close switch "Gate Open" and "Gate Close".

All labels and placards identified to be installed, are customer supplied and must be in bold white on black 1/8" font indelible material and permanently marked.

H. Check rigging.

1. Gate Door adjustment:

- a. Grease Gate seal and adjust Gate fore and aft, front hinge in and out, rear rods in and out to obtain a centered, level and soft over-center door closing
- b. Close Gate and fill hopper with water
- c. Adjust Gate hinges and Gate Rods so Gate is square and not leaking
- d. Empty hopper and open Gate to ¼ inch
- e. Use ¼" bolt to verify Gate has a uniform opening. Adjust Gate Rods as needed. NOTE: hinge adjustment may be needed

- f. Close Gate and fill hopper with water
- g. Adjust Gate Rods equally or hinges equally to stop leaks, but no tighter
- h. Empty hopper and verify uniform ¼" Gate opening and Gate can be operated manually.

NOTE: this is your liquid Gate adjustment

- i. Loosen the hinge eyebolts approximately 6 turns on the 5" Gate or 4 turns on the 7 ½" Gate to obtain a dry Gate adjustment. When hauling liquid, Gate door must be adjusted per Transland or airframe recommendations to close square and just tight enough to be watertight. When hauling dry material, Gate door must be adjusted to a dry fit to allow a soft operating Gate with power off. As a shortcut to the dry fit adjustment, loosen the front Gate door adjustments approximately 6 turns on the 5" Gate or 4 turns on the 7 1/2 " Gate 4) hinge eyebolts. Then test with power off. Note: your aircraft may need a different adjustment, but the pilot must always be able to operate the Gate manually without power.

2. Push Pull Tube length:

- a. With Manual Disconnect disengaged and Gate Lever in Stow position, adjust length so tube is tangent to Input Lever (See Drawing 8-0-7-000)

3. Output Rod Length 5" Gate only (see Drawing 8-0-7-000)

4. Proximity Switch:

- a. Adjust in or out using mounting nuts so the internal light illuminates in Stow position with power on

5. Gate Opening Stop:

- a. With Manual Disconnect engaged, move Gate to full open Stop of Gate box.
- b. 5" Gate: Adjust Gate open stops to provide a misalignment of greater than 20° between the Push Pull Tube and Input Lever (See Drawing 8-0-7-000)

7 ½" Gate: Verify Push Pull Tube to Input arm is greater than 20°, if less than 20°, remove Output Gearbox Cover, loosen Output Gear Keyless Bushing and rotate gear to achieve 20°, tighten keyless bushing to 62 ft/lbs, reinstall Output Gearbox cover (see Drawing 8-0-7-000)

NOTE: Protractor angle measurement can be made between the flat back of the Input Lever and an extended line (string or straight edge) connecting the front and rear Push Pull Tube attach bolts.

6) TROUBLESHOOTING

Malfunction: Gate not sealing completely
Indication: Leakage from Gate Door
Action: Inspect Gate seal/check rigging

Malfunction: Electrical failure
Indication: Gate working manually but not electrically
Action: Check breakers, check electrical connections, check voltage to Power Assist unit

Malfunction: GPS Data fail

Indication: No ground speed correction or GPS commands

Action: Check GPS connection, check GPS operation, check GPS selection on Controller, check Controller function selected

If problem persists, conduct Sec. 9) test. Then call Troy @ 321-Air-Tractor

- 7) REMOVAL REPLACEMENT: (Weight and balance changes to be recorded in Flight Manual using Reabe Design Weight and Balance Analysis Drawing # Weight -8).
1. Power Converter PN 8-1-2-000 removal
 - a. Pull "Gate Power" breaker
 - b. Disconnect power cables from Power Converter
 - c. Remove mounting screws and nuts
 2. Power Converter Replacement (see Drawing 8-0-4-000)
 - a. Mount Power Converter using removed screws and nuts
 - b. Connect power cables observing correct polarity and voltage (see Drawing 8-0-1-000)
 - c. Energize "Gate Power" breaker
 - d. Test per 9) Test
 3. Controller PN 8-1-1-000 Removal
 - a. Pull "Gate Control" breaker
 - b. Disconnect Control Harness from Controller
 - c. Disconnect the Main Display Cable
 - d. Disconnect the Remote Display Cable
 - e. Disconnect pitot and static and hopper vent
 - f. Disconnect Proximity Cable
 - g. Remove mounting screws
 4. Controller Replacement (see Drawing 8-0-3-000)
 - a. Mount Controller using removed screws and nuts
 - b. Connect Control Harness to Controller
 - c. Connect Proximity Cable
 - d. Connect the Remote Display Cable
 - e. Connect the Main Display Cable
 - f. Connect pitot, static and hopper vent lines (see Drawing 8-0-6-000)
 - g. Energize "Gate Control" breaker
 - h. Programming Controller (adjust Gate hinge eyebolts to Dry Gate adjustment)
 - 1) With Master on, power on "Gate Power", then "Gate Controller" breakers. Verify both warning lights lit and go out. Enter Setup Menu and verify appropriate Gate size is selected (5 or 7.5)
 - 2) Cycle Gate Lever, noting power assist and yellow light in proximity switch does not light

- 3) Close Gate manually, disengage Manual Disconnect and stow Gate Lever, using Gate stop or breakaway strap. Verify Proximity Switch light is on. If needed, adjust proximity switch using its mounting nuts to move switch closer to Gate Lever (see Drawing 8-0-5-000)
 - 4) Switch "Dry Gate/Liquid Gate" to Dry
 - 5) Push "MENU" button
 - 6) Rotate right inner knob to "SETUP", press "ENT"
 - 7) Rotate right inner knob to "GPS", press "ENT"
 - 8) Rotate right outer knob to select GPS "Model", press "Ent"
 - 9) Display shows "Model ACCEPT", press "ENT"
 - 10) Rotate right inner knob to "SET HOME", press "ENT"
 - 11) Display shows "CLOSED? SET HOME", verify Gate is closed over-center, press "ENT"
 - 12) Display shows "CLOSED? ACCEPT", press "ENT"
 - 13) Rotate right inner knob to "FIND STOP", press "ENT"
 - 14) Display shows "CLEAR? FIND STOP", verify Gate is closed over-center and clear, press "ENT"
 - 15) Display shows "CLOSED? MOVE OK", press "ENT"
 - 16) Display shows "MOVING MOVE OK", Gate will cycle 3 times. (NOTE: If Gate does not cycle 3 times press "CLR". Command can be cancelled by power off).
- If "GATE ROCK" or "FAULT" lights, cycle power and return to Setup Menu/SET HOME and begin again.
- 17) Display shows "FIND ACCEPT STOP", press "ENT"
 - 18) Rotate right outer knob to "CAL GATE", press "ENT"
 - 19) Display shows "START? CAL GATE", press "ENT"
 - 20) Display shows "Set 0.000" on the upper line. NOTE: This is the Gate opening in inches that the Controller is asking for. The lower line displays "Per 030.0" which is the % of opening. Rotating the left knob moves the Gate to obtain the opening the Controller is asking for)
 - 21) Rotate left knob to move the Gate to a "Just Closed" position (NOTE: closed enough to pinch paper but no tighter), press "ENT"
 - 22) Display shows "Set 0.000 ACCEPT", press "ENT"
 - 23) Display shows "Set 0.125", use left knob to adjust Gate to .125 inch open, press "ENT"

- 24) Display shows "Set 0.125 ACCEPT", press "ENT"
- 25) Display shows "Set 0.250", use left knob to adjust Gate to .25 inch open, press "ENT"
- 26) Display shows "Set 0.250 ACCEPT", press "ENT"
- 27) Display shows "Set 0.500", use left knob to adjust Gate to 0.5 inch open, press "ENT"
- 28) Display shows "Set 0.500 ACCEPT", press "ENT"

NOTE: For 5" Gate: This 2-step process will be repeated for 0.750 inch, 1.000 inch, 1.500 inch, 2.000 inch, and 2.500 inch

NOTE: For 7 ½" Gate: This 2-step process will be repeated for 1.000 inch, 1.500 inch, 2.000 inch, 3.000 inch and 4.000 inch

29) After the 2.500-inch setting is accepted on the 5" Gate or 4.000-inch setting on the 7 ½" Gate, the Gate will move to 100% open. Measure the actual Gate opening with calipers

30) Rotate right inner and outer knobs to adjust the upper display to show the measured opening of step 29, press "ENT"

31) Display shows "Set X.xxx ACCEPT", press "ENT"

32) Display shows "ACCEPT CAL GATE", press "ENT"

33. Rotate right outer knob to "UNITS", press "ENT"

34. Rotate left inner knob to select "ENGLISH" or "METRIC", press "ENT"

35. Display shows "ENGLISH" or "METRIC" "ACCEPT", press "ENT"

36. Rotate right inner knob to "HOPSPEED", press "ENT"

37. Rotate right outer knob to "ZERO", press "ENT"

38. Display shows "ZERO ACCEPT", press "ENT"

39. Rotate right inner knob to "AIRSPEED", press "ENT"

40. Rotate right outer knob to "ZERO", press "ENT"

41. Display shows "ZERO ACCEPT", press "ENT"

42. Press "CLR" to exit Setup Menu

43. Press "CLR" to exit Main Menu

44. Master off

i. Test per 9) TEST

5. Control Harness PN 8-1-4-000 Removal

a. Pull "Gate Control" breaker

- b. Disconnect Control Harness from the Controller, from the Power Unit, from the Gate Control breaker, from ground and from GPS
 - c. Unmount "Warning Lights", "Dry Gate/Liquid Gate" switch, "Gate Open/Gate Close" switch, "Cleanout" button
 - d. Unstring Control Harness
6. Control Harness Replacement (see Drawings 8-0-5-000 and 8-0-1-000)
- a. Route Control Harness and connect to: Power Unit, Controller, "Gate Control" breaker, ground and GPS
 - b. Route and remount: "Warning Lights", "Dry Gate/Liquid Gate" switch, "Gate Open/Gate Close" switch and "Cleanout" button. Note: make sure switches are installed "Gate Open" forward and "Liquid Gate" up
 - c. Tie wrap cables and line such that no interference with moving parts
 - d. Energize "Gate Control" breaker
 - e. Test per 9) TEST
- 7.1 Power Unit PN 6-2-1-001 Removal for 5" Gate
- a. Pull both "Gate Power" and "Gate Control" breakers
 - b. Disconnect Power Harness and Control Harness from Power Unit
 - c. Disconnect Push Pull Tube
 - d. Disconnect Output Rod
 - e. Unbolt Input Shaft from Power Unit and slide outboard
 - f. Unbolt Output Shaft from Power Unit
 - g. Unbolt Power Unit from frame and remove by sliding left
- 7.2 Power Unit PN 6-2-1-001 Removal for 7 ½" Gate
- a. Pull both "Gate Power" and "Gate Control" breakers
 - b. Disconnect Power Harness and Control Harness from Power Unit
 - c. Disconnect Push Pull Tube
 - d. Remove Manual Disconnect clamp bolt, loosen dual clamp and single clamp
 - e. Slide Manual Disconnect assembly right
 - f. Disengage 1" snap ring from input shaft and slide right against Manual Disconnect assembly
 - g. Remove Input Shaft End Plate
 - h. Disconnect Input Shaft from Input Gearbox by sliding shaft left
 - i. Remove Output Gearbox Cover
 - j. Disconnect Output Shaft from Power Unit by sliding shaft right
- NOTE: Removing shafts from damaged splines may require use of ¼" tap in center of shaft to be used as a jack with ¼" bolt. Do not use set screw as jack bolt, reinstall set screw with 222 Loctite low strength thread locker or similar.
- k. Remove 4) Input Gearbox mounting bolts

- l. Remove 4) Power Unit mounting bolts
- m. Slide Power Unit and Input Gearbox out of frame rearward
- n. Disconnect Power Unit by sliding midshaft off Power Unit

8.1 Power Unit Replacement for 5" Gate (see Drawing 8-2-0-TAB)

- a. Connect Power Harness and Control Harness using dielectric grease
- b. Energize Gate Power and Gate Control breakers
- c. Select Dry Gate and turn power on
- d. Place "Gate Open/Gate Close" switch in "Close" position and cycle "Cleanout" button
- e. Turn power off
- f. Rotate input shaft to point index spline at mounting hole closest to motor
- g. Power on, press "MENU", then rotate right inner knob to "SETUP", then press "ENT"
- h. Rotate right inner knob to "SET HOME", then press "ENT". Display shows "CLOSED?", then press "ENT". If display shows "ACCEPT" then shaft is in a good location. If display doesn't show "ACCEPT" then rotate input shaft 360° in opposite direction of previous movement. Press "CLR" and return to step h
- i. Power off
- j. Slide Power Unit right into position and engage output shaft on index spline and secure. DO NOT rotate shaft more than 180° and bolt in place
- k. Engage input shaft on index spline and secure
- l. Attach Push Pull Tube
- m. Attach Output Rod
- n. Re-program Controller per 7) 4. h. above

8.2 Power Unit Replacement for 7 ½" Gate (See drawing 8-7-0-TAB)

- a. Align the index spine of the Mid shaft with Power Unit and slide together
- b. Slide Power Unit and Input Gearbox forward into frame
- c. Install 4) Power Unit mounting bolts and safety wire
- d. Install 4) Input Gearbox mounting bolts
- e. Connect Power Harness and Control Harness using dielectric grease
- f. Energize Gate Power and Gate Control breakers
- g. Select Dry Gate and turn power on
- h. Place "Gate Open/Gate Close" switch in "Close" position and cycle "Cleanout" button
- i. Turn power off
- j. Align index spline of the Input Shaft and slide onto Input Gearbox
- k. Re-engage 1" snap ring in Input Shaft
- l. Reinstall Input Shaft End Plate
- m. Slide Manual Disconnect assembly back into position and reinstall clamp bolt

- n. Tighten dual clamp and single clamp to 80 inch/lbs
 - o. Reconnect Push Pull Tube and engage Manual Disconnect
 - p. Set Gate Lever 5 turns forward of Stow position
 - q. Power on, press "MENU", then rotate right inner knob to "SETUP", then press "ENT"
 - r. Rotate right inner knob to "SET HOME", then press "ENT". Display shows "CLOSED", then press "ENT". If display shows "ACCEPT" then shaft is in good location. If display doesn't show "ACCEPT", then loosen Manual Disconnect Assembly from shaft, rotate input shaft 360° in opposite direction of previous movement. Retighten Manual Disconnect Assembly to shaft. Press "CLR" and return to step r.
 - s. Power off
 - t. Loosen Output Gear Keyless Bushing
 - u. With Gate closed, align Output Shaft with index spline and slide onto Power Unit until Output Shaft bearing bottoms in Output Gearbox
 - v. Install Keyless Bushing dry and tighten to 62 ft/lbs ensuring Output Gear alignment of .050" or less
 - w. Install Output Gearbox Cover
 - x. Reprogram Controller per 7) 4.h above
9. Hopper Valve PN 8-1-7-100
- a. Disconnect hopper vent line and Controller vent line
 - b. Disconnect hopper valve cable
 - c. Unmount valve
10. Hopper Valve Replacement (see Drawing 8-0-6-001)
- a. Mount valve using removed hardware
 - b. Connect hopper valve cable
 - c. Connect Controller vent line to straight fitting and hopper vent line to 90° fitting
 - d. Test per 9) Test
11. Input Gearbox PN 8-7-2-004 Removal of 7 ½" Gate Only. Follow 7.2 Power Unit Removal
12. Input Gearbox Replacement. Follow 8.2 Power Unit Replacement
13. Output Gearbox PN 8-7-2-005 Removal 7 ½" Gate Only
- a. Remove Output Gearbox Cover
 - b. Loosen Keyless Bushing on small gear
 - c. Slide gear out
 - d. Loosen B-Loc of large gear (see drawing 8-7-2-005)
 - e. Slide gear out
 - f. Remove gearbox mounting bolts and remove gearbox
14. Output Gearbox Replacement (see drawing 8-7-2-005), 7 ½" Gate Only
- a. Attach gearbox to frame with 4) mounting bolts
 - b. Ensure seals and shaft bearings are in place

- c. Install large gear onto shaft but not bottomed to gearbox and install B-LOC dry and torque B-LOC per drawing 8-7-2-005
 - d. Install small gear and torque Keyless Bushing to 62 ft/lbs
 - e. Check rigging per this section H. 5
 - f. Install gearbox cover
- 8) DIAGRAM (see Power Gate Installation Drawings 8-0-0-TAB & 8-0-1-000 & 8-0-5-000)
- 9) TEST
1. Introduction: The purpose of this test is to provide a method for demonstrating the proper installation and operation of the Reabe Power Gate
2. Gate Adjustment Verification
- a. With power off, disconnect the 4) Gate Rods and move Gate Lever through full range of motion and verify no binding, excess play or stiffness
 - b. Reconnect the 4) Gate Rods and check fit of Gate in closed position. For liquid payload the Gate must be watertight but loose enough to be opened and closed manually by the pilot. For dry payload the Gate must be loose enough that the pilot can easily open and close the Gate. Usually loosening the hinge eyebolts approximately 6 turns on 5" Gate or 4 turns on 7 ½" Gate is adequate to adjust from Liquid to Dry payload.
- Note: at all times the Gate must be adjusted to allow the pilot to open the Gate (Emergency Dump) manually without power assist
3. Functional Test
- With Power On and Gate adjusted for Liquid Payload:*
- a. Select "Liquid Gate" and move Gate Lever. Verify moderate force is required to open or close the Gate
 - b. Toggle "Gate Open/Gate Close" switch and verify the Gate does not respond
 - c. Press "Cleanout" button and verify the Gate does not respond
- With Gate adjusted for Dry Payload:*
- d. Turn Master on, then "Gate Power" breaker, then "Gate Control" breaker. Verify both warning lights illuminate and extinguish.
 - e. Select "Dry Gate" and move Gate Lever. Verify moderate force is required to open and close Gate. Verify Main Display shows Gate opening
 - f. Press the "Alt" button and left knob button of the Controller in and open and close the Gate Lever. Verify it takes little force to open and close the Gate. Select open and close with the "Gate Open/Gate Close" switch and verify the Gate follows.
 - g. Power off. Disconnect Gate Lever using brass spring pin and place in stow position.
 - h. Turn power on and verify light in Proximity Switch is lit
 - i. Toggle the "Gate Open/Gate Close" switch and verify the Gate does not respond
 - j. Select "Gate Close", cycle "Clean Out" button and verify Gate follows
 - k. Rotate right outer knob to select 4000 "CUR" (current) load on the Controller. Press "ENT". Display shows "ACCEPT". Press "ENT". 4000 shows on "QTY" display.

- l. Hold "Cleanout" button and verify "QTY" counts down but stops counting when "Cleanout" button is released
- m. Select "Gate Open" and press "Cleanout". Rotate left knob to verify Gate opening on "Main Display" and "QTY" rate follows.
- n. Select "Close Gate", then simultaneously press "ALT" and left knob.
- o. Rotate left knob to select "TAR" (target) Gate setting of 1.0.
- p. Select "Gate Open" and verify upper line of Main Display follows to 1.0.
- q. Select "Gate Close", power off.
- r. With power on and "Dry Gate" selected, apply air pressure to pitot tube to cause an airspeed of 80 mph and verify "GND" light goes out.
- s. With power on and "Hopper Port" line disconnected for Controller, and 1 psi air applied to hopper line, cycle "Liquid/Dry" switch and verify air flows through line in "Dry" and no flow in "Liquid".
- t. Turn power off
- u. Reconnect "Hopper Port" line to Controller.

10) PROTECTIVE TREATMENT: Electrical connections on the Power Unit are treated with dielectric grease. The Power Unit case is aluminum and can be touched up if corrosion is found with zinc chromate paint

11) DATA:

| See Reabe Design Document "8DL Drawing List" REV 19 or latter for full list of required documents for the ICA.

12) SPECIAL TOOLS: None

13) N/A

14) TBO: None

15) REVISIONS: To be submitted by STC holder, for FAA approval.

For latest revision Contact:

| Reabe Design LLC
2552 Coreland Ct
DePere, WI 54115
Phone: (321) 247-8722
Email: Sales@ReabeAir.com
Or Visit: www.ReabeAir.com/Support

16) AIRWORTHINESS LIMITATIONS:

Log of Revisions: Section 16 Airworthiness Limitations			
Revision	Description	FAA Approved By	FAA Approval Date
A	Initial Release	N/A	N/A
B	No change	N/A	N/A
C	No change	N/A	N/A
D	No change	N/A	N/A
E	No change	N/A	N/A
F	No change	N/A	N/A
G	No change	FAA accepted via AML STC approval	10/8/2020
H	No change	N/A	N/A
I	Updated format	N/A	N/A
J	No change	N/A	N/A
11	No change	N/A	N/A

There are no new or additional Airworthiness Limitations associated with this equipment and/or installation.

The Airworthiness Limitations section is FAA approved and specifies inspections and other maintenance required under Sections 43.16 and 91.403 of the Federal Aviation Regulations unless an alternative program has been FAA approved.

FAA APPROVED

Signature

Date

Paul Nguyen
Manager, Central Certification Branch
Compliance & Airworthiness Division

FAA APPROVED

Flight Manual Supplement For

Make: _____

Model: _____

Reg. No. _____

Serial No. _____

This supplement must be attached to the FAA Approved Flight Manual dated _____ when the aircraft is modified by the installation of the **Reabe Smart Gate** in accordance with STC NO. SA04484CH.

The information contained in this document supplements or supercedes the basic manual only in those areas listed. For limitations, procedures, performance, and loading information not contained in this supplement, consult the basic Flight Manual.

FAA Approved _____ for

Manager, Flight Test & Human Factors Branch, AIR-710
Federal Aviation Administration

Date _____

REABE DESIGN LLC
2552 CORELAND CT
DePere WI 54115

FLIGHT MANUAL SUPPLEMENT
"SMART GATE"
Doc#: FMS-8, REV 5

MAKE: _____

Model: _____

FLIGHT MANUAL SUPPLEMENT				Document Number	REVISION LEVEL
				FMS-8	Rev 5
ORIGINATOR			ISSUE DATE		APPROVED BY
JRR			04 May 2018		JRR
VISION HISTORY	REVISION DATE	Pages	FAA APPROVED	DESCRIPTION OF REVISION	
A	4 MAY 2018	ALL		INITIAL RELEASE	
B	29 JAN 2019	ALL		CHANGE CONTROL BOX TO CONTROLLER	
C	4 MAR 2020	ALL	Todd Davis	FORMAT CHANGE FOR AC23-8C APPX 5	
D	6 OCT 2020	ALL		UPDATE WITH COMMENTS FROM FAA FOR STC	
5	31 JAN 2025	ALL		ADDED STC NO. TO FIRST PAGE, COMPANY NAME UPDATED	

MAKE: _____

Model: _____

1. GENERAL

The Transland manual hopper gate, which is installed on most agricultural aircraft, requires physical exertion to operate. The Reabe Smart Gate is a modification of the Transland gate to incorporate an electric power assist to the pilot. The Smart Gate can also take ground speed information from the agricultural GPS and adjust the opening to correct the application rate for ground speed changes (constant rate application). The Smart Gate can also accept varying application rate commands from the agricultural GPS and adjust the opening to apply varying amounts of product on different areas of the same field (variable rate application).

Manual Control is still available to the pilot at any time by moving the original Gate Lever forward from its stow position to re-engage and over-ride electronic control.

The Reabe Power Gate consists of:

- a) "Dry Gate/Liquid Gate" mode switch mounted on the lower dash which selects the mode of operation for the Controller
- b) "Gate Open"/"Gate Close" switch mounted by the throttle which provides electric open and close commands to the Controller
- c) "Gate Warning" light mounted on the upper dash that warns the pilot of system failure
- d) "Gate Rock" light mounted on the upper dash that warns the pilot of a Gate obstruction
- e) "Clean-out" button mounted on the lower left area of upper dash for momentary full open commands.
- f) Proximity Switch mounted aft of the Gate Lever to detect its stow position
- g) Controller mounted on the lower dash (or in the radio stack), which receives GPS information, accepts pilot mode selection, pilot data input, airspeed and hopper vent pressure; then sends commands to the Power Unit
- h) Electric Power Assist Unit mounted on the back side of the Gate Box which receives electronic commands from the Controller or manual commands from the original Gate Lever and moves the Gate to the commanded position

More detailed instructions can be found in Reabe Smart Gate Pilot's Guide

For the Reabe Smart Gate to operate properly, the manual Gate must be adjusted and working properly (SECTION 8 GATE ADJUSTMENT). Power is provided through a 2 amp "Gate Control" and 20 amp "Gate Power" breaker. If master power is off or either breaker is off, the Gate will be controlled manually by the Gate Lever.

"Dry Gate" mode is selected by the pilot using the "Dry Gate/Liquid Gate" switch. In Dry Mode, the pilot enters into the Controller the pounds of payload loaded into the aircraft prior to flight. If "Variable" rate application is selected on the Controller, the Controller accepts application rate commands from the agricultural GPS and signals the Power Unit to adjust the Gate opening size accordingly. If "Constant" rate is selected on the Controller, the Controller modifies the pilot-selected Gate opening to correct for changes in ground speed as provided by the GPS. If "Basic" is selected on the Controller, no GPS Data is used. The Controller does not modify the pilot-selected opening on the Controller. At flying speeds, the pilot commands the Gate to open and close by use of the "Gate

MAKE: _____ Model: _____

Open/Gate Close" switch. At slower than flying speed, the "Gate Open/Gate Close" switch is disabled to prevent accidental opening on the ground. Whether flying or not, the "Cleanout" button will command a full open Gate when pressed and close, to the position selected by the "Gate Open/Gate Close" switch, when released. The Gate Lever must be in stow position for the "Cleanout" button to function.

In "Liquid Gate" mode as selected by the "Dry Gate/Liquid Gate" switch, the "Gate Open/Gate Close" switch is disabled and no commands are accepted from the GPS. The "Cleanout" button will command a full open Gate when pressed and close when released. The Gate Lever must be in stow position for the "Cleanout" button to function.

In all normal operations, the original Gate Lever is disconnected and stowed in the full aft position. At any time, the pilot can move the Gate Lever forward from the stow position and the Gate Lever will reconnect itself and become the primary control overriding all GPS and Controller commands. The manual control overrides electronic control. While being operated manually the Power Unit will provide power assist to the pilot.

MANUAL DISCONNECT

The Manual Disconnect is a spring-loaded brass pin located on the input shaft of the Power Unit. During normal (electric) operation, the Gate Lever is disconnected and stowed by pulling the brass pin against the spring and moving the Gate Lever full aft to the stow position. The Gate Lever is held in the stow position by adjusting the under-floor Gate Stop adjuster aft. If aircraft does not have under-floor Gate Stop adjuster, the Breakaway Strap is used.

When Manual Control is desired, push the Stop Release button on the Gate Lever and move the Lever forward to re-engage the Manual Disconnect. If the Breakaway Strap is installed, overcome the strap and move the Gate Lever forward to re-engage the Manual Disconnect. Adjust the Gate Stop Adjuster as needed for manual Gate settings.

Note: Manual Control cannot be disconnected in flight.

MAKE: _____

Model: _____

2. LIMITATIONS: NO CHANGE

3. EMERGENCY/ABNORMAL PROCEDURES

3.1. EMERGENCY PROCEDURES: NO CHANGE

3.2. ABNORMAL PROCEDURES

WARNING LIGHTS

"Gate Rock" light illuminates

A rock or some other obstacle has blocked the gate from closing.

- a) Momentarily push the "Cleanout" button to fully open the gate and allow the obstacle to clear
- b) Release "Cleanout" button and check that gate is clear

"Gate Fault" Light illuminates

The Controller has reported an error or lost communication with the Power unit.

- a) If immediate action is needed take manual control
 - b) If "Gate Fault" light does not clear after 2 seconds pull "Gate Control" Breaker
 - c) Reset "Gate Control" Breaker after 10 seconds to reboot the Controller
 - d) If "Gate Fault" light cannot be cleared the Gate can be controlled with the Gate Lever
 - e) Move the Gate Lever forward to re-engage and take manual control of the gate
- Note: The Power Unit may or may not provide power assist, depending on the nature of the failure, but the Power Unit will not impede the pilot's movement of the lever.
- f) If either "Gate Control" or "Gate Power" breaker trips or "Gate Fault" cannot be cleared, pull both "Gate Control" and "Gate Power" breakers and operate the Gate manually
 - g) The power gate can be used manually

4. NORMAL PROCEDURES

4.1. PREFLIGHT CHECKS AND PROCEDURES

While conducting the preflight checks for the aircraft as describe in the airplane flight manual, simultaneously check the condition of the power gate unit.

- a) Inspect rod ends and pivot points for wear.
- b) Verify proper gate adjustment (section 8 Gate Adjustment)
- c) Turn Master switch "ON" Controller should power up and read zero pressure settings, if needed accept pressure setting.
- d) Set "Gate Open /Gate Close" switch to "Gate Open"
- e) Set "Dry Gate/Liquid Gate" switch to "Dry Gate"
- f) Verify Gate Lever is Stowed
- g) Press Cleanout button
- h) Gate will fully open

MAKE: _____

Model: _____

- i) Release Cleanout button
- j) Gate will close to current opening setting.
- k) Set "Gate Open /Gate Close" switch to "Gate Close"
- l) Gate will close and latch
- m) Check that "Suckback" light is eliminated on Reabe Hopper Gauge
- n) Set "Dry Gate/Liquid Gate" switch to desired mode of operation

To Test Cleanout Function

- a) In Liquid or Dry Mode, push and then release cleanout button

To test Manual operation

- a) Move Gate Lever fully forward and aft to check for manual control of gate.
Note: Manual Disconnect needs to be pulled and the Gate Lever stowed after manual operation.

4.2. SMART GATE OPERATION (LIQUID MODE)

This mode is used for normal liquid spraying operation.

Ground and Flight

- a) Set Mode switch to Liquid Mode

4.3. SMART GATE OPERATION (DRY MODE)

This mode is used for normal dry product distribution operation.

Ground

- a) Set Mode switch to Dry Mode
- b) In Menu -> SEL CHEM, Select Chemical (if using a previously saved chemical)
- c) In Menu -> SWATH, Set Swath width in feet
- d) In Menu -> SPEED, Set target application Speed
- e) Select Desired Application Style (Basic, Constant, Variable)
- f) Enter Current Load on Board (CUR) in pounds using Right knobs
- g) Hit ENT to accept the load
- h) Set Gate Opening by hitting the "Speed" Button and adjust using the left knob, in Basic and Constant rate you are setting the target opening in Inches, In Variable you are adjusting the trim from GPS targeted opening.

Flight The unit automatically switches from ground to flight by sensing air speed.

- i) Open and Close the gate as desired using the O/C switch

5. PERFORMANCE: NO CHANGE

6. WEIGHT & BALANCE AND EQUIPMENT LIST

See weight & balance documents for this aircraft.

MAKE: _____

Model: _____

7. DESCRIPTION OF AIRPLANE AND ITS SYSTEMS: SEE SECTION 1

8. HANDLING, SERVICING AND MAINTENANCE

GATE ADJUSTMENT

When hauling liquid payload, gate door must be adjusted per Transland or airframe recommendations to close square and just tight enough to be watertight. When hauling dry payload, Gate door must be adjusted to a loose fit to allow a soft operating gate with power off. As a shortcut to the loose fit adjustment, loosen the front Gate door adjustments approximately 6 turns on the 4) ¼ x 28 hinge adjusters. Then test with power off. Note: your aircraft may need a different adjustment, but the pilot must always be able to operate the Gate manually without power.

GROUND OPERATION

The "Alt" button and left knob can be used to override the airspeed switch to allow for testing flight features of the system while on the ground. This is done by simultaneously pressing both the "Alt" button and left inner knob.

PROGRAMMING INSTRUCTIONS

The Instructions for Continued Airworthiness include programming of the Controller Setup for: GPS model selection, units of measure, setting Gate Home position, calibrating Gate opening. After this programming is completed by maintenance personnel, the Controller is ready for Manual or Basic operation.

GROUND TEST PLAN				Document Number GROUND TEST- 8	REVISION LEVEL Rev 2
ORIGINATOR JRR,			ISSUE DATE 3 Dec 2019	APPROVED BY JRR	
REVISION HISTORY A	REVISION DATE 12/10/19	REVISED BY TRR	APPROVED BY PJJ	DESCRIPTION OF REVISION ADDED DETAIL TO TEST AND BROKE INTO SECTIONS	
2	1/31/25	TRR	TRR	COMPANY NAME UPDATE	

GROUND TEST PLAN

1.Introduction

The purpose of this Ground Test is to provide a method for demonstrating the proper installation and operations of the Reabe Smart Gate.

NOTE: For the initial certification testing and for initial installation testing, all the test steps must be completed. This procedure is also referenced in the ICA to be used after maintenance is accomplished; for testing to support maintenance activities, the steps with the "*" may be omitted.

2.Gate Adjustment Verification

- a.With master Power off, disconnect the 4) Gate Rods and move the Gate Lever through its full range of motion and verify no binding, stiffness or excess play.

PASS _____ FAIL _____

- b.Reconnect the 4) Gate Rods and check fit of gate seal in closed position: verify with Gate adjusted for Liquid Payload, seal is water tight but loose enough to be opened and closed manually by the pilot.

PASS _____ FAIL _____

- c.Loosen hinge eyebolts approximately 6 turns to obtain a Dry Payload seal adjustment. Verify pilot can easily open and close the Gate

PASS _____ FAIL _____

3.Functional Test

- a. With Master Power on, verify Gate Controller and Reabe Hopper Gauge brightness is controlled by repeatedly pressing the "Dim" button on the Hopper Gauge.

PASS _____ FAIL _____

- b. On Gate Controller; press menu, select Setup, select Lite Test. Verify all buttons and display digits, illuminate.

PASS _____ FAIL _____

- c.De-energize "Gate Power" breaker. Verify "Gate Fault" light illuminates.

PASS _____ FAIL _____

- d.Energize "Gate Power" breaker. Verify "Gate Fault" light extinguished.

PASS _____ FAIL _____

With Gate adjusted for Liquid Payload:

- e. Turn Master Power off, then on. Verify both "Gate Fault" and "Gate Rock" warning lights illuminate and extinguish.

PASS _____ FAIL _____

- f. Select "Liquid Gate" and using the Gate Lever, Verify moderate force is required to open and close the Gate.

PASS _____ FAIL _____

- g. Toggle "Gate Open/Gate Close" switch and verify the Gate does not respond.

PASS _____ FAIL _____

- h. With Gate Lever engaged, (not in the stowed position) press "Cleanout" button and verify the Gate does not respond.

PASS _____ FAIL _____

- i. Turn Master Power Off. Disconnect "Manual Disconnect" using brass spring pin and place "Gate Lever" in stow position.

PASS _____ FAIL _____

- j. Turn Master Power on and select "Gate Close", press "Cleanout" button and verify the Gate responds and returns to the closed position.

PASS _____ FAIL _____

- k. Toggle "Gate Open/Gate Close" switch and verify the Gate does not respond.

PASS _____ FAIL _____

NOTE: Have a 2x2 or similar piece of lumber ready to block the gate.

- l. With "Gate Close" selected, press and hold the "Cleanout" button, place the 2x2 in to block the Gate from closing, release the "Cleanout" button. Verify the "Rock" Light illuminates.

PASS _____ FAIL _____

- m. Press the "Cleanout" button to open the Gate and remove the 2x2, then release the "Cleanout" button. Verify the Gate closed. Verify "Gate Rock" light is extinguished.

PASS _____ FAIL _____

- n. Auto Close Test: Use 2x2 or other device (not your fingers) to force Bellcrank open. The unit should respond to the un-commanded gate opening. Verify Gate shuts itself.

PASS _____ FAIL _____

- o. Turn Master Power off, open "Gate Power" and "Gate Control" circuit breakers.

With Gate adjusted for Dry Payload:

- p. Turn Master on, then "Gate Power" breaker, then "Gate Control" breaker. Verify both "Gate Fault" and "Gate Rock" warning lights illuminate and extinguish.

PASS _____ FAIL _____

- q. Select "Dry Gate" and move Gate Lever. Verify moderate force is required to open and close Gate and Main Display shows Gate opening.

PASS _____ FAIL _____

r. Simultaneously press "Alt" button and left knob of the Controller (placing Controller in simulated flight). Open and close the Gate Lever. Verify it takes little force to open and close the Gate.

PASS _____ FAIL _____

s. Select open and close with the "Gate Open/Gate Close" switch with hand on Gate Lever and verify the Gate attempts to follow switch but lever overrides.

PASS _____ FAIL _____

t. Turn Master Power off. Disconnect "Manual Disconnect" using brass spring pin and place Gate Lever in stow position.

u. Turn Master Power on and verify light in Proximity Switch is illuminated and GND light on Main Display is illuminated.

PASS _____ FAIL _____

v. Toggle the "Gate Open/Gate Close" switch and verify the Gate does not respond.

PASS _____ FAIL _____

w. Select "Gate Close", cycle "Cleanout" button and verify Gate follows.

PASS _____ FAIL _____

x. Rotate right outer knob to select 4000 "CUR" (current) load on the Controller. Press "ENT". Display shows "ACCEPT". Press "ENT". 4000 shows on "QTY" display.

y. Hold "Cleanout" button and verify "QTY" counts down but stops counting when "Cleanout" button is released.

PASS _____ FAIL _____

z. Select "Gate Open" and press "Cleanout". Rotate left knob to verify Gate opening on "Main Display" adjusts up and down when rotating the knob, also verify the rate of the decreasing "QTY" follows, more open is a faster rate.

PASS _____ FAIL _____

aa. Select "Gate Close", then simultaneously press "ALT" and left knob.

bb. Rotate left knob to select "TAR" (target) Gate setting of 1.00.

cc. Select "Gate Open" and verify upper line of Main Display follows to 1.00, indicating an 1.00" gate opening.

PASS _____ FAIL _____

dd. Select "Gate Close", turn Master Power off.

4. Airspeed Test (Leak Check Pitot static system per manufactures procedure)

a. Turn Master Power on and "Dry Gate" selected, apply air pressure to pitot tube to cause an airspeed of 80 mph and verify "GND" light goes out.

PASS _____ FAIL _____

b. Remove air pressure from pitot tube and verify "GND" light comes back on.

PASS _____ FAIL _____

c. Turn Master Power OFF.

5.Hopper Valve Test

- a.With Master Power on and "Hopper Port" line disconnected for Controller, and 1 psi air applied to hopper side of the hopper valve, cycle "Liquid/Dry" switch and verify air flows through hopper valve in "Dry" and no flow in "Liquid".

PASS _____ FAIL _____

- b.Turn Master Power off. Reconnect "Hopper Port" line to Controller.

6.Hopper Pressure Test *

- a.With Master Power on. and "Dry Gate" selected Rotate right outer knob to select 4000 "CUR" (current) load on the Controller. Press "ENT". Display shows "ACCEPT". Press "ENT". 4000 shows on "QTY" display.

- b.Apply and maintain air pressure to pitot tube and "Hopper Port" line to cause an airspeed of 80 mph and verify "GND" light goes out.

PASS _____ FAIL _____

- c.Toggle "Gate Open/Gate Close" switch and verify "QTY" counts down.

PASS _____ FAIL _____

- d.Remove pressure from "Hopper Port" line while maintaining pressure on Pitot tube.

- e.Toggle "Gate Open/Gate Close" switch and verify "QTY" jumps to zero.

PASS _____ FAIL _____

- f.Turn Master Power Off.

7.GPS Test

- a.Verify GPS is connected to Gate Controller per Manufacture Drawings.

PASS _____ FAIL _____

- b.Turn Master Power on, verify GPS is selected in Gate Controller (press Menu, select Setup, select GPS)

- c.Power on GPS.

- d.Place GPS in simulation mode with a speed output of 160 MPH.

- e.Set Gate to "Dry Mode".

- f.Simultaneously press "ALT" and left knob to enter simulated flight.

- g.Press "Constant" button.

- h.Press "Speed" button, rotate right knob to select 150 MPH. Press "Enter", then press "Enter" again to accept.

- i.Rotate left knob to select "TAR" (target) gate opening of 1.00".

- j.Toggle "Gate Open/Gate Close" switch to "Open". Verify Gate opens to 1.025" or greater.

PASS _____ FAIL _____

- k.De-energize GPS. Verify Gate controller displays "GPS LINK" then "GPS FAIL".

PASS _____ FAIL _____

- l.Turn Master Power Off.

8.EMI RFI Test *

- a. With Master Power on the aircraft and all systems operating normally: Operate each aircraft system and equipment through a representative range of its functional envelope while qualitatively assessing EMI/RFI. Note any effects below.

•VHF Comm _____

•VOR/ILS _____

•DME _____

•GPS _____

• _____

• _____

PASS _____ FAIL _____

- b. Turn all power off.

Ground Test Date: _____

Performed By: _____