


Updating Hopper Gauge

1. Plug in updater to power to allow it to boot up
Once Powered on you should have a Green Power light
Unit is ready to Program once you have a flashing Green Stat light (take about 40 Sec)
2. Remove Reabe hopper gauge main display from aircraft.
3. Remove rubber boot over dim button and (4) Screws from back of unit.
4. Hold the unit by the sides of the Case and push on the Dim button to slide contents out of case.
5. Connect Adapter Cable to Hopper Gauge ISP Port

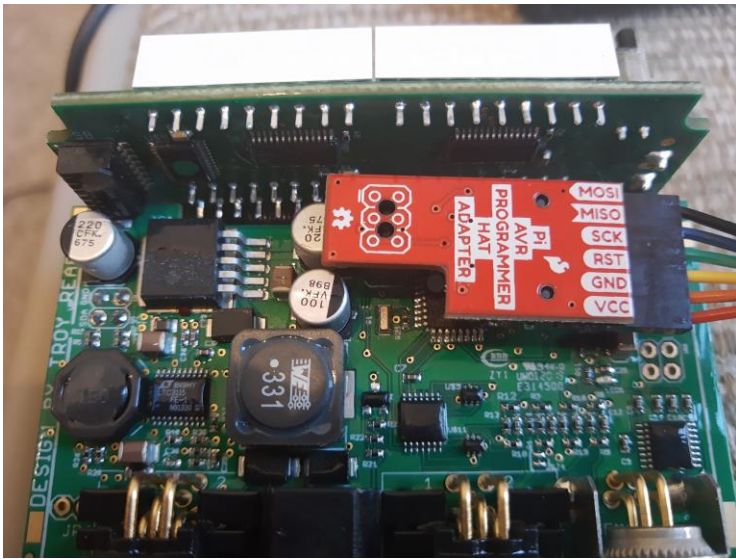

6. Connect Power cord or tester board to Reabe Hopper Gauge Main Display



7. Once Reabe Hopper Gauge Main Display is power up press the tap to program area of updater.
8. Once Upload is complete you should have Green Success lights in "Flash Hex" and "Lock Bits"
9. Remove Adapter cable and power cables from Reabe Hopper Gauge Main Display.
10. Reinsert Reabe Hopper Gauge Main Display contents into case. Watch for dim Button in front of case.
11. Reinstall 4 screws in back of case and Rubber boot over dim button.
12. Reinstall unit into aircraft.
13. Hold dim Button during unit power on to zero the boom pressure gauge.