


## Bending guidelines for Qty Probe

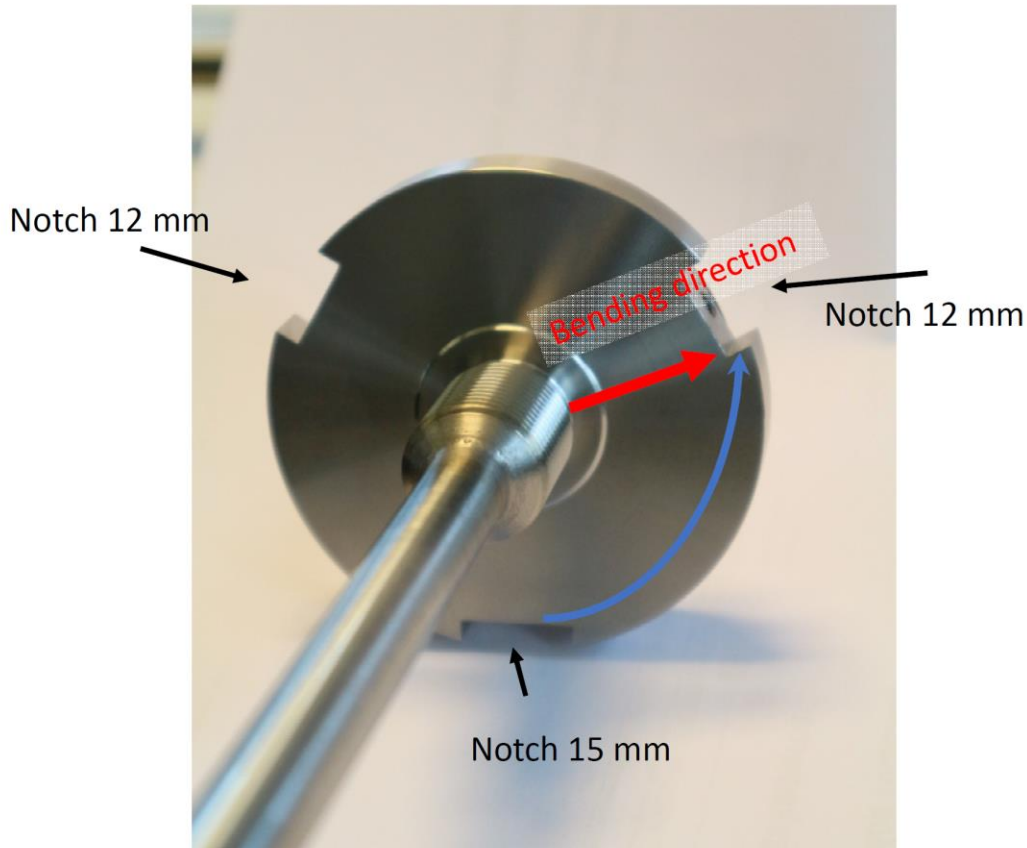

**Reference Orientation:**

15 mm notch in 6 o'clock position

**Acceptable Bending Direction:**

Towards the right (or bottom) edge of the 12 mm notch at the 2 o'clock position

**Minimum bend radius:** 15.75"

Start Bend at least 6" away from probe head.

